


DDD-1


DYNAMIC DIGITAL DRUMS OWNER'S MANUAL

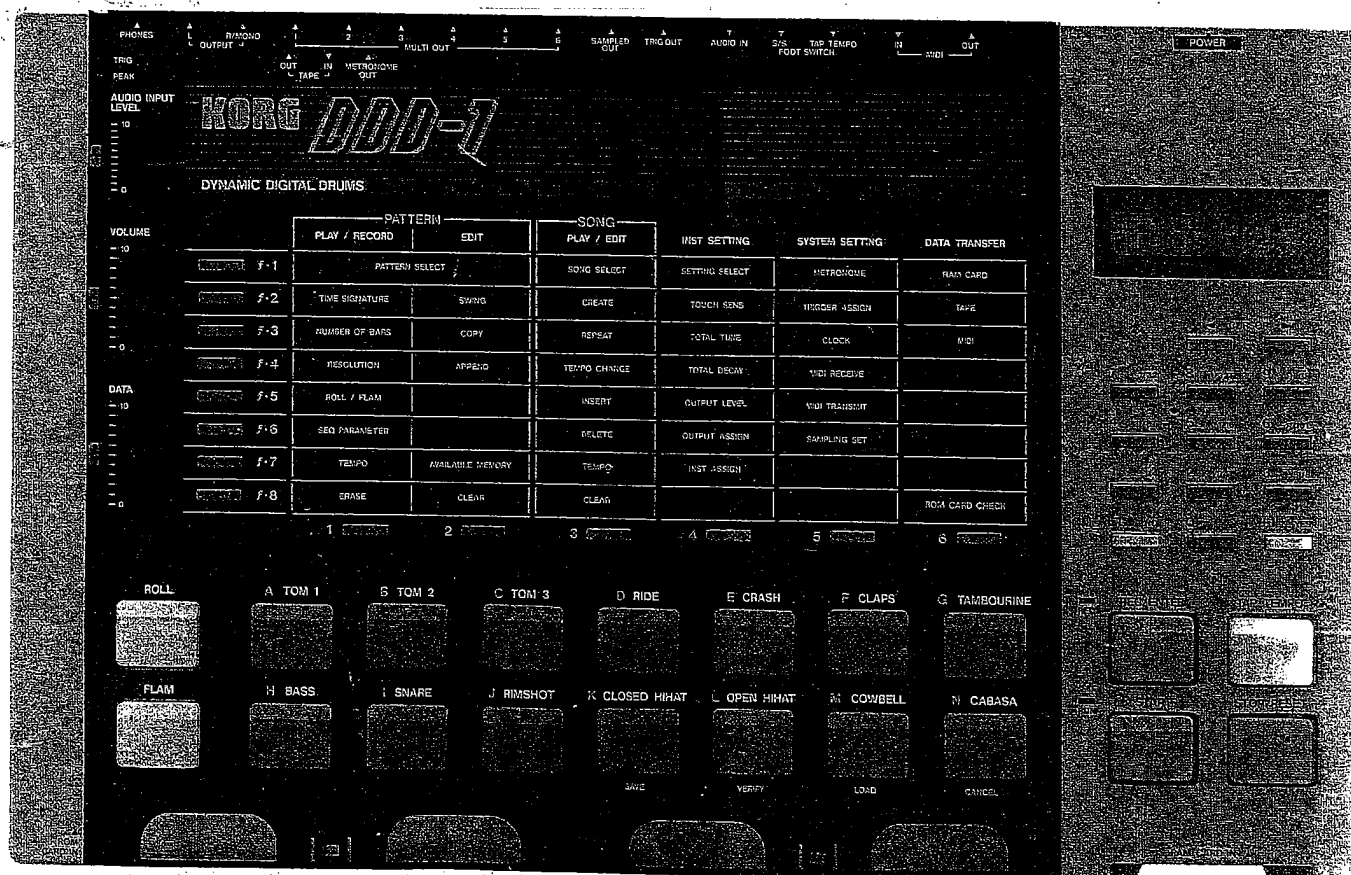

KORG®

DDD-1

***Congratulations and thank you for purchasing the Korg DDD-1.
To assure optimum performance and long term reliability please read this manual carefully.***

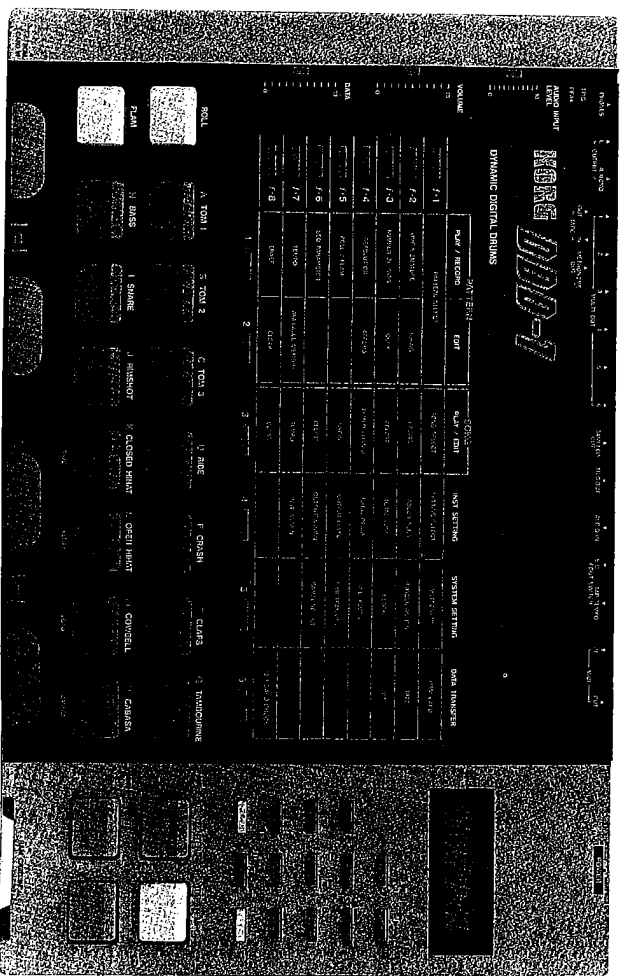

MAIN FEATURES OF THE DDD-1

1 The DDD-1 offers a full lineup of features which help provide realistic drum and percussion sounds. For example, the dynamics function lets you control output volume for each instrument sound according to the strength of instrument key touch. Each sound can be Tuned individually, as can Decay and Output Level. Instrument sounds can be freely assigned to individual keys via Instrument Assign, and each sound can be panned through one of 7 outputs via Output Assign. And a POLY mode is featured which lets you "layer" up to 12 notes from the same instrument.

2 The DDD-1 has a built-in PCM sound generator, for authentic instrument sounds. Up to 4 ROM cards can be used simultaneously, for a wide range of rhythm variation when used with the 18 built-in instrument sounds. Also, utilization of the optional Sampling Board gives you unlimited access to any external sounds, so you can create your own original sound sources.

3 Up to 100 PATTERNS, and 10 complete SONGS featuring 255 parts can be kept in the DDD-1 memory, via either Real Time or Step Recording. These two recording methods can be used together to create complex rhythms that aren't possible using one individually.

4 A 2-line, 16-character LCD display provides user-friendly operational instructions, so even complex operations are made easy.

5 DDD-1 Memory Data can be preserved via Tape Interface or on RAM Card, for unlimited rhythm data creation possibilities.

6 The DDD-1 features a MIDI terminal, so it can be used to control, or be controlled by other MIDI sequencers or drum machines. Not only that, but MIDI keyboards can be used to control the DDD-1, and even be used to write patterns on the DDD-1. DDD-1 data can be output as System Exclusive Messages, and Instrument Settings can be altered via Program Change messages for total convenience in MIDI communications.

IMPORTANT PRECAUTIONS

LOCATION

Do not use this unit for extended periods of time where it is exposed to:

- direct sunlight
- extreme of temperature or humidity
- sand or dust

POWER SUPPLY

- Use only with rated AC voltage. If you will be using this unit in an area having a different voltage, be sure to use a proper voltage converter.
- To help prevent noise and degraded sound quality, avoid using the same outlet as other equipment or branching off extension cords shared by other equipment.

INTERFERENCE

This unit uses microcomputer circuitry. Like all such devices, it is subject to interference from nearby electrical devices like fluorescent lamps, appliances with motors, and so on. If operation becomes erratic or unpredictable, or if there is no response when you press a button on the unit, then interference may be the cause. If this occurs, try turning off the power, then turning it back on again. This resets (initializes) the microcomputer.

HANDLE GENTLY!

Don't drop this unit or use more force than necessary to operate switches and keys.

CLEANING EXTERIOR SURFACES

Wipe the exterior lightly with a clean, dry soft cloth to remove dust and dirt. Never use strong solvents like benzine, paint thinner, rubbing compound flammable polishing agents.

KEEP THIS MANUAL

Keep this manual in a safe place for future reference.

MEMORY BACKUP BATTERY

This unit is equipped with a backup battery so that programmed data is retained in memory even when the unit's power is turned off. This battery should last over 5 years, however it is suggested that you change it after 5 years of service. Contact your service or sales representative for information on replacement.


CONTENTS

FEATURES & FUNCTION	6
1. Front Panel	6
2. Rear panel/Connections	8
BASIC OPERATION	10
1. DDD-1 Background knowledge	10
2. Pattern Selection & Playback	13
• PATTERN SELECT	13
3. Song Selection/Playback	16
• SONG SELECT	16
4. Manual Play	19
5. Tempo Setting/Change	20
• TEMPO	20
INSTRUMENT SETTING	22
1. Instrument Setting	22
2. Instrument Setting Actual Operation	28
• SETTING SELECT	28
• TOUCH SENS	29
• TOTAL TUNE	30
• OUTPUT DECAY	31
• OUTPUT LEVEL	32
• OUTPUT ASSIGN	33
• INST ASSIGN	34
HOW TO RECORD PATTERNS	36
1. Recording Patterns	36
2. Pattern Recording Operations	45
• TIME SIGNATURE	45
• NUMBER OF BARS	47
• RESOLUTION	49
• ROLL/FLOW	50
3. Real Time Recording	51
4. Step Recording	53
5. Recording Sequence Parameters	59
• SEQ PARAMETER	59
6. Erase	63
• ERASE	63
7. Editing of Patterns	65
8. Pattern Editing Actual Operations	68
• SWING	68
• COPY	69
• APPEND	71
• AVAILABLE MEMORY	72
• CLEAR	73
9. Pattern Names	74
SONG CREATION	76
1. Song Creation/Editing	76
2. Song Creation/Editing Actual Operations	80
• CREATE	80
• REPEAT	83
• TEMPO CHANGE	84
• INSERT	85
• DELETE	88
• CREATE	88
3. Song Names	90
SYSTEM SETTING	91
1. System Setting	91
2. System Setting Actual Operation	96
• METRONOME	96
• TRIGGER	98
• CLOCK	99
• MIDI RECEIVE	100
• MIDI TRANSMIT	103
• SAMPLING SET	105
DATA TRANSFER	109
1. Data Transfer	109
2. Data Transfer Actual Operation	110
• TAP CARD	110
• TAP	117
• MIDI	127
• ROM CARD CHECK	130
CONNECTION WITH OTHER DEVICES	131
1. Synchronization with other Drum Machines, Synthesizers, etc.	131
2. About Connecting the DDD-1 to Drum Pads, Synthesizers, etc.	136
MIDI IMPLEMENTATION	138
1. Transmitted Data	138
2. Recognized Receive Data	140
3. Using System Exclusive Messages	144
SYSTEM RESET	148
MAIN ERROR MESSAGE	148
SPECIFICATIONS & OPTIONS	149

FEATURES & FUNCTIONS

FEATURES & FUNCTION

1. Front Panel

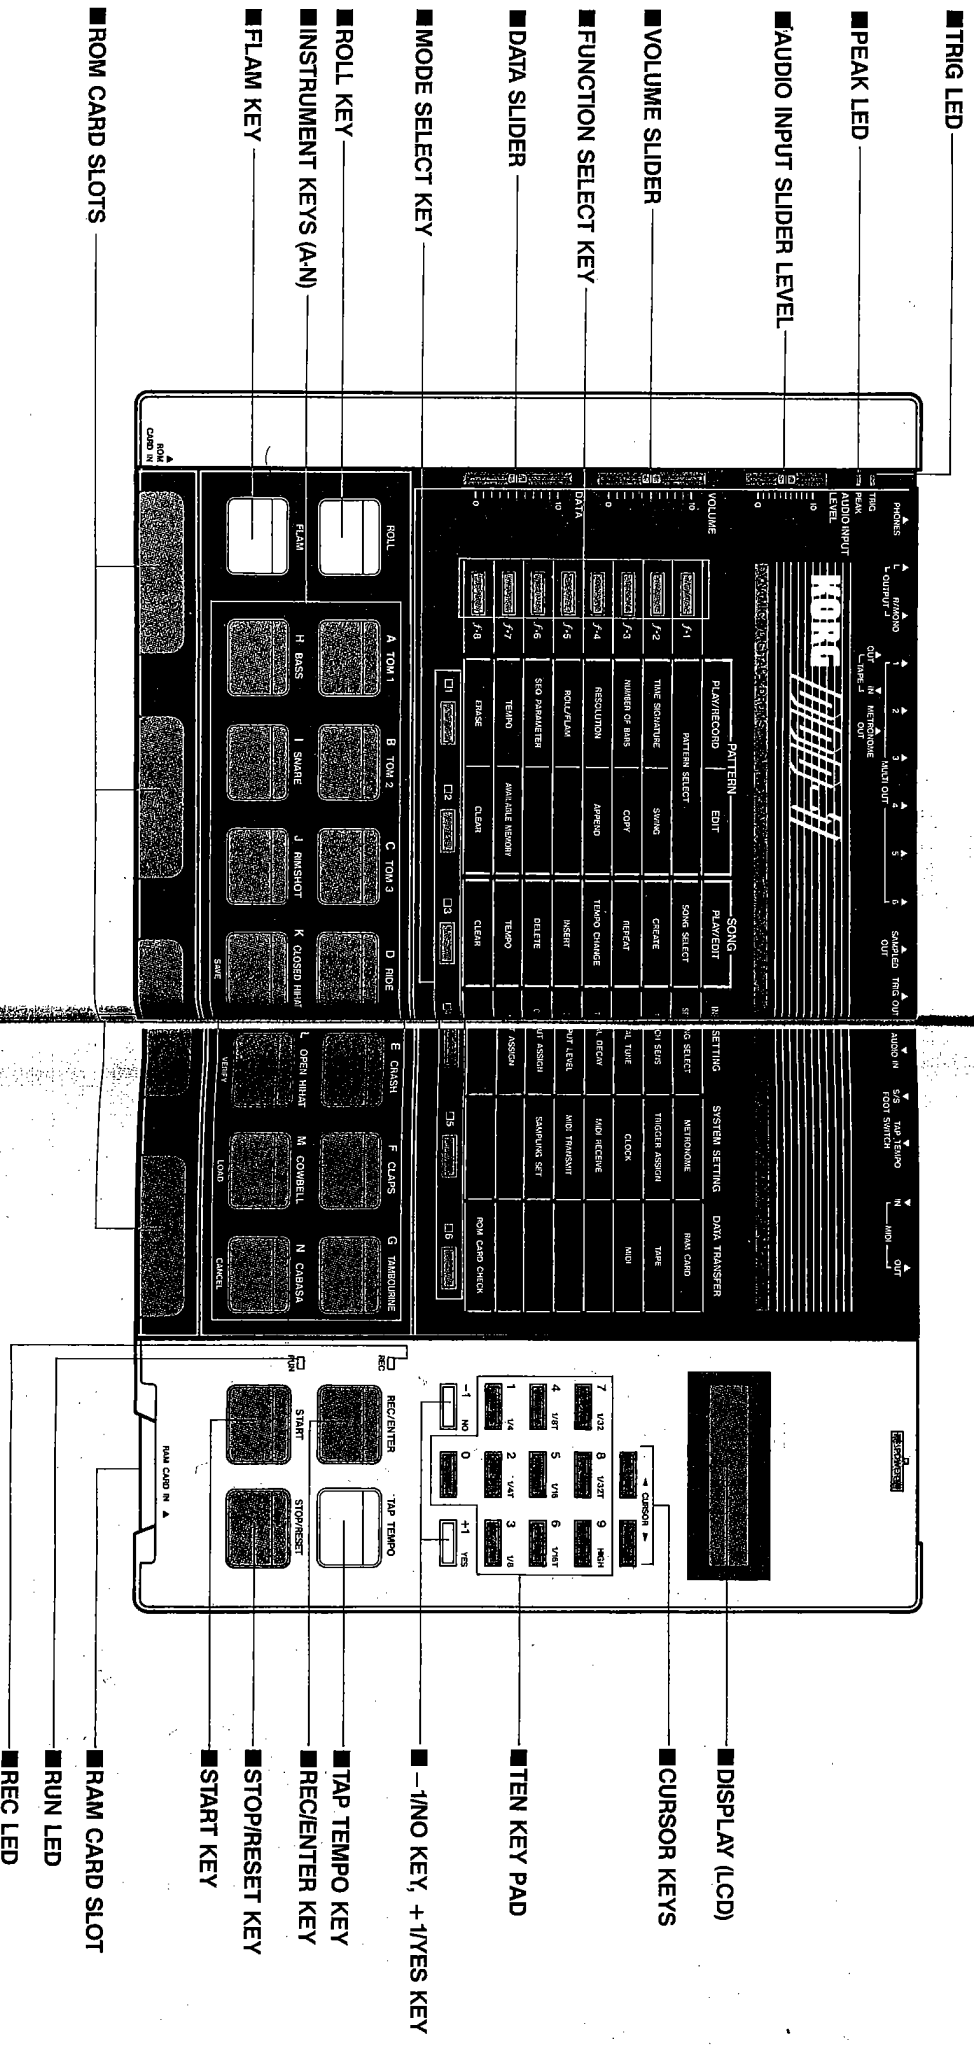


BASIC OPERATION

BASIC OPERATION

1. DDD-1 Background Knowledge

FUNCTION OF EACH MODE

The DDD-1 features six different modes, which are used for the functions listed below:

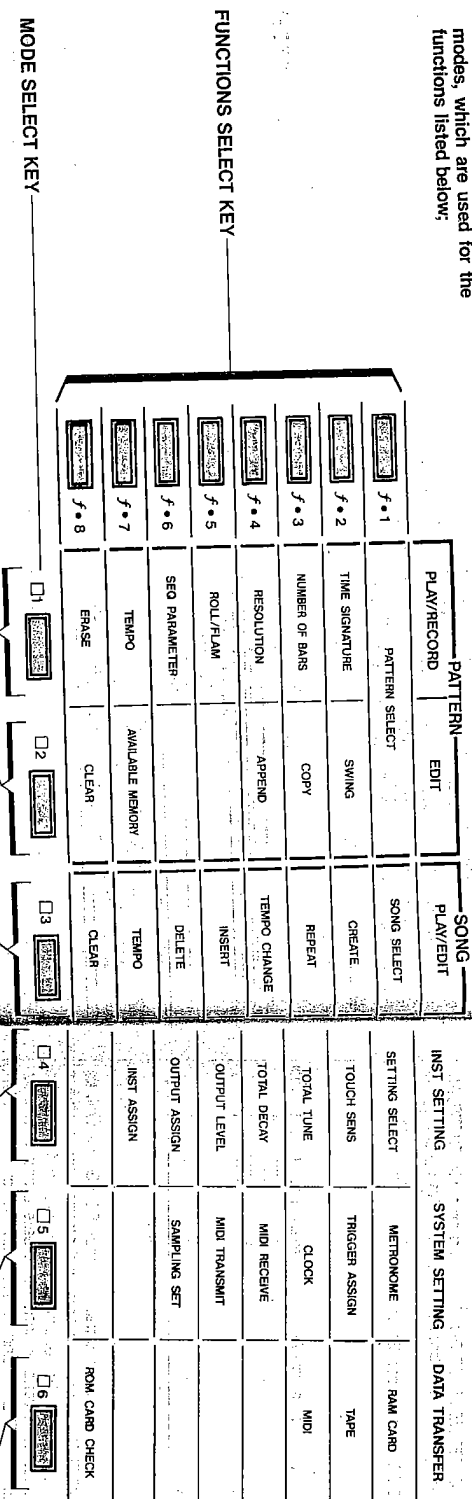

PATTERN PLAY/RECORD MODE

This mode is used for playback and recording PATTERNS. It is selected by pressing MODE SELECT KEY 1.

→ P.36

PATTERN EDIT MODE

This mode is used in editing PATTERNS. It is selected by pressing MODE SELECT KEY 2.

→ P.65

SONG PLAY/EDIT MODE

This mode is used in creating, editing and playing back songs. It is selected by pressing MODE SELECT KEY 3.

→ P.76

INSTRUMENT SETTING MODE

This mode is used in setting the DDD-1's INST KEY and instrument sounds. It is selected by pressing MODE SELECT KEY 4.

→ P.22

SYSTEM SETTING MODE

This mode is used in relation to DDD-1 MIDI settings, Clock, Sampling, etc. It is selected by pressing MODE SELECT KEY 5.

→ P.91

DATA TRANSFER MODE

This mode relates to data transmission and reception. It is selected by pressing MODE SELECT KEY 6.

→ P.109

* The FUNCTION SELECT KEYS and MODE SELECT KEYS are used in combination to select the various functions displayed on the FUNCTION MATRIX at the center of the operating panel. For example, to set the beat via the TIME SIGNATURE function, first press MODE KEY "1" specifying the PLAY/RECORD MODE, and then press the "f.2" FUNCTION SELECT KEY.

* When a MODE SELECT KEY is pressed, the LED immediately to the left of the key lights, and the FUNCTION SELECT KEY is set at "f.1".

PATTERN		SONG	
FUNCTION SELECT	MODE SELECT	FUNCTION SELECT	MODE SELECT
f.1	PLAY/RECORD	f.1	SONG SELECT
f.2	TIME SIGNATURE	f.2	CREATE
f.3	NUMBER OF BARS	f.3	REPEAT
f.4	RESOLUTION	f.4	TEMPO CHANGE
f.5	ROLL/FLAM	f.5	INSERT
f.6	SEQ. PARAMETER	f.6	DELETE
f.7	TEMPO	f.7	AVAILABLE MEMORY
f.8	ERASE	f.8	CLEAR

ABOUT PATTERNS & SONGS

Normally, drum performances in songs consist of combinations of basic rhythm patterns such as 8- or 16-beat patterns, fill-ins and breaks. Because of this, it's not necessary to program entire songs—simply the basic patterns, fill-ins and breaks that they are composed of.

The DDD-1 refers to these patterns, fill-ins and breaks as PATTERNS. PATTERNS are created via PATTERN EDIT MODE and PATTERN EDIT MODE. These patterns are tied together and made into a song via PLAY/RECORD MODE and PATTERN EDIT MODE.

The maximum number of PATTERNS and SONGS which the DDD-1 holds are listed below:


PATTERNS: Holds up to 100 patterns in memory. No.00 to 99. The length of each pattern can be set from 1 to 99 measures. The maximum no. of notes which can be written in a pattern is 249, for a total of 4400 notes in the memory.

Patient No.	No. of notes/Bar	No. of notes/2 Bars (up to 99 bars)
00	10	0
01	28	18
02	14	0
03	14	0
04	15	0
99	32	0
Total	Up to 4400 notes	

SONGS:
Holds up to 10 SONGs in memory, No.0 to 9.
Up to 255 PARTS* can be connected within each
SONG.

★ As shown in the diagram, various SONGS as well as PATTERNS can be stored and played back within a single SONG. For example, drum solos or fills can be mixed with various songs to create a single medley. Each PATTERN and SONG used to create a complete SONG is called a PART.

(For example, PATTERNS and SONGS such as those shown below can be put into memory.)

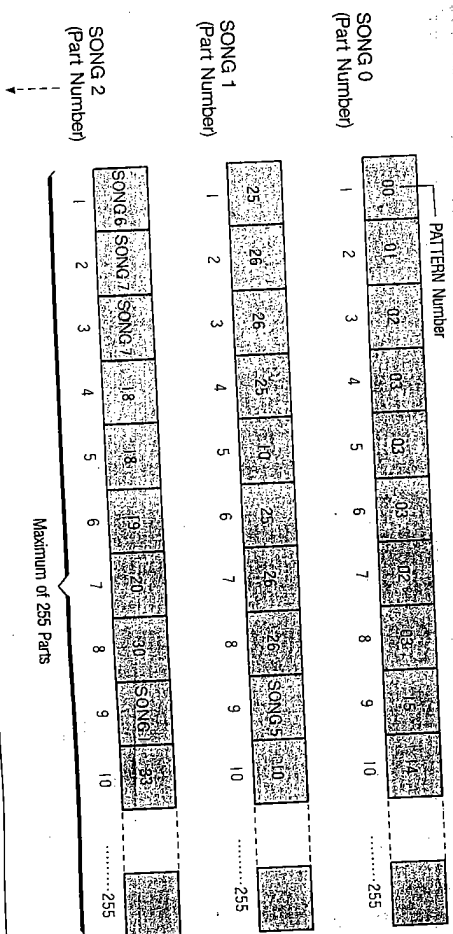


Follow the directions listed below to playback various patterns one at a time. (Demonstration Patterns 01~50 are set in the Pattern Numbers.)

LCD & LED DISPLAY



Turn DDD-1 power switch ON. A ROM card check is performed automatically, and playback is possible after approximately 6 seconds.



 
When the power switch is turned ON, the ROM card check described on p.130 is performed automatically.



① To play back a pattern, press MODE SELECT KEY "1" specifying the PATTERN PLAY/RECORD MODE.

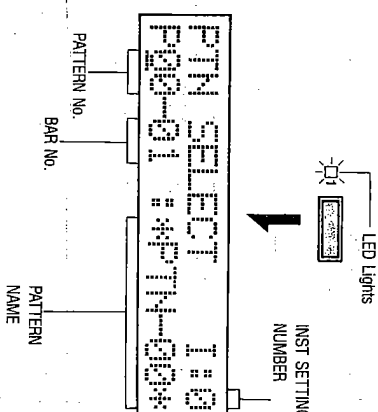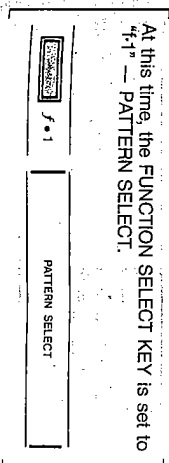
Press 

- ② Specify the Pattern Number which you desire to play back by pressing the ten key pad or +1/YES and -1/NO keys.




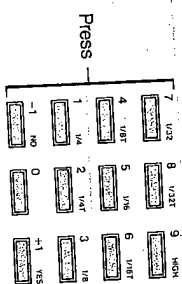


- Any measure can be selected as the starting point for PATTERNS made up of multiple measures. (When selection is not necessary, proceed to step ③.)

- ②-1 Move the CURSOR to measure display position on the LCD display, via the CURSOR KEY.




- ②-2 Specify the desired measure via the ten key pad or +1/YES and -1/NO keys.

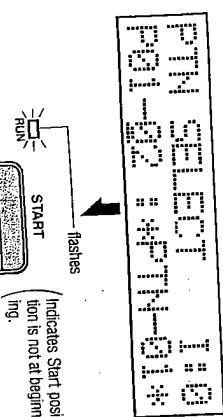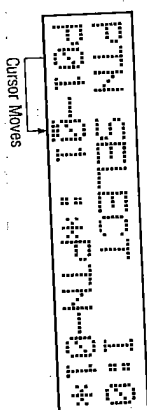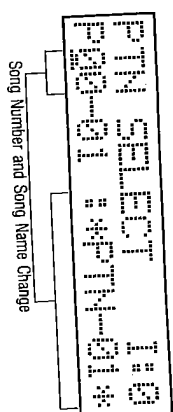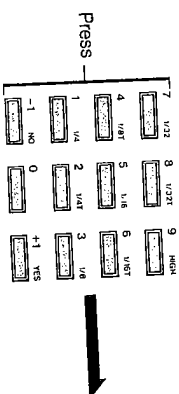


(Indicates Start position is not at beginning.)

 - ③ Press the START KEY.




- Selected PATTERN plays back repeatedly. Other PATTERNS may be selected during playback by following step ② procedures. Immediately after the PATTERN is changed, the selected Pattern Number is displayed. When the present PATTERN cycle is completed, the newly selected Pattern Name is displayed, and playback begins.

 - ④ Pressing the STOP/RESET KEY temporarily stops playback.







During playback Press

 - Playback can be continued by pressing the START KEY. This is called Continue Start, and playback begins from the point where it was stopped with the STOP/RESET KEY. Pressing the STOP/RESET KEY instead of the START KEY will RESET the unit (stop playback).



Press

  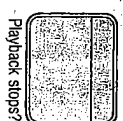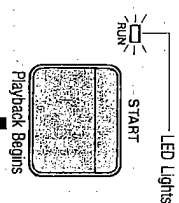

3. Song Selection/Playback

Follow the procedures listed below to play back an entire SONG. (The Song Number is preset at number 1-3.)

OPERATION


 
- ① When playing back a SONG, specify the SONG PLAY/EDIT MODE by pressing MODE SELECT KEY "3".

Press →

At this time, FUNCTION SELECT is set to "f.1" SONG SELECT.




LCD & LED DISPLAY

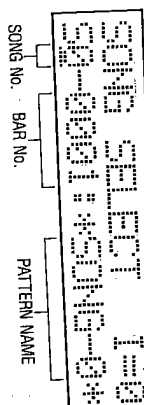


SONG No. BAR No. PATTERN NAME

- ② Specify the Song Number which you desire to play back by pressing the ten key pad or +1/YES and -1/NO keys.

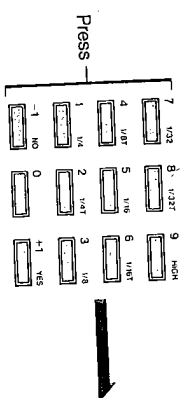


- Any measure can be selected as the playback starting point for SONGS. (When selection is not necessary, proceed to step ③.)

- ②-1 Move the CURSOR to measure display position on the LCD display, via the CURSOR KEY.

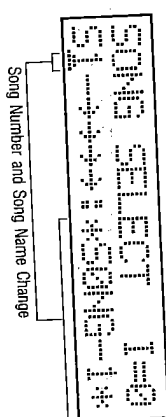


Song Number and Song Name Change

 


Cursor Moves

- ②-2 Specify the desired measure via the ten key pad or +1/YES and -1/NO keys.

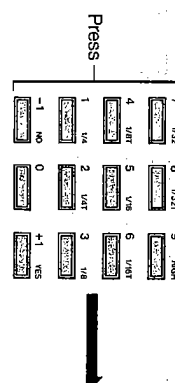


Press

 - ③ Press the START KEY.




- It is impossible to start SONGS wherein Song data have not been written.

 
- Other Song Numbers may be selected during playback by following step ② procedures. Immediately after the measure being played back is completed, playback of the newly selected SONG begins, if no PATTERNS have been written in the selected SONG, unit operation returns to step ②.
- When SONG playback is completed, unit operation returns to step ②.



 
(Indicates that specified Bar is being searched)




LED Lights (Indicates that Start position is not at beginning.)

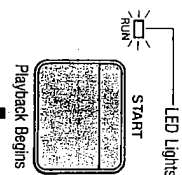

Playback Begins

 


Measure being played back displayed.

 

LED Goes Out

④ Pressing the STOP/RESET KEY temporarily stops playback.

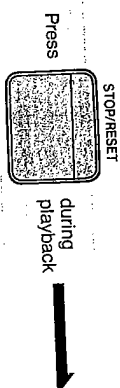

• Playback can be continued by pressing the START KEY. This is called Continue Start, and playback begins from the point where it was stopped with the STOP/RESET KEY. Pressing the STOP/RESET KEY instead of the START KEY will RESET the unit (stop playback).



LED Blinks (indicates that Start position is not at the beginning of part.)




LED Goes Out



SONG SELECT 1-0
S1-0001:SONG-1:
Measure returns to 0001

4. Manual Play

When any of the 14 INST. KEYS on the front panel are tapped, sound sources are output according to INST. SETTINGS, (as described on page 22.) MANUAL PLAY may be performed at any time — whether the unit is stopped or engaged in playback, except when in the DATA TRANSFER MODE.

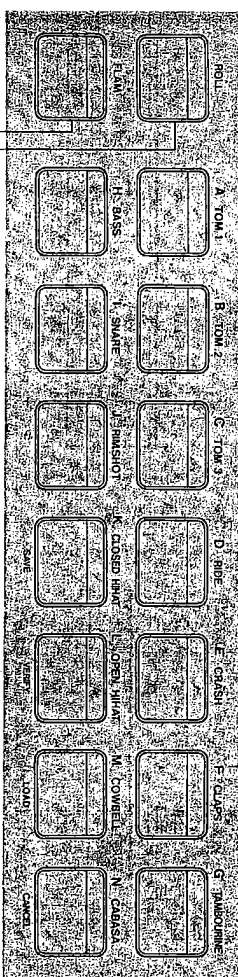

(Sound sources output according to INST SETTINGS when INST KEYS are tapped.)

(If an INST KEY is pressed while holding down the ROLL KEY during playback or recording, a roll effect is obtained for as long as the keys are held down, according to the timing set via ROLL RESOLUTION.)

(If an INST KEY is pressed while holding down the FLAM KEY, a flam effect is obtained, according to timing set via FLAM TIME.)

5. Tempo Setting/Change

OPERATION	LCD & LED DISPLAY
① If the "F" FUNCTION SELECT KEY is pressed in either the PATTERN PLAY/RECORD MODE or the SONG PLAY/EDIT MODE, Tempo can be set for the various modes. ● When setting tempo for pattern Playback or Recording, (in the PATTERN PLAY/RECORD MODE) Press  f·7 TEMPO → ■ When setting tempo for song playback; (in the SONG PLAY/EDIT MODE) Press  f·7 TEMPO → ② Specify desired tempo via the DATA SLIDER, ten key pad, or +/YES and -/NO keys. Setting Range: ♩ = 40 ~ 250 DATA 0 Sliders Press +1 YES or -1 NO → ③ This completes tempo setting procedures. When the START KEY is pressed, patterns or songs are played back at the set tempo. Press  →	TEMPO ♩= 120 P01-01 : *PTH-01* TEMPO ♩= 120 S1-0001 : *SONG-1* TEMPO ♩= P01-01 : *PTH-01* Tempo Changes → PTN PLAY 1:0 P01-01 : *PTH-01* Returns to PATTERN SELECT or SONG SELECT display

④ When the FUNCTION Key is pressed during playback, Tempo may be changed during playback by pressing the "F" FUNCTION KEY.

Press  **f·7** **TEMPO** →

Change tempo by following procedure ②.

TEMPO ♩=
P01-01 : *PTH-01*

Tempo Changes →

 
● When the DDD-1 is stopped (RUN LED is out) TEMPO set in the SONG PLAY/EDIT mode is memorized as the Initial Tempo. TEMPO altered during playback or Continue is not memorized as Initial Tempo.

● The initial SONG tempo takes precedence over tempo set for patterns within the song. Tempos set or changed during Pattern Playback are cancelled when the unit is set to the SONG MODE.

TAP TEMPO FUNCTION

When the TAP TEMPO KEY is tapped twice, the DDD-1 recognizes this as the speed of one quarter-note beat, and changes the tempo accordingly. Setting via TAP TEMPO can be performed at any time — whether the unit is stopped for engaged in playback.

★ Tempo is reset at ♩ = 40 or ♩ = 250 if it is "tapped" out of the ♩ = 40 ~ 250 range.

TAP TEMPO
Press  →

(measure time)

TAP TEMPO
Press again 

INSTRUMENT SETTING

1. Instrument Setting

 
 
 


Parameters for the 14 INST. KEYS on the front panel of DDD-1, such as Turning and Assignment, can be freely set according to the needs of each song, making PATTERN Recording speedy and convenient. Also, 6 different settings can be kept in memory.

■ SETTING SELECT

This function is used to select the 6 Inst Settings. Only one set of settings is put into memory for each SONG, so it's necessary to choose settings which will be used for the entire SONG when writing its PATTERNS.


■ TOUCH SENS

The DDD-1 features TOUCH SENSITIVITY, whereby sound volume is determined via the strength at which keys are tapped. TOUCH SENSITIVITY can be set individually for each INST KEY, and any of 10 different levels of volume change are possible — from 0 to 9.

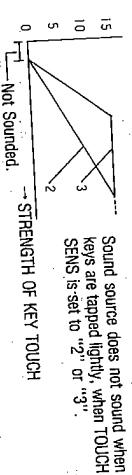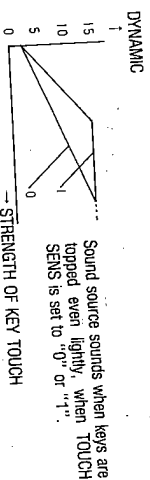


■ TOTAL TUNE

Tuning of each sound source is possible throughout a 128-step, 1-octave range (step 000 — 127). (1 step is equal to a change of approximately 9.45 cents.) Values set via TOTAL TUNE are related to SEQ TUNE used in PATTERN RECORDING.

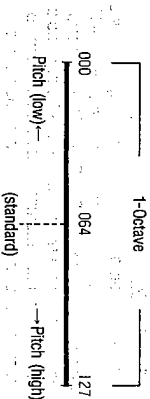


 ★ Of the built-in sound sources, CRASH, RIDE, OPEN HI-HAT, CLOSE HI-HAT, TAMBOURINE and CABASA have a standard pitch of "000". The qualities of these sounds are changed easily by alterations in pitch, so care should be taken when making settings.




■ OUTPUT LEVEL

While each INST. KEY features TOUCH SENSITIVITY, the OUTPUT level sets the maximum volume which each instrument produces when its INST. KEY is tapped at "full" strength. This can be set through a 16-step (00 ~ 15) range. If the OUTPUT LEVEL is set at "00" then no sound is produced. Values set via OUTPUT LEVEL are related to SEQ DYNAMICS used in PATTERN RECORDING.

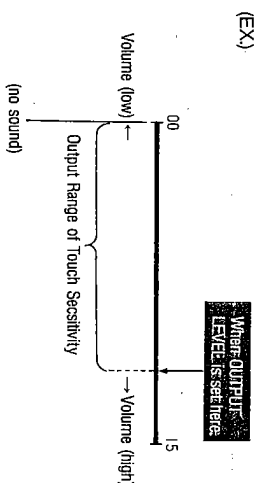

OUTPUT ASSIGN

As shown on the diagram, 7-point panning of sound sources is possible when using the L and R/MONO output jacks. Also, the OUTPUT ASSIGN function allows you to assign any of the 6 Multi-Output jacks to any sound source. Multiple instruments requiring the same effect processing can be run together.

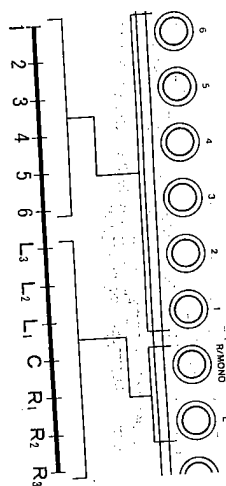

INST ASSIGN


Both Key Assign and Assign Modes are set via the INST ASSIGN function.

Key Assign


In this mode, built-in sound sources, ROM card sound sources and sounds sources created via sampling can be freely assigned to the 14 inst. keys on the front panel.

For example you may specify the same sound source for a number of INST keys and slightly change the TUNING, DECAY, OUTPUT ASSIGN, etc. This allows the creation of Melody Torns or a full drum set effect.

(EX) Setting to use TOMs as melody TOMs

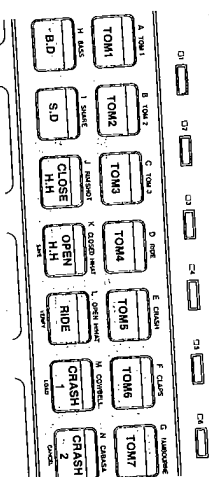

(EX) Setting for actual drum set sound

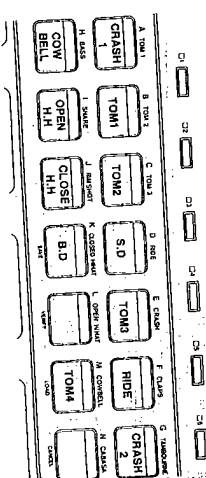


ASSIGN MODE

The DDD-1 is capable of outputting up to 12 sounds simultaneously. The ASSIGN MODE is used to determine how these 12 sounds are used. It contains 3 sub-modes — POLY, MONO and EXCLUSIVE.

POLY:

In the POLY MODE, inst. sound source are "layered". In other words, no matter how many times inst. keys are tapped, each sound is sounded until complete decay, without being cut off. 1 For example, when programming relatively "long" sounds such as cymbals, it is necessary to allow the sounds to build up, to avoid an unnatural sound. The POLY function is perfect for these "layering" effects. Also, when using this mode with other sound source, flanger or chorus effects can be obtained by the same sound source twice in a very quick time interval.


(POLY MODE)

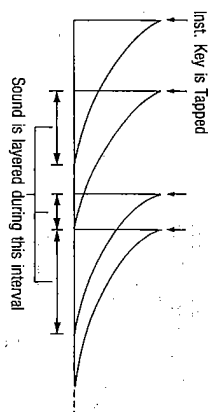

MONO:

When inst. keys are tapped in the MONO MODE, the previous sound is cut-off at that point, before full decay. This mode is used when the layered effect as in the POLY MODE is not necessary.


(MONO MODE)

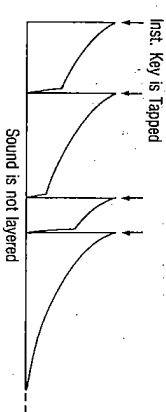

EXCLUSIVE:

Instruments which should not be sounded at the same time, such as OPEN HI-HAT and CLOSED HI-HAT, should be set to this mode. It also responds to CONGA sounds (mute, slap) etc. when using a ROM card.


(EXCLUSIVE MODE)

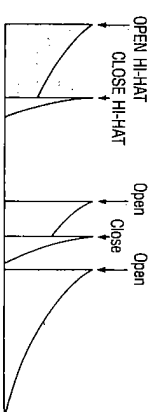


(ABOUT VOICE NUMBER & ASSIGN MODE DISPLAYS)

The DDD-1 allows total freedom in choosing sound sources — such as the built-in sound sources, ROM card sound sources, or sound sources created via sampling. Each sound source has a VOICE NUMBER, which is displayed when changing sound source via instrument Assign. The first letter in the VOICE NUMBER identifies the sound source, either the Internal sound sources, ROM card, or Sampling.


INTERNAL

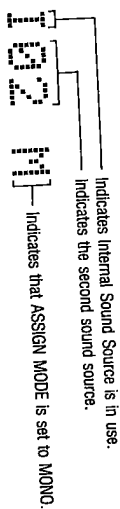

ROM CARD

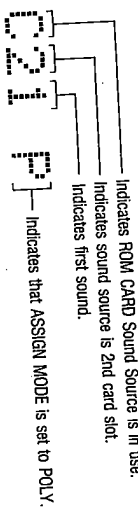

SAMPLING

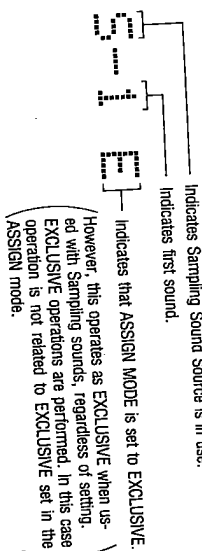


DDD-1 INTERNAL VOICES

Voice Number	Sound Source	Sound Source
I 01	TOM 1	HI TOM
I 02	TOM 2	MIDDLE TOM
I 03	TOM 3	LOW TOM
I 04	RIDE	RIDE CYMBAL
I 05	CRASH	CRASH CYMBAL
I 06	CLAPS	HAND CLAPS
I 07	TAMBOURINE	TAMBOURINE
I 08	BASS 1	BASS DRUM (HARD)
I 09	BASS 2	BASS DRUM (SOFT)
I 10	SNARE 1	SNARE DRUM
I 11	SNARE 2	SNARE DRUM (GATE SNARE)
I 12	RIM SHOT	RIM SHOT
I 13	CLOSED HI-HAT 1	CLOSED HI-HAT
I 14	CLOSED HI-HAT 2	CLOSED HI-HAT (HEAVY)
I 15	OPEN HI-HAT 1	OPEN HI-HAT
I 16	OPEN HI-HAT 2	OPEN HI-HAT (HEAVY)
I 17	COWBELL	COWBELL
I 18	CABASA	CABASA

2. Instrument Setting (Actual Operation)

NOTE:
For the following operations, DIP Switch number 4 "PROTECT" on the rear panel should be set to OFF.

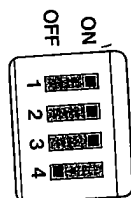

OPERATION

 
Specify INSTRUMENT SETTING, by pressing MODE SELECT KEY "4".

Press ☐ 4  



1. SETTING SELECT

① Specify SETTING SELECT, by pressing FUNCTION SELECT KEY "+1".

 f+1  SETTING SELECT 

Press
(Set to "SETTING SELECT" as soon as the INST SETTING mode is specified)

② When a SETTING NUMBER is specified via the ten key pad or +1/YES and -1/NO keys, the specified inst setting is called out, and alterations can be made.

Present Inst Setting

SET SELECT 1=0
P01-01 : *PTH-01*

Pattern Number which may be played back

 
Setting Number Changes

SET SELECT 1=1
P01-01 : *PTH-01*

• The START KEY is pressed at this point, the PATTERN is played back at the selected Inst Setting.

2. SETTING TOUCH SENSITIVITY

① Specify TOUCH SENS, by pressing FUNCTION SELECT KEY "+2".

 f+2  TOUCH SENS 

TOUCH SENS
P01-01 : *PTH-01*

② Press the INST. KEY for which TOUCH SENS is to be set.
(In this case, for Inst. Key "A").

Press  

Present TOUCH SENS is displayed

A TOM 1 S=0
P01-01 : *PTH-01*

③ Raise or lower Touch Sensitivity via the +1/YES and -1/NO keys.

DATA
+1 YES or -1 NO
Slides  Press  or  

 
TOUCH SENS Changes

A TOM 1 S=1
P01-01 : *PTH-01*

Repeat steps 2 and 3 to set TOTAL DECAY, OTHERS, KEYS.


③ SETTING TOTAL TUNE

- ① Specify TOTAL TUNE, by pressing FUNCTION SELECT KEY "3".




TOTAL TUNE
P01-01 : *PTN-01*

- ② Press the INST. KEY for which TOTAL TUNE is to be set.
(In this case, for Inst. Key "B")

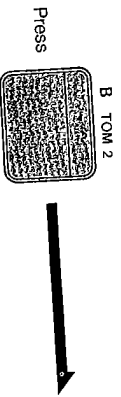

B= TOM 2 T=064
P01-01 : *PTN-01*

- ③ Adjust TOTAL TUNE via the DATA SLIDER or the +1/YES and -1/NO keys.

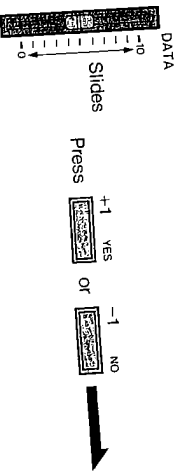


Tuning Value Changes
B= TOM 2 T=
P01-01 : *PTN-01*

Repeat steps ② and ③ to set TOTAL TUNE for other Inst. Keys


④ SETTING TOTAL DECAY

 - ① Specify TOTAL DECAY, by pressing FUNCTION SELECT KEY "4".




TOTAL DECAY
P01-01 : *PTN-01*

- ② Press the INST. KEY for which TOTAL DECAY is to be set.
(In this case, for Inst. Key "C")

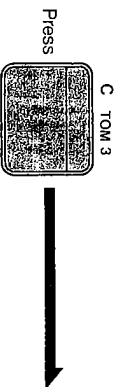

C= TOM 3 D=15
P01-01 : *PTN-01*

- ③ Adjust TOTAL DECAY via the DATA SLIDER or the +1/YES and -1/NO keys.

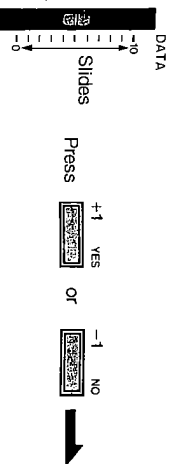

Decay Value Changes
C= TOM 3 D=
P01-01 : *PTN-01*

 
Repeat steps ② and ③ to set TOUCH SENS for other Inst. Keys

INSTRUMENT SETTING

INSTRUMENT SETTING

5 SETTING OUTPUT LEVEL

① Specify OUTPUT LEVEL, by pressing FUNCTION SELECT KEY "f.5".




OUTPUT LEVEL
P01-01 : *PTN-01*

② Press the INST. KEY for which OUTPUT LEVEL is to be set.
(In this case, for Inst. Key "D").



D= RIDE L=15
P01-01 : *PTN-01*

③ Adjust OUTPUT LEVEL via the DATA SLIDER or the +1/YES and -1/NO keys.

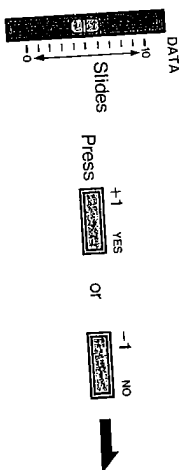


OUTPUT LEVEL Changes

D= RIDE L=15
P01-01 : *PTN-01*

Repeat procedures ①, ②, and ③ to set OUTPUT LEVEL for each Inst. Key.


6 SETTING OUTPUT ASSIGN

 ① Specify OUTPUT ASSIGN, by pressing FUNCTION SELECT KEY "f.6".




OUTPUT ASSIGN
P01-01 : *PTN-01*

② Press the INST. KEY for which OUTPUT ASSIGN is to be set.
(In this case, for Inst. Key "E").

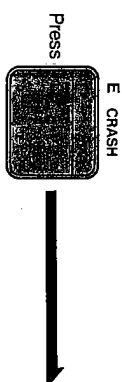

E= CRASH O=R3
P01-01 : *PTN-01*

③ Select the desired Output Jack via the DATA SLIDER or the +1/YES and -1/NO keys.

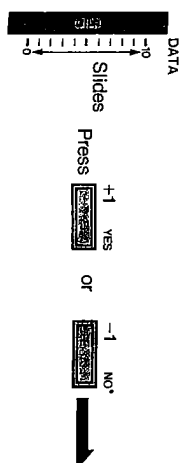

Output Changes

E= CRASH O=R3
P01-01 : *PTN-01*

(L,R/MONO) R₁ ↔ R₂ ↔ R₃ ↔ C ↔ L₁ ↔ L₂ ↔ L₃ ↔
(Multi-Output) 1 ↔ 2 ↔ 3 ↔ 4 ↔ 5 ↔ 6
Changes in this pattern:

Repeat steps ①, ②, and ③ to set OUTPUT ASSIGN for each Inst. Key.

7 SETTING INST ASSIGN

① Specify INST ASSIGN, by pressing FUNCTION SELECT KEY "F".




INST ASSIGN
P01-01 : *PTN-01*

② Press the INST. KEY for which Inst. Sound is to be assigned.
(In this case, for Inst. Key "F")



Instrument Key Voice Number
Instrument Name Assign Mode
F= CLAPS 106 M
P01-01 : *PTN-01*

③ Select the desired Instrument Sound via the DATA SLIDER or the +1/YES and -1/NO keys.

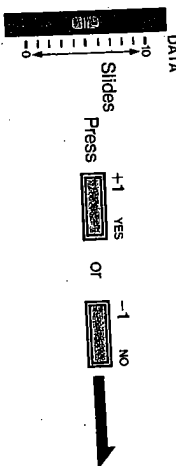

Sound Source, Voice Number and ASSIGN MODE change
F= P01-01 : *PTN-01*

When the keys are pressed, Instrument Sounds change in the pattern shown below:




- When inserting or removing ROM cards after power is turned ON, perform the ROM card check described on page 130. ROM card contents are displayed in the ROM Card Area when the DDD-1 recognizes a ROM card.

④ Move the CURSOR for the ASSIGN MODE display position on the LCD.



F= CLAPS 106 M
P01-01 : *PTN-01*

⑤ Pressing the +1/YES or -1/NO keys changes the mode to POLY, MONO or EXCLUSIVE.

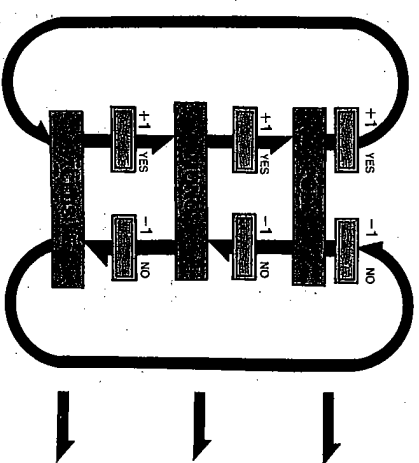

F= CLAPS 106 E
P01-01 : *PTN-01*

F= CLAPS 106 M
P01-01 : *PTN-01*

F= CLAPS 106 E
P01-01 : *PTN-01*

Repeat steps ② through ⑤ to set Sound sources for other Inst. keys.

NOTE
TOUCH SENS, TUNING, DECAY, OUTPUT LEVEL and OUTPUT ASSIGN are set for each Inst. Key. Therefore, these settings affect sound source chosen for individual keys via INST ASSIGN.

HOW TO RECORD PATTERNS

1. Recording Patterns

The following procedures describe how to create PATTERNS — the basic elements which make up SONGS. There are two different recording methods — Real Time Recording and Step Recording. Patterns are made using either one, or both of these recording methods.

- **Real Time Recording** Real Time Recording, you when recording with the DDD-1 metronome sound, and record patterns, tapping the instrument keys as you would play a drum kit.

- **Step Recording** When recording via Step Recording, you program patterns one step at a time through key operation. The DDD-1 features the following functions which relate to PATTERNS.

■ TIME SIGNATURE

This parameter sets the meter. One meter setting is possible for each PATTERN, so multiple rhythms can be written in SONGS. The chart shown at the right illustrates the range wherein meter may be set.

$\frac{1}{4}$	—	$\frac{8}{4}$
$\frac{1}{8}$	—	$\frac{16}{8}$
$\frac{1}{16}$	—	$\frac{32}{16}$
$\frac{1}{32}$	—	$\frac{64}{32}$

 
■ NUMBER OF BARS

This is set according to the number of measures contained in a single PATTERN. As shown below, when a phrase cannot be written as a single measure in the selected Time Signature, the NUMBER OF BARS can be set higher between 1 and 99. Measures can be altered, even though PATTERNS have already been written. Measures are added or deleted as shown at the right.

(EX) 2 Measure Pattern extended to 4



2 Measure Pattern shortened to 1



(EX) Examples of a 1-measure Pattern and a 2-measure Pattern.

$\frac{4}{4}$ 1-measure Pattern

$\frac{4}{4}$ 2-measure Pattern
or
 $\frac{8}{8}$ 1-measure Pattern

RESOLUTION


When writing rhythms with the DDD-1, it is necessary to set resolution. This is the value of the smallest note in a PATTERN. Setting the resolution low cuts down on operations when doing Step Recording, allows correction during Real Time Recording, however it becomes impossible to write notes, rests or ties of a higher degree of fineness (resolution). For example, when writing basic 8beat rhythm, $\frac{1}{8}$ is selected. The finest note which can be written is — an eight note.

On the DDD-1, you have a choice of 9 resolution settings, from $\frac{1}{8}$ (low) to $\frac{1}{2}$ (high). Your choice will depend on the complexity of the rhythm you intend to write.

The relationship between resolution and the finest note in a beat is illustrated in the chart below.

★ A "T" mark indicates resolution including a triplet —
EX: $\frac{1}{4}$ T


(RESOLUTION)

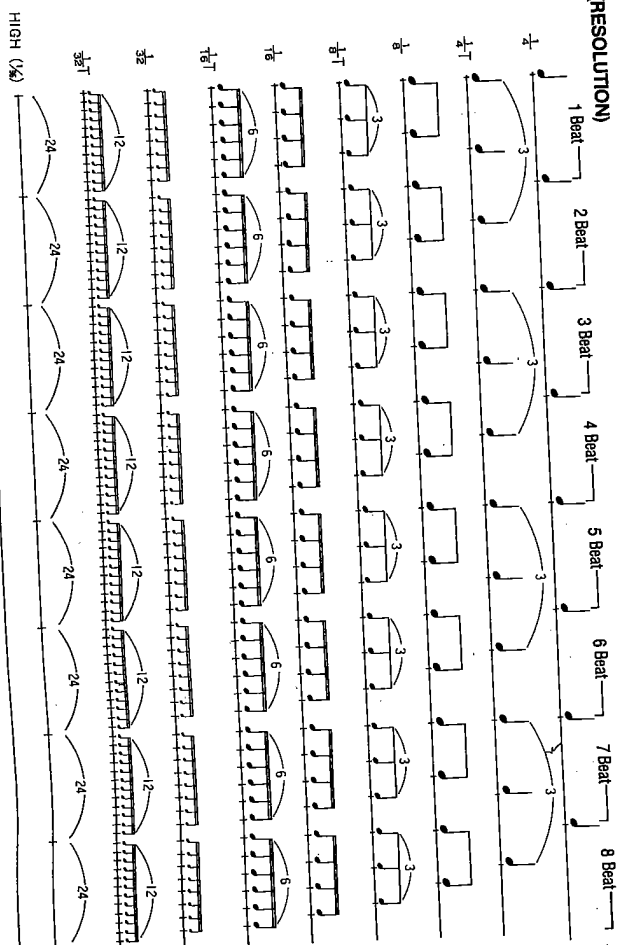

• About Real Time Recording Resolution (Correction Function)

When recording in Real Time with a fine resolution setting, it sometimes becomes difficult to play in exact sequence with the metronome, causing time lags. In such cases, setting resolution to a coarser level in advance causes automatic correction of this timing.

(EX) Resolution set to $\frac{1}{8}$

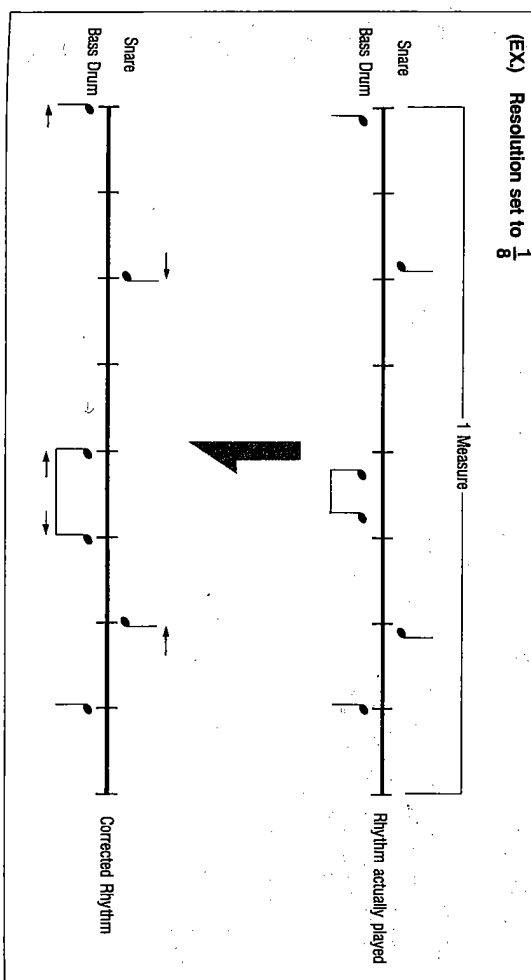

★ Resolution may be changed when the DDD-1 is stopped, so various resolutions may be utilized in a single PATTERN.

■ ROLL/FLAM

● ROLL

This function sets the ROLL effect obtained when the ROLL KEY on the front panel is pressed. This sets ROLL RESOLUTION, or in other words the number of Roll strokes per beat.


This resolution may be set at any of the 8 setting levels: $\frac{1}{8}$, $\frac{1}{4}$, $\frac{1}{2}$, $\frac{3}{4}$, 1 , $1\frac{1}{2}$, 2 , 3 . The Depressed Instrument Keys are rolled as long as the ROLL KEY is held down according to the preset ROLL RESOLUTION.

● FLAM

This function sets the FLAM effect obtained when the FLAM KEY on the front panel is pressed. This sets the timing between sounding of the first and second sound in a FLAM. Timing is set between 0 and 9, in increments of 10msec. Separate values may be set for each pattern.

NOTE: ROLL RESOLUTION cannot be set finer than ROLL RESOLUTION, for any given phrase. FLAM RESOLUTION is not related to RESOLUTION, and may be set at any point within the 0 — 9 range. Flam writing is possible.

(EX) ROLL Resolution set at $\frac{1}{16}$

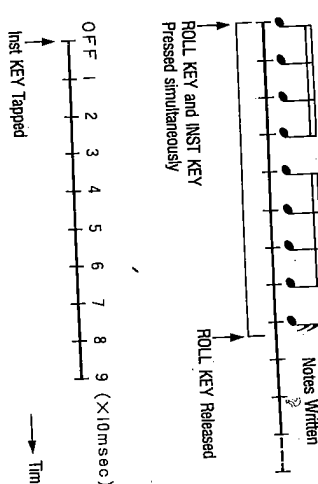

■ SEQ PARAMETERS

These three parameters allow playback while changing TOTAL TUNE, TOTAL DECAY and OUTPUT LEVEL set at INST SETTING.


● SEQ TUNE

This parameter allows alteration of the TOTAL TUNE setting (0-30).

This can be made at the playback stage, after songs are written. In other words, even though a certain instrument sound has been assigned to an instrument key, this sound can be altered by changing its pitch.


The degree of change available via SEQ TUNE depends on the value which TOTAL TUNE is set at initially. This can be set in 100-cent, 1-step increments, within a range of ± 12 steps. However, pitches which exceed the TOTAL TUNE range are not sounded. The relationship between TOTAL TUNE and SEQ TUNE is shown below:

(EX) SEQ TUNE

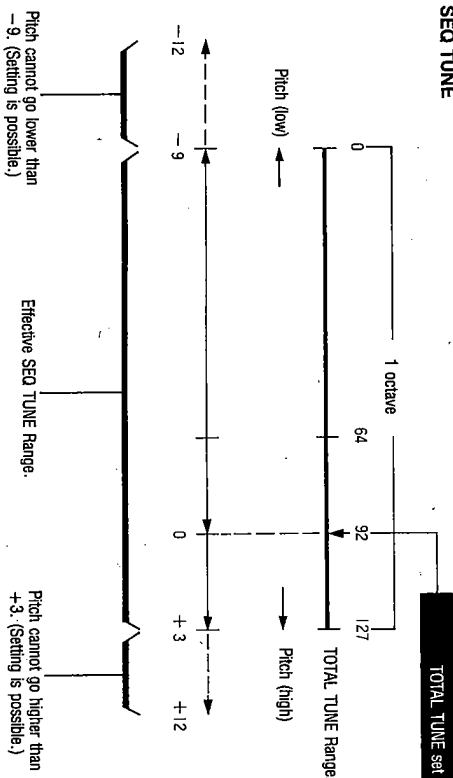

* When the optional Sampling Board is used, Sampled sounds may be set throughout a 2-octave, 128-step range.

(EX)

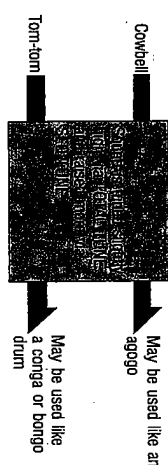


HOW TO RECORD PATTERNS

HOW TO RECORD PATTERNS


• SEQ DECAY

This parameter allows alteration the length of each sound set via TOTAL DECAY (p. 31), with the maximum value remaining at that set via TOTAL DECAY. In other words, this length may be changed even though it is already "set," for each instrument key.

(EX)

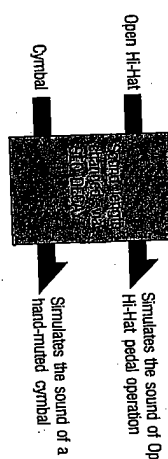

Both TOTAL DECAY and SEQ DECAY have 16-step setting ranges (0-15), which are interrelated as shown below:

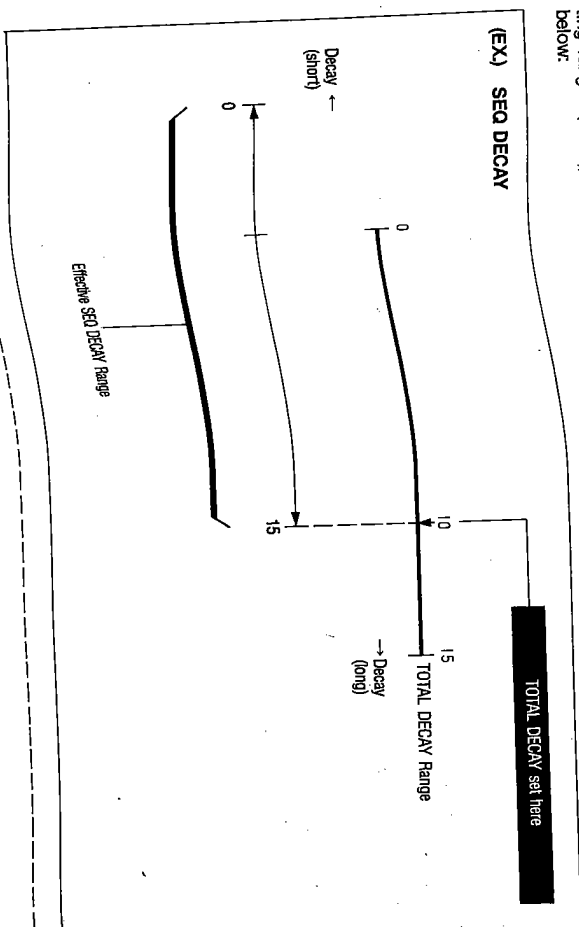


NOTE: Short sounds such as rim shots or closed hi-hat sounds cannot be shortened by SEQ DECAY over a certain point.

• SEQ DYNAMICS

This parameter allows alteration of the maximum volume which each instrument key produces when tapped at "full" strength, with the value set at OUTPUT LEVEL (p. 32) remaining the maximum value. Dynamics are registered in the DDD-1 memory when patterns are written however this parameter always editing of thing dynamics.

Both OUTPUT LEVEL and SEQ DYNAMICS have 16-step setting ranges (0-15), which are interrelated as shown below:

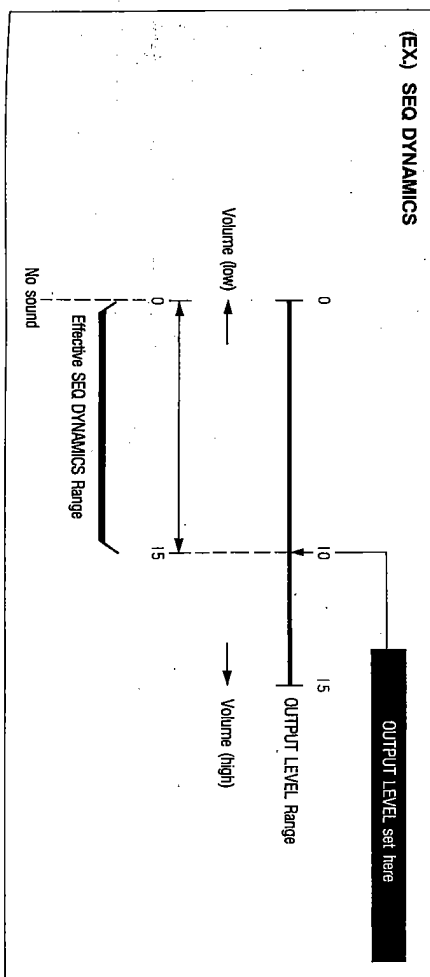

Mute Function:

Sound source sound can be stopped when Sequence Dynamics are set to "0". This allows "MUTED" playback of certain sounds during recording. This can be used to cut off sound cleanly, when longer sounds such as cymbals are written in program.

TEMPO

Refer to page 20. — SETTING/CHANGING TEMPO

ERASE
This function allows you to erase incorrect or unnecessary instrument sounds. There are three different ways to erase, a) Erasure of a specified instrument for the entire song, b) Erasure of a specified section of an instrument's program, or c) Erasure of a single beat for a specified instrument.


(Examples of ERASE)
Erasure of the entire Bass Drum track (playback stopped)



Erasure of an unnecessary section of the Bass Drum track (Erased during Real Time recording)




Erasure of an unnecessary beat in the Bass Drum track (Erased during Step recording)

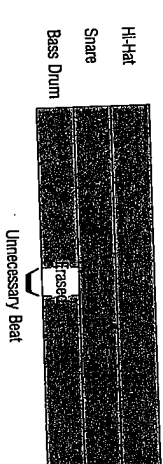

2. Pattern Recording Operations

The following describes actual operations used in recording PATTERNS.

NOTE:
DIP Switch number 4 on the rear panel should be set to OFF when performing actual Pattern Recording, Sequence Parameter Recording, Erase, and Pattern Editing.

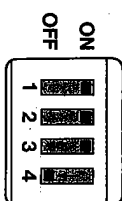

① Specify PATTERN RECORDING, by pressing MODE SELECT KEY "1" PATTERN PLAY/RECORD MODE.


Press ☐



② Specify PATTERN SELECT, by pressing FUNCTION SELECT KEY "1".

Press

(Set at PATTERN SELECT when PATTERN PLAY/RECORD MODE is specified.)

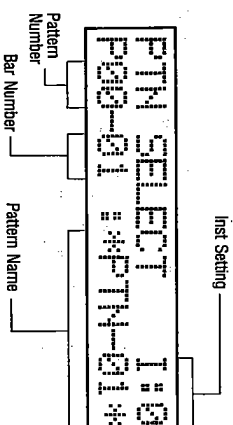

③ Select the PATTERN Number which you are going to use, via the ten key pad or the + /YES and - /NO keys.

(There are no demonstration patterns contained in PATTERN Numbers - 00, 51 through 99. Use any of these numbers. When you wish to use a Pattern Number which already contains data, perform PATTERN CLEAR operations, described on page 73, after preserving data on a RAM card or via tape interface.)

HOW TO RECORD PATTERNS

HOW TO RECORD PATTERNS

1 SETTING TIME SIGNATURE

- ① Specify TIME SIGNATURE, by pressing FUNCTION SELECT KEY "f.2".

Press  TIME SIGNATURE 


NOTE:
If a PATTERN has already been written, the CURSOR is not displayed, so changing meter is impossible. Meter is displayed in this way.

TIME SIGNATURE
PTN01: 04/4

Meter Displayed 

For 3/4 Meter — 03/4
For 12/8 Meter — 12/8

- ② Specify the numerator (beats per measure) via ten key pad or +1/YES and -1/NO keys.

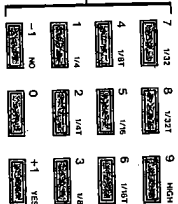Press 

(Input of numerator is possible when unit is set to) TIME SIGNATURE.

TIME SIGNATURE
PTN01: 03/4

Numerator Changes 


- ③ Move the CURSOR to the denominator side by pressing the CURSOR KEY.

Press  

TIME SIGNATURE
PTN01: 03/4

Cursor Moves 

- ④ Specify the denominator via the ten key pad or +1/YES and -1/NO keys.

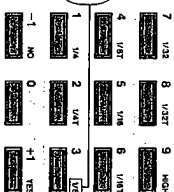Press 

TIME SIGNATURE
PTN01: 03/2

Denominator Changes 

2 SETTING NUMBER OF BARS

- ① Specify NUMBER OF BARS, by pressing FUNCTION SELECT KEY "f.3".


Press  NUMBER OF BARS 

NUMBER OF BARS
PTN01: BPR02

NUMBER OF BARS already written is displayed

* It is possible to change the number of bars which have already been written.


② Specify the NUMBER OF BARS via the ten key pad or +1/YES and -1/NO keys.

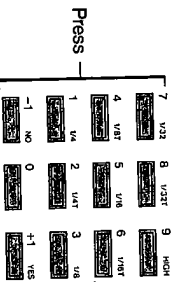

Increasing Number of Bars.
NUMBER OF BARS
PTN01: BAR04
Bars are added and display appears as shown above.

Decreasing Number of Bars.
Sure(Y/N)?
PTN01: BAR01
Display is as shown - complete procedure ③.

③ Replay to the "Sure?" inquiry by pressing the YES (+1/YES) key or NO (-1/NO) key.

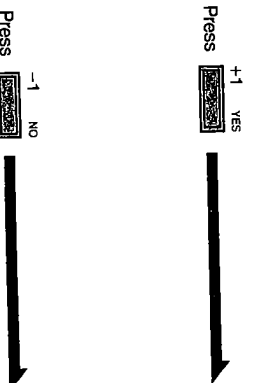


NUMBER OF BARS
PTN01: BAR01
Deletion of Bars carried out.

NUMBER OF BARS
PTN01: BAR04
Deletion command cancelled, display returns to ①.


③ SETTING RESOLUTION

 ① Specify RESOLUTION, by pressing FUNCTION SELECT KEY "4".



RESOLUTION
1/16
Present Resolution displayed


② Set RESOLUTION via the ten key pad or +1/YES and -1/NO keys.

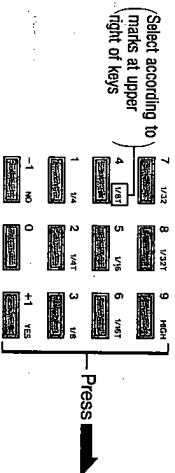

RESOLUTION
1/8
Resolution Changes

4. SETTING ROLL/FLAM

 - Specify ROLL/FLAM, by pressing FUNCTION SELECT KEY "f5".



Present ROLL RESOLUTION Displayed

Present FLAM TIME Displayed

ROLL : 1/16
FLAM : PTH01 = 3

- Set ROLL RESOLUTION via the ten key pad or +/- YES and -/NO keys.

ROLL RESOLUTION Changes

ROLL : 1/32
FLAM : PTH01 = 3

(Setting of ROLL RESOLUTION is possible when unit is set to ROLL/FLAM.)


- Next, set the FLAM time. Move the CURSOR by pressing the CURSOR KEY.



Cursor Moves

ROLL : 1/32
FLAM : PTH01 = 2

- Set FLAM TIME via the ten key pad or +/-YES and -/NO keys.

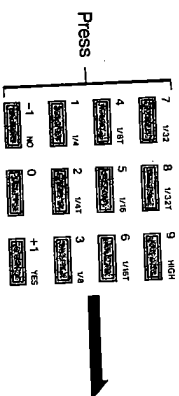

ROLL : 1/32
FLAM : PTH01 = 4

FLAM TIME Changes

3. Real Time Recording

This recording method allows you to tap out patterns in time with the DDD-1 metronome sound, much like you would play a drum kit.


OPERATION

- After completing Section 2 — PATTERN RECORDING — procedures, set METRONOME BEAT (p. 96) and INSTRUMENT SETTINGS (p. 22).

(REAL TIME RECORDING depends on METRONOME BEAT, so it is important to confirm setting before beginning recording procedures.)

- Press the START KEY while holding down the REC/ENTER KEY.

Hold down

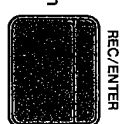

1

and press



LED Lights



LED Lights

 


LED Lights

REAL RECORD 1:0
P01-01 : *PTH-01*

- With this operation, the Metronome Sound starts, and REAL TIME RECORDING becomes possible.

- Adjust Metronome volume via the DATA SLIDER.




Slides

④ PATTERNS may now be written by tapping the INST. KEYS along with the Metronome Sound.

• Rhythm patterns featuring ROLL and FLAM effects can be written by tapping INST. KEYS while holding down the ROLL or FLAM keys.

If a mistake is made in writing, refer to the ERASE procedures described on page 62. When recording Sequence Patterns, refer to page 69.

 ⑤ REAL TIME RECORDING can be stopped by pressing the STOP/RESET KEY.






• To write a PATTERN for another instrument, repeat procedures from step ②.

(In this case, the previous STOP command is cancelled, and REAL TIME RECORDING starts.)

• STEP RECORDING can also be specified at this point. For complex rhythms, basic pattern parts can be written via REAL TIME RECORDING, and then STEP RECORDING may be utilized to write the more complex, detailed parts of the rhythm.

   • If the STOP/RESET key is pressed once again, CONTINUE is cancelled, and the start position is reset at the beginning of the PATTERN.




MEMORY FULL !!
P01-01 : *PTH-01*

BAR MEMORY FULL!
P01-01 : *PTH-01*

4. Step Recording

This method is used to write PATTERNS one step at a time. Try writing the following PATTERN, following the procedures listed below.

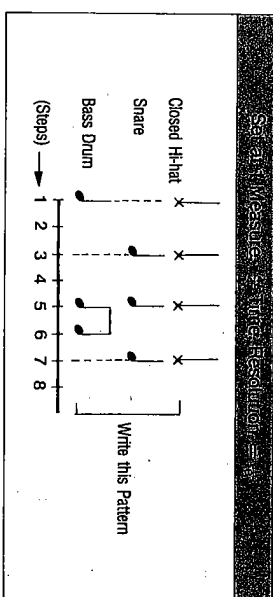


★ As the length of percussion instrument sounds is rather short, the difference between length of notes—such as J and J—is specified via the Timing which is written (step).

OPERATION


LED DISPLAY

① After performing operations related to PATTERN RECORDING (section 2), set INSTRUMENT SETTINGS, according to the rhythm pattern you want to write.

 ② Press the STOP KEY while holding down the REC/ENTER KEY.



• With this operation, the unit is set for STEP RECORDING.

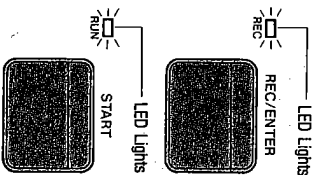

Present INST SETTING

STEP RECORD 1:0
P01-01 : S001/000

Present STEP
No. of STEPs which can be written

③ Begin STEP RECORDING procedures.
First, write the Bass Drum and closed Hi-hat parts for STEP 1. After one instrument part has been written on a step, other instrument parts can be added on that step by pressing the various while holding the original instrument keys.

(Key for which Bass Drum is set.)

Press



Dr

(Key for which Closed Hi-hat is set.)

Press



and release

* When this key is pressed writing is possible even if order is reversed.

• Dynamics are determined by the strength at which keys are tapped.

④ As there are no notes in STEP 2, proceed to STEP 3 by pressing the +1/YES Key.

+1 YES
Press →

STEP RECORD 1:0
P01-01 : 5002/008

Step increments are: →

STEP RECORD 1:0
P01-01 : 5003/008

⑤ Write the Snare and Closed Hi-hat sounds for STEP 3.

(Key for which Snare is set.)

Press and hold down



(Key for which Closed Hi-hat is set.)

Press and release



⑥ As there are no notes in STEP 4, proceed to STEP 5 by pressing the +1/YES Key.

+1 YES
Press →

STEP RECORD 1:0
P01-01 : 5004/008

STEP RECORD 1:0
P01-01 : 5005/008

⑦ Write the Bass Drum, Snare and Closed Hi-hat sounds for STEP 5.

(Key for which Bass Drum is set.)

Press and hold down



1

(Key for which Snare is set.)

Press



1

(Key for which Closed Hi-hat is set.)

Press and release



STEP RECORD 1:0
P01-01 : 5006/003

8 Write the Bass Drum sound for STEP 6.

(Key for which Bass Drum is set.)

Press and release



STEP RECORD 1:0
P01-01 : 5007/003

⑧ Write the Snare and Closed Hi-hat sounds for STEP 7.

(Key for which Snare is set.)

Press and hold down



1

(Key for which Closed Hi-hat is set.)

Press and release



STEP RECORD 1:0
P01-01 : 5008/003

⑨ There are no notes in STEP 8, so the step can be advanced via the +1/YES key. However, in this case, the RESOLUTION is set to 1/2, so the STEP count returns to STEP 1.

• This concludes the writing of this PATTERN, however if Step writing is continued at this point, newly written parts are added to those previously written, so it's possible to write patterns one instrument at a time, layering other instruments on top.




 
• Step display can be moved forward or backward in succession by holding down the +1/YES or -1/NO key, respectively. Notes written in the selected step are sounded. In this way, written patterns can be checked for accuracy. (Sound are not produced when steps are backed up via the -1/NO key.)

Instructions are made in writing, refer to the BASIC procedures, described on page 56. When recording Sequencer Parameters, refer to page 56.

① STEP RECORDING can be stopped by pressing the STOP/RESET KEY.



- REAL TIME RECORDING can also be specified at this point. Basic rhythm can be written via STEP RECORDING, and then adlib parts or fills can be written via REAL TIME RECORDING.
- If the STOP/RESET key is pressed once again, CONTINUE is cancelled, and the start position is reset at the beginning of the PATTERN.

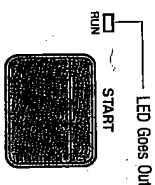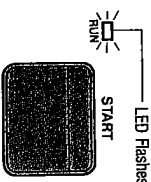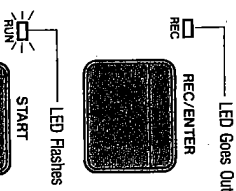

- If the Pattern Memory becomes full during Pattern Recording, the display appears as shown at the right, and further recording becomes impossible. In this case, secure more memory by clearing unnecessary patterns according to procedures described on page 73.

- When the memory becomes full during Recording, the display appears as at the right and recording stops. In this case, CLEAR unnecessary patterns from memory. (see page 73.)

MEMORY FULL !!
P01-01 : 5008/008

 
BAR MEMORY FULL!
P01-01 : 5008/008

5. Recording Sequence Parameters

SEQUENCE PARAMETERS are recorded for Instrument Sounds recorded via REAL TIME RECORDING and STEP RECORDINGS, described in sections 3 & 4.


■ Recording SEQUENCE PARAMETERS in REAL TIME

① Specify SEQ PARAMETER, by pressing FUNCTION SELECT KEY "f.6".




SEQ TUNE
P01-01 : *PTN-01*

② Press the START KEY, while holding down the REC/ENTER KEY.

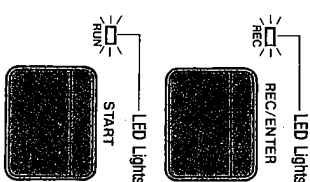

When the START KEY is pressed, sequence parameters (as far as possible) are recorded. This allows you to practice before actually recording.

③ Subsequently, pressing the "f.6" key causes the display to change as shown below - allowing selection of TUNE, DECAY and DYNAMICS.

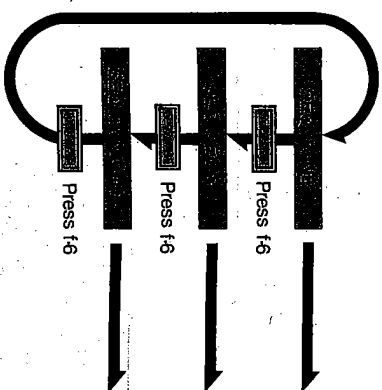


SEQ TUNE
P01-01 : *PTN-01*
SEQ DECAY
P01-01 : *PTN-01*
SEQ DYNAMICS
P01-01 : *PTN-01*

HOW TO RECORD PATTERNS

- ④ Press the Instrument Key for which you will set Sequence Parameters. The display shows the present Sequence Parameter value, as long as the key is held down. This value can be changed by sliding the DATA SLIDER, while still holding down the Instrument Key.

(When Recording into INST key "H")

 Press and hold down



Slide



Release



Present SEQ TUNE value displayed
(No display if Recording has not been performed)

I=SNARE 1 +00
P01-01 : *PTH-01*

SEQ TUNE Changes

I=SNARE 1
P01-01 : *PTH-01*

 
SEQ TUNE
P01-01 : *PTH-01*

Repeat procedures ③ and ④ for all the SEQ PARAMETERS.
In this state the mode changes to REAL TIME recording in the TEMPO function's specified.

HOW TO RECORD PATTERNS

■ Recording SEQUENCE PARAMETERS for STEP RECORDING.

- ① Specify SEQ PARAMETER, by pressing FUNCTION SELECT KEY "f6".



- ② Press the STOP KEY, while holding down the RECENTER KEY.

press and hold down



Press



SEQ TUNE
P01-01 : S001/008

LED Lights
REC/ENTER




LED Lights
START



- ③ Select the STEP containing the SEQ PARAMETER to be changed via the +1/YES or -1/NO key.
(Sounds are not produced when steps are backed up via the -1/NO key)

- ④ Subsequently pressing the "f6" key causes the display to change as shown below - allowing selection of TUNE, DECAY and DYNAMICS.

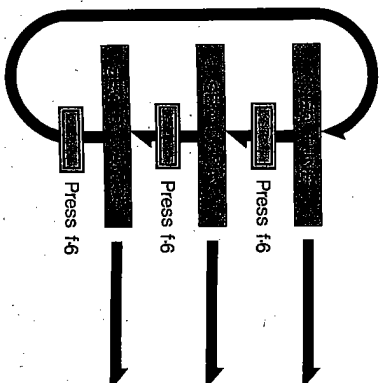


SEQ TUNE
P01-01 : S001/008

SEQ DECAY
P01-01 : S001/008

SEQ DYNAMICS
P01-01 : S001/008

③ Press the Inst. Key for which you will set Sequence Parameters. The display shows the present Sequence Parameter value as long as the key is held down. This value can be changed by sliding the DATA SLIDER, while still holding down the Inst. Key.

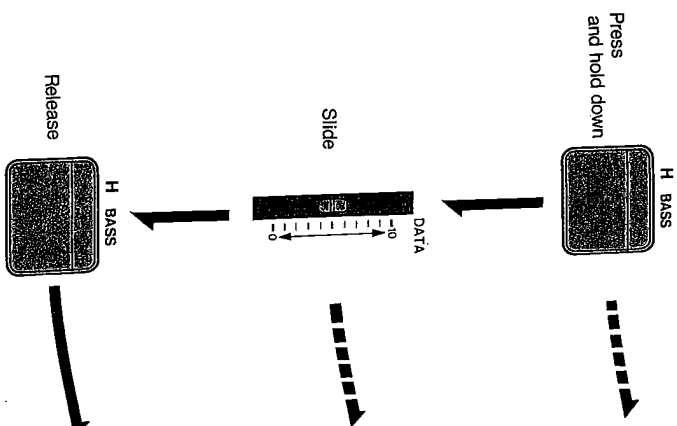

Present SEQ TUNE value displayed
(No display if Recording has not been performed)

H= BASS 1 +00
P01-01:5001/0003

SEQ TUNE Changes

H= BASS 1
P01-01:5001/0003

SEQ TUNE
P01-01:5001/0003

Repeat procedures ① through ③ to record SEQUENCE PARAMETERS one step at a time.

6. Erase

There are three different ways to ERASE programmed data.

 
■ How to ERASE an entire Instrument track

① Stop the unit by pressing the STOP/RESET KEY.




PTN SELECT 1:0
P01-01: *PTN-01*

② Specify ERASE, by pressing FUNCTION SELECT KEY "f.8".




ERASE INST
01: ■■■

③ Specify the sound to be erased by pressing the appropriate Inst. Key.
(Inst. Key "K" in this case)

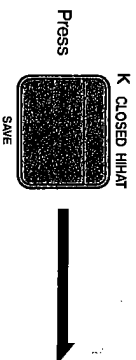

ERASE Sure(Y/N)?
01: K=CL HH 1

④ Respond to the "Sure (Y/N)?" Inquiry via the YES (+1/YES) or NO (-1/NO) key.

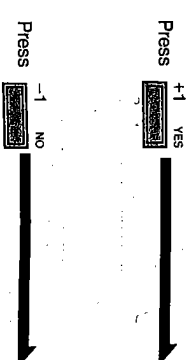

ERASE INST
01: ■■■

ERASE INST
01: ■■■

All notes written in the specified instrument's track are erased, operation returns to step ②

ERASE command cancelled, operation returns to step ②


Repeat steps ① through ④ to erase any other programmed instrument tracks

7. Editing of Patterns

■ SWING

A "swing" feel can be created by using this function, as it sounds the second half of beats on the back side - as in swing rhythm. This can only be set via Pattern Recording. SWING is set in 10 steps from 0 to 9 (50 ~ 88 %), and put into memory with each different PATTERN.


* The SWING effect is only produced during playback, and thus cannot be obtained during recording.

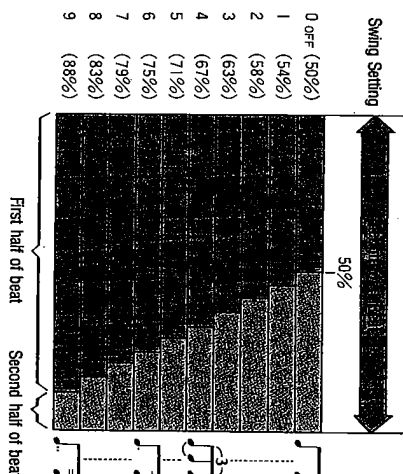

■ COPY


This function lets you copy finished patterns into other Pattern Numbers, as needed. This makes slight alteration to similar sounding phrases easy to record, as the basic pattern can be copied and then alteration to similar sounding phrases easy to Numbers.

Example of COPY

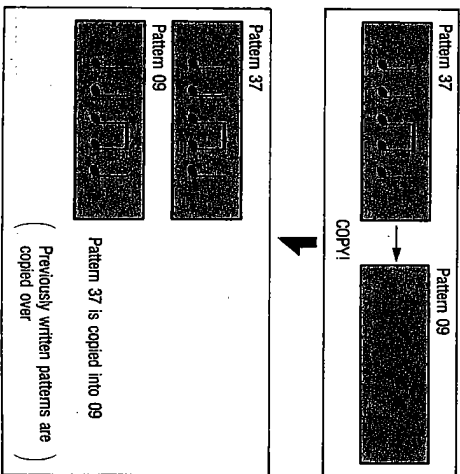

■ How to ERASE an unnecessary part of an Instrument track.

① With the unit set for REAL TIME RECORDING, hold down FUNCTION SELECT KEY "f.8", and press the Instrument Key to which you have assigned the sound you want to ERASE.

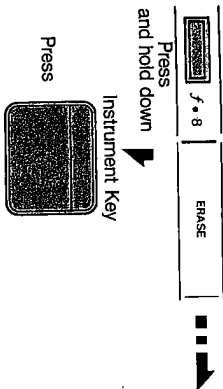


• The Instrument Sound will be erased from the PATTERN for as long as the Inst. Key is held down.

ERASE ! I:0
P01-01 : *PTN-01*


■ How to ERASE unnecessary parts, one STEP at a time.

 ① With the unit set for STEP RECORDING, raise or lower the STEP NUMBER via the +1/YES or -1/NO key to the STEP which you want to ERASE.



STEP RECORD I:0
P01-01 : 5001/008
STEP NUMBER Displayed

② While holding down FUNCTION SELECT KEY "f.8", press the Inst. Key set to the sound which you want to ERASE. (One or more Sound Source can be erased simultaneously)

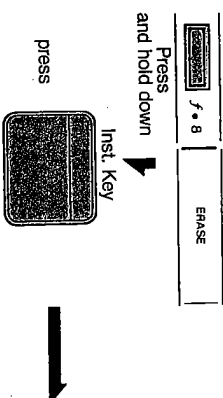

ERASE ! I:0
P01-01 : 5001/008

ERASE ! I:0
P01-01 : 5002/008
STEP Increments



Repeat steps ① through ② to ERASE

■ APPEND



This function is used to tie patterns together. This function simplifies SONG CREATION, if used in the writing stage. A pattern may also be appended to itself.

Example of APPEND

Appending to a different pattern

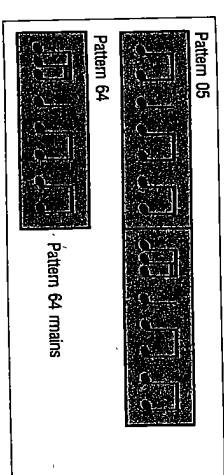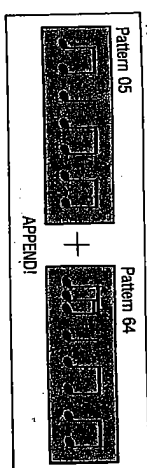

Appending a pattern to itself

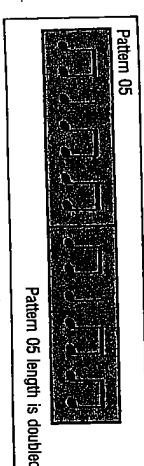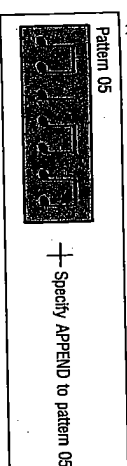

NOTE:

APPEND can be performed as long as the related patterns are set to the same beat, and the APPEND will not cause the total measures of the two patterns to exceed 99 bars. Also, the illustrations to the right show caution to be taken when appending patterns which have been set to "SWING" rhythm.

If a pattern not set to SWING is appended to a pattern which has been set to swing, the entire pattern will have the SWING effect when played back.

If a pattern set to SWING is appended to a pattern which is not set to swing, only the part initially set to SWING will have the SWING effect when played back.

■ AVAILABLE MEMORY

When PATTERNS are written on the DDD-1, they are kept in the Pattern Memory. This function indicates the % of Pattern Memory which is still available. Pattern Memory is erased when the No. of Bars is increased, and when Flams or sequence Patterns are recorded.

■ CLEAR

This function erases entire patterns from memory. After a CLEAR has been performed, values for the various parameters are as shown below.

- TIME SIGNATURE 4/4
- NUMBER OF BARS 01
- FLAM TIME 3
- SWING OFF (50%)
- NAME *PTN-01*

8. Pattern Editing Actual Operations

OPERATION

LED-LED DISPLAY

Specify PATTERN EDIT, by pressing MODE SELECT KEY "2".

CLEAR

Press ☐ 2

LED Lights

1 SWING Setting

① Specify SWING, by pressing FUNCTION SELECT KEY "f.2".

f.2

SWING

SWING VALUE
PTH01 = 0

② Set the SWING value via the tenkeys or the +1/YES and -1/NO keys.

Press

7	1/22	8	1/22	9	NO
4	1/4	5	1/4	6	1/4
1	1/4	2	1/4	3	1/4
-1	NO	0	0	+1	YES

SWING VALUE,
PTH01 =

SWING Value Changes

2 COPY Procedure

① To perform a COPY, you must specify the PATTERN to be copied, and the PATTERN into which it is to be copied. First, select the PATTERN to be copied.

f.1

PATTERN SELECT

Press

② Specify the PATTERN Number via the tenkeys or the +1/YES and -1/NO keys.

③ Specify, by pressing COPY KEY "f.3".

f.3

COPY

COPY
PTH01 → PTH02

④ Next, specify the PATTERN Number into which it is to be copied, via the ten key pad.

Press


7	1/22	8	1/22	9	NO
4	1/4	5	1/4	6	1/4
1	1/4	2	1/4	3	1/4
-1	NO	0	0	+1	YES

Sure(Y/N)?
PTH01 → PTH02
(PATTERN 01 is copied into 02)

HOW TO RECORD PATTERNS

⑤ Respond to the "Sure?" inquiry via the YES (+1/YES or NO (-1/NO) key.

Press

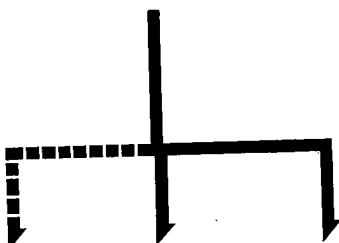

When the PATTERN Number being copied into is blank.

COPY!
PTH01 + PTH02

Operation returns to ① when COPY is complete.

When the PATTERN Number being copied into contains notes.

Rewrite(Y/N)?
PTH01 + PTH02

Display appears as above. Proceed to step ⑥.

COPY is carried out, without enough memory.

MEMORY SHORTAGE!

Press



COPY!
PTH01 + PTH02

COPY command is cancelled, operation returns to step ①.

⑥ Respond to the "Rewrite?" inquiry via the YES (+1/YES) or NO (-1/NO) key.

Press



COPY!
PTH01 + PTH02

COPY is carried out, operation returns to ① after completion. (PTH02 now contains PTH01 Pattern).

Press



COPY!
PTH01 + PTH02

COPY command is cancelled, operation returns to ①.

HOW TO RECORD PATTERNS

③ APPEND Procedures

① To perform an APPEND, you must specify into which PATTERN Number the presently selected PATTERN is to be appended. First, select the PATTERN to be appended.

Press

② Specify the PATTERN Number via the ten key pad +1/YES and -1/NO keys.

③ Specify APPEND, by pressing FUNCTION SELECT KEY "F4".

Press

APPEND
PTH01 + PTH02

④ Next, specify the PATTERN to be appended via the ten key pad.

Press

Sure(Y/N)?
PTH01 + PTH02

When APPEND is possible, display appears as above. Proceed to step ⑤.


Parameter Error!
PTH01 + PTH02

When APPEND is not possible, display appears as above and operation returns to ③.

HOW TO RECORD PATTERNS

③ Respond to the "Sure?" inquiry via the YES (+1/ YES) or NO (-1/NO) key.

Press  +1 YES

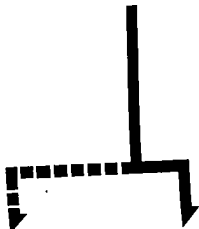

APPEND!
PTN01 + PTN02
APPEND is carried out, operation returns to ① when complete.

MEMORY SHORTAGE!

APPEND is carried out, without enough memory.

Press  -1 NO

APPEND
PTN01 + PTN02
APPEND command is cancelled, operation returns to ①.

④ AVAILABLE MEMORY

① When AVAILABLE MEMORY is specified by pressing FUNCTION SELECT KEY "f.7", the % of DDD-1 memory available displayed.

Press  f.7  AVAILABLE MEMORY

AVAILABLE MEMORY
099 %

HOW TO RECORD PATTERNS

⑤ CLEAR Procedures

① Specify CLEAR, by pressing FUNCTION SELECT KEY "f.8".

Press  f.8  CLEAR

CLEAR Sure?/N)?
P01-01 : *PTN-01*

② Respond to the "Sure?" inquiry via the YES (+1/ YES) or NO (-1/NO) key.

Press  +1 YES



CLEAR !!
P01-01 : *PTN-01*

CLEAR is carried out, PATTERN SELECT returns to "f.1".

Press  -1 NO

 


PTN SELECT I:0
P01-01 : *PTN-01*

CLEAR command is cancelled, PATTERN SELECT returns to "f.1".

9. Pattern Name

Can be recorded for all patterns written on the DDD-1, each up to 8 letters long.

① Specify PATTERN NAME, by pressing FUNCTION SELECT KEY "+1".  F + 1 PATTERN SELECT  Press	PTN SELECT 1:0 P01-01 : *PTN-01*
② Move the CURSOR to the NAME position on the display, by pressing the CURSOR KEY.  Press	PTN SELECT 1:0 P01-01 : *PTN-01*  CURSOR Moves
③ Set desired character via the DATA SLIDER. Choose characters from the chart shown on the next page.	

Repeat procedures ② and ③ to record other characters up to a total of 8. Return cursor to original position.

• Characters which can be used in naming.
 This chart shows characters which can be used in PATTERN NAMES. Those characters which are outside the DATA SLIDER setting range (such as small case letters, etc.) are set via the +1/YES and -1/NO keys. When these keys are depressed, character display changes in succession.



+ 1

YES



Press

C	O	B	A	H	P	X	/	h	e	x
1	2	3	4	5	6	7	8	9	0	.
"	*	2	:	B	J	R	Z	b	j	k
#	+	3	:	O	K	S	T	c	k	s
\$	,	4	<	D	L	T	*	d	l	t
%	-	5	=	E	N	U	J	e	n	u
&	.	6	>	F	N	V	<	f	n	v
'	/	7	?	G	O	U	_	g	o	u
										*

DATA SLIDER Setting Range



DATA

0



Slide

Press  -1 NO

74

75

SONG CREATION

SONG CREATION

1. Song Creation/Editing

With these functions, PATTERNS made via PATTEEN RECORDING (p.36) are put together to create full SONGS. As the SONG is made, PART DATA (data on the order of patterns or songs), REPEAT, and TEMPO CHANGE are written in succession. PATTERNS are changed in order, according to this data. Also, entire SONGS can be used as single PARTS so you can play or SONGS back SONGS and PATTERNS in combination.

■ CREATE


PART DATA is created via this function, by specifying **PATTERN NUMBERS** in the desired order. Also, individual Instrument Settings can be set and put into memory for a single **SONG**.

REPEAT

This function is used when you want to REPEAT the same phrase over and over for a specific number of measures.


There are three basic ways of using REPEAT, as shown in the examples to the right. In each case, the REPEAT number is set to 4¹.)

REPEATs are set by specifying the start point of the repeat and the number of times the phrase is repeated. It is impossible to perform REPEAT playback between the point where the REPEAT is inserted and subsequent PARTs.

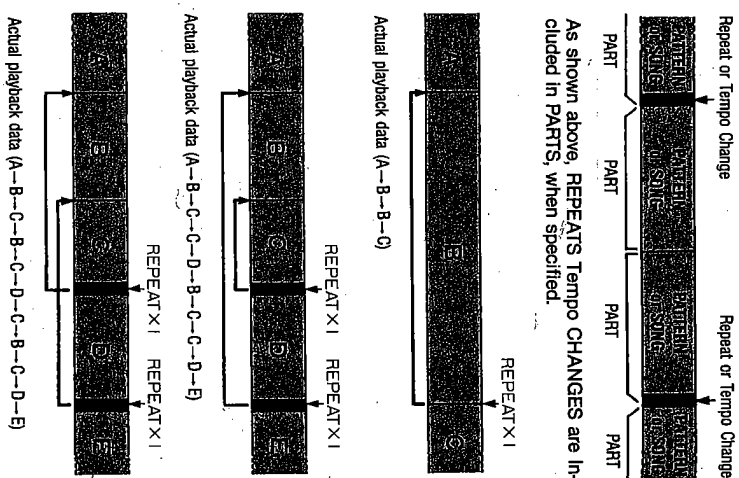


■ TEMPO CHANGE

LEMPO can be changed during playback by adding or subtracting values to or from the Tempo Value. It is impossible, however, to raise or lower the Tempo Value so it exceeds the $\pm 40 - 250$ range.

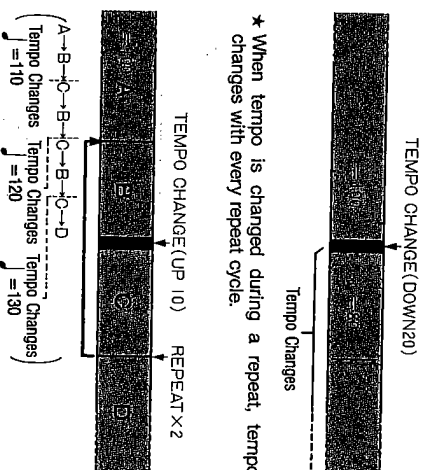


Example of SONG CREATION

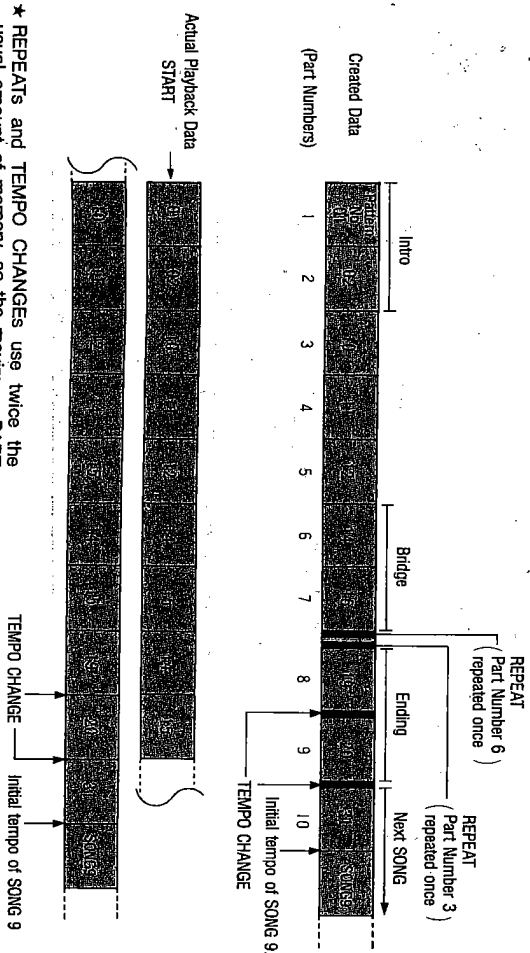


★ REPEATS and TEMPO CHANGES use twice the usual amount of memory, so the maximum PART numbers available is less than 255 when either are utilized.

■ INSERT

This function is used to INSERT Part Data, Repeats, or Tempo Changes in the middle of SONGS.

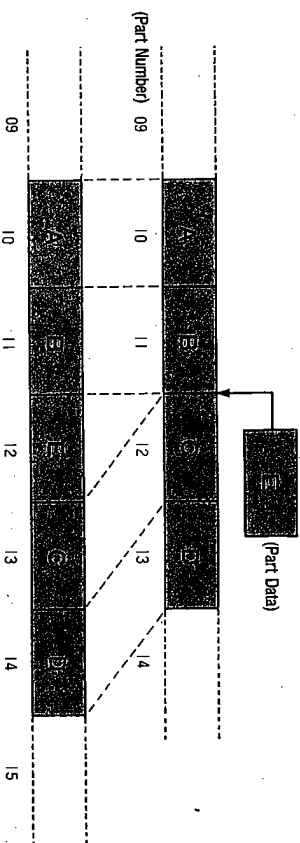Inserting Pattern Data


(When an INSERT is performed with Pattern Number 12 displayed, PARTS from Part "C" are shifted forward, and the inserted Part Data — "E" in this case — becomes Part Number 12. In this way, new data is inserted before presently displayed data.)

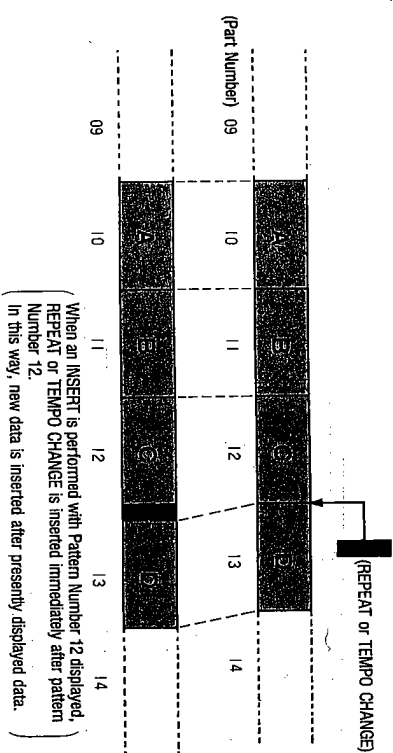Inserting Repeats or Tempo Changes


(When an INSERT is performed with Pattern Number 12 displayed, REPEAT or TEMPO CHANGE is inserted immediately after pattern Number 12. In this way, new data is inserted after presently displayed data.)

■ DELETE

This function is used to DELETE unnecessary Part Data, Repeats or Tempo Changes.

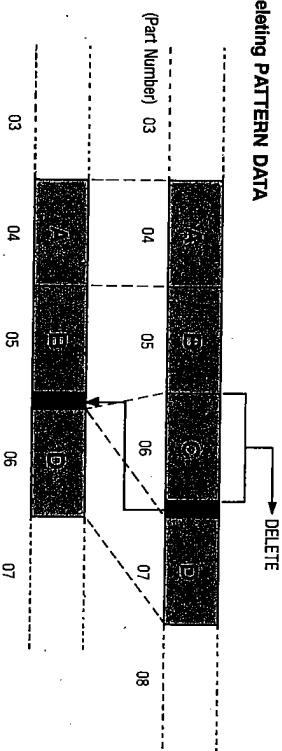Deleting PATTERN DATA

* REPEATS and TEMPO CHANGES are connected to the previous data (in this case "B"), so they are not deleted. However, if the first part number (001) contains REPEATS or Tempo changes, the entire Part must be deleted or a new Part inserted, then move to other functions.

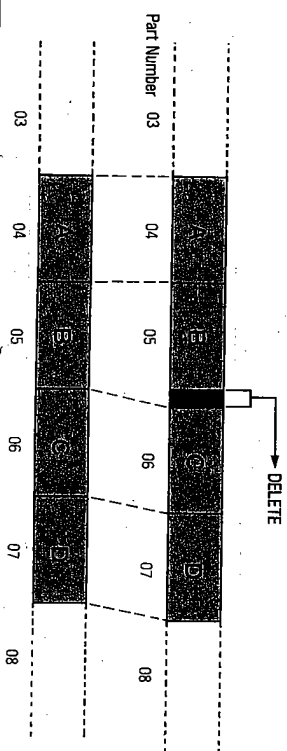Deleting REPEATS or TEMPO CHANGES**■ TEMPO**

Refer to "SETTING AND CHANGING TEMPO" on page 20.


■ CLEAR

When a new SONG is written, previous SONG DATA is erased. Instrument Setting Numbers remain as previously set, and Tempo is reset to 120.

2. Song Creation/Editing Actual Operations

Follow the procedures listed below for actual SONG CREATION and EDITING.



NOTE:
DIP Switch number 4 on the rear panel would be set to OFF when performing Song Creation or Editing.

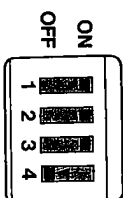

OPERATION



TOP LED DISPLAY

  Specify the SONG PLAY/EDIT MODE, by pressing MODE SELECT KEY "3".





1. CREATE PROCEDURES

 ① Specify SONG SELECT, by pressing FUNCTION SELECT KEY "f.1".

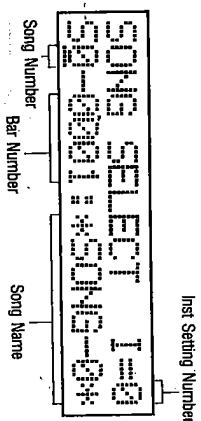

② Select the SONG NUMBER via the ten key pad or + I/YES and - I/NO keys.

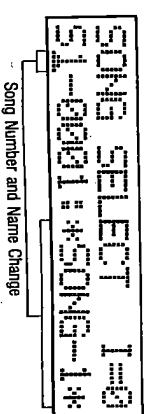
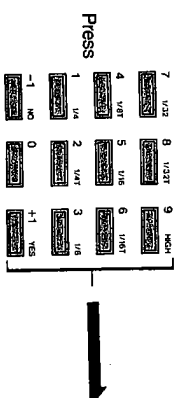


There are no demonstration patterns contained in PATTERN Numbers 0, 4 through 9. Use any of these numbers, when you wish to use a Pattern Number which already contains data, perform PATTERN CLEAR operations, described on page 89, after preserving data on a RAM card or via tape interface.

③ Next, specify the Inst Setting. Move the CURSOR to the Inst Setting position on the display by pressing the CURSOR KEY.



 
④ Specify the Inst Setting Number via the ten key pad or the + I/YES and - I/NO keys.

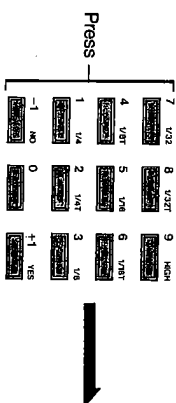

⑤ Next, "CREATE" a song. Specify CREATE, by pressing FUNCTION SELECT KEY "f.2".




• The Part Number is displayed, and Part Data input becomes possible.

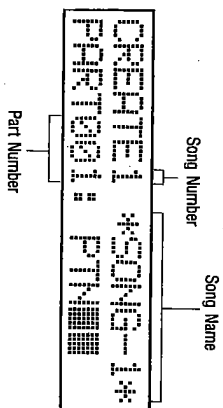

- ⑥ Select either PATTERN or SONG, by pressing the CURSOR KEYS.

Press (PATTERN)  

Press (SONG)  

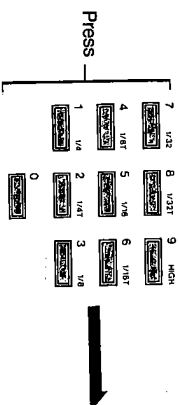

- Pattern Number and Song Number can be changed freely until step ⑦ is performed, however it is impossible to change from, for example, PATTERN to SONG via the CURSOR KEY. To make changes in this case, use the DELETE or INSERT functions.

- The PATTERN or SONG presently set or previous PATTERNS or SONGS, can be played back by pressing the START KEY, so songs can be reviewed as they are created.

TO SET REPEATS OR TEMPO CHANGES, refer to page 43.

- ⑦ Pressing the +1/YES key increments the Part Number by 1, allowing the setting of the next PATTERN or SONG Number via step ⑥ procedures.

Press  

- Pressing the -1/NO key decrements the Part Number by 1, allowing the correction of data input at step ⑥.

CREATED1 *SONG-1*
PART001: PTN

CREATED1 *SONG-1*
PART001: SONG

CREATED1 *SONG-1*
PART001: PTN

CREATED1 *SONG-1*
PART002: PTN

Indicates no data is in memory.

Continue to write the SONG by repeating steps ⑥ and ⑦.

② SETTING REPEAT


REPEATs are put into memory immediately after pieces of Part Data, Tempo Changes or Repeats written during SONG CREATION. Therefore, it is impossible to insert REPEATs until the Part Data to be repeated is written in its entirety. To set REPEAT for Part Numbers already written use the INSERT function.

- ① While set to SONG CREATE, specify "REPEAT" by pressing FUNCTION SELECT KEY "f.3".

CREATED1 *SONG-1*
PART010: T0001x00


- ② Specify the Pattern Number where the REPEAT is to begin via the ten key pad.

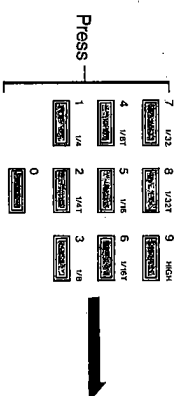

CREATED1 *SONG-1*
PART010: T0001x00

Indicates REPEAT is to begin with Pattern Number 001.

- ③ Specify the number of times the selected pattern is to REPEAT via the ten key pad.

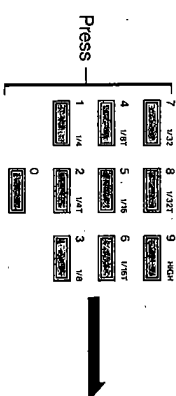

CREATED1 *SONG-1*
PART010: T0001x02

Indicates set for two cycles.

- Pattern Number which is to the beginning of the REPEAT, and the number of REPEAT cycles can be freely changed by moving the CURSOR, until step ④ is carried out.

- ④ Pressing the +1/YES key sets the REPEAT, and the Part Number is incremented 1 number.



CREATED1 *SONG-1*
PART011: PTN

If the part Number at which REPEAT is to begin is input incorrectly, an ERROR message is displayed, and operation returns to ①.

③ SETTING TEMPO CHANGE

TEMPO CHANGES are put into memory immediately after pieces of Part Data Repeats written during SONG CREATION, just as Repeats are. Therefore, it is impossible to insert TEMPO CHANGES until the related Part Data has been specified. To set TEMPO CHANGE for Part Numbers already written, use the INSERT function.

① While set to SONG CREATE, specify "TEMPO CHANGE" by pressing FUNCTION SELECT KEY "4".

Press | | TEMPO CHANGE |

CREATE1 *SONG-1*
PART020: UP

② Select UP or DOWN by pressing the CURSOR key, and then specify the value by which you want to raise or lower the tempo via the ten key pad.

Press |

CREATE1 *SONG-1*
PART020: UP

Press |

CREATE1 *SONG-1*
PART020: DOWN

Press

7 1/2 8 1/2 9 1/2 10 1/2
4 1/4 5 1/4 6 1/4 7 1/4
1 1/4 2 1/4 3 1/4 4 1/4
0

CREATE1 *SONG-1*
PART020: UP 10

Indicates Tempo raised by a value of 10.

③ Pressing the +1/YES sets the TEMPO CHANGE, and the Part Number is incremented 1 number.

Press |

CREATE1 *SONG-1*
PART021: PTN

Part Number increments.

④ INSERT OPERATION

INSERTING PATTERNS & SONG

① Specify CREATE, by pressing FUNCTION SELECT KEY "2".

Press | | CREATE |

② Move to the Part to be inserted into by pressing the +1/YES or -1/NO keys.

* When Part Data is inserted, it is inserted into the Part Number presently displayed. Subsequent Part Number, including that formerly occupying the displayed part is shifted forward.

③ Specify INSERT, by pressing FUNCTION SELECT KEY "5".

Press | | INSERT |

INSERT1 *SONG-1*
PART002: PTN

Part Number

Song Number

Song Name


- ④ Select either PATTERN or SONG, by pressing the CURSOR KEY. Then specify the Pattern Number and Song Number via the ten key pad.

Press 

INSERT1 *SONG-1*
PART002> PTN

Press 

INSERT1 *SONG-1*
PART002> SONG

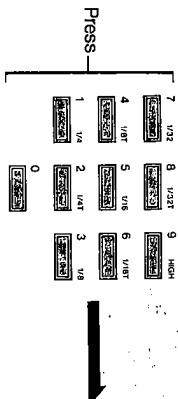

- Pattern Number and Song Number can be changed freely until step ⑤ is performed, however it is impossible to change from, for example, PATTERN to SONG via the CURSOR KEY.

INSERT1 *SONG-1*
PART002> PTN01

- ⑤ INSERT is carried out when the +1/YES is pressed. Succeeding Pattern Data may now be input.

+1 YES
Press 

Part No. increments

INSERT1 *SONG-1*
PART003> PTN

Subsequent INSERTS may be made by repeating steps ④ and ⑤. Pressing FUNCTION SELECT KEY "12" cancels the INSERT command.

INSERTING REPEAT & TEMPO CHANGES

- ① Specify CREATE, by pressing FUNCTION SELECT KEY "12".

Press  f.2 

- ② Move to the Part to be inserted into by pressing the +1/YES or -/NO keys.

★ REPEAT or TEMPO CHANGE is inserted immediately after the displayed Part.

- ③ Specify INSERT, by pressing FUNCTION SELECT KEY "15".

Press  f.5 

- ④ If FUNCTION SELECT KEY "13" is pressed while in the insert mode, a REPEAT is inserted. If "14" is pressed, a TEMPO CHANGE is inserted.

Press  f.3 

Press  f.4 

- Refer to REPEAT & TEMPO CHANGE setting procedures, from page 83. Changes can be made freely until step ⑤ is carried out.

- ⑤ Pressing the +1/YES key allows subsequent insertion of REPEATS or TEMPO CHANGES.

+1 YES
Press 

INSERT1 *SONG-1*
PART002> PTN

 
 
INSERT1 *SONG-1*
PART002> TEMPO CHANGE

INSERT1 *SONG-1*
PART002> REPEAT

INSERT1 *SONG-1*
PART003> UP




Subsequent INSERTS may be made by repeating steps ④ and ⑤. Pressing FUNCTION SELECT KEY "12" cancels the INSERT command.

5 DELETE PROCEDURES

① Specify CREATE, by pressing FUNCTION SELECT KEY "f.2". Press   	
② Move to the Part to be deleted by pressing the +1/YES or -1/NO keys. ★ When Pattern Data is deleted, the Part presently displayed is deleted and subsequent Data shifts 1 part backward. REPEATS and TEMPO CHANGES are displayed, and can be deleted in the same way as SONGS and PATTERNS.	
③ Specify DELETE, by pressing FUNCTION SELECT KEY "f.5". Press   	
④ Press the REC/ENTER KEY. Press  	  Next Data is displayed, replacing deleted data.

When the DELETE command is cancelled, the display returns to the previous screen.

  
 
6 CLEAR PROCEDURES

① Specify CLEAR, by pressing FUNCTION SELECT KEY "f.8". Press   	
② Respond to the "Sure?" inquiry via the YES (+1/YES) or NO (-1/NO) key. Press   Press  	 CLEAR is carried out, operation returns to "1" SONG SELECT.  CLEAR command is cancelled, operation returns to "1", SONG SELECT.

SONG CREATION

3. Song Names

  SONG NAMES can be recorded for all songs written on the DDD-1, each up to 8 letters long. This facilitates easy confirmation of the SONG being played.

① Specify SONG SELECT, by pressing FUNCTION SELECT KEY "1". Press  	
② Move the CURSOR to the NAME position on the display, by pressing the CURSOR key. Press 	
③ Set desired character via the DATA SLIDER or +/YES and -/NO keys, choose characters from the Pattern Name characters from the Pattern Name chart, on page 75.	Repeat procedures ① and ② to record other characters. Up to a total of 8. Move CURSOR back to its original position when all characters have been entered.

SYSTEM SETTING


1. System Setting

These Functions are used to make DDD-1 basic system settings, beginning with MIDI functions.

■ METRONOMIE

This function is used to set metronome sound ON/OFF, and the beat during playback. However, the metronome sounds even if it is turned OFF during recording. Sound is output via the center L and R/MONO jacks. If a plug is inserted in the METRONOMIE OUT jack, then output via the L or R/MONO jacks is cancelled.

Select Metronome Beat from the Chart Below.
(accent)

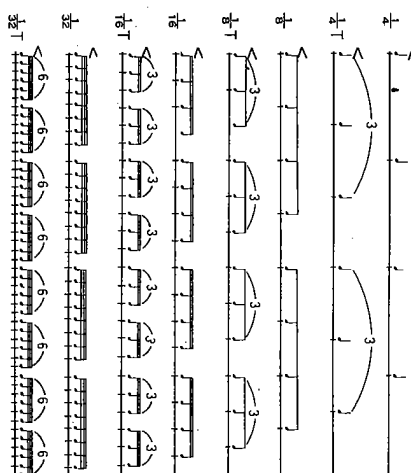

■ TRIGGER ASSIGN

This key is used to specify keys used for TRIGGER IN and TRIGGER OUT functions. The same key may be selected for both TRIGGER IN and TRIGGER OUT, or separate keys may be selected.

■ TRIGGER IN


Inst Keys can be controlled by external devices such as drum pads, etc., by connecting them to the AUDIO IN jack on the rear panel. Not limited to only trigger-type signals, even voice signals may be used, with input levels controlling DDD-1 dynamics.

■ TRIGGER OUT

Connecting this terminal with synthesizers, delay units etc. featuring TRIGGER IN jacks allows the DDD-1 to be used as an external trigger for other devices, or to be used in trigger overdub timing, etc. A trigger signal is output when each Inst Key operates according to specified song or pattern settings.

Output trigger polarity can be changed by changing the position of Dip Switch "3" on the rear panel.

When set to ON, a "L" type trigger is output, and a "J" type is output.

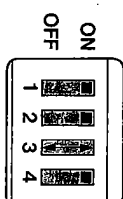


■ CLOCK

Three different CLOCK Functions can be selected for the DDD-1.

INTERNAL:

The INTERNAL clock is used for the DDD-1 itself, and when the DDD-1 is used as a master clock for other units, (MIDI CLOCK and TAPE SYNC signals are both output.)

 
Set to INTERNAL



MIDI:

In this mode, and external MIDI clock operates. Set to this mode when another MIDI device, such as a synthesizer is used as master, and the DDD-1 is used as a slave. (TAPE SYNC signal is output.)

 
Set to MIDI




TAPE:

In this mode, the DDD-1 is operated via an external TAPE SYNC signal. Use this mode when utilizing a tape recorder as the master, and the DDD-1 as a slave. (MIDI CLOCK is output.)

 Set to TAPE



- TAPE SYNC Signals are set at $\downarrow = 24$. Also, by changing the relative positions of the DIP Switch bits on the rear panel, the TAPE jack input level can be changed from HIGH to LOW.
- TEMPO is not displayed when the Clock is set to either MIDI or TAPE as external.

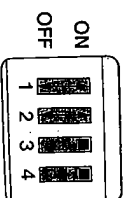

■ MIDI RECEIVE

The DDD-1 can be used as a sound source for performance slaves of the same class, such as drum pads, by receiving data programmed via MIDI keyboards, etc. This MIDI RECEIVE function has 4 parameters which relate to the reception of MIDI Data (Channel Messages).

● NOTE DATA RECEIVE ON/OFF

This determines whether the DDD-1 will receive or ignore input data from external sources.

● OMNI MODE ON/OFF

This determines whether some or all of the 16 MIDI Channels are received.

● RECEIVE CHANNEL SPECIFY

This determines the MIDI Channels which are received when the OMNI Mode is OFF.

● NOTE NUMBER SETTING

This setting determines which 1st Keys sound according to the key number of received key notes. This number can also be transmitted. Available setting range of Note Number is 25 ~ 71.

■ MIDI TRANSMIT

The DDD-1 can be used as a master to drive slaves of the same class, or as the sound source for a multiple of MIDI devices. This MIDI TRANSMIT function has 2 parameters which relate to the transmission of MIDI Data (Channel Messages).

● NOTE DATA TRANSMIT ON/OFF

This determines whether the DDD-1 will output NOTE DATA.

● INST KEY TRANSMIT CHANNEL SETTING

This determines which of the 16 MIDI Channels that transmitted MIDI Data will be output from, for each Instrument Key.
(Note Number is the same as for RECEIVED NOTE NUMBER.)

■ SAMPLING SET

★ This function cannot be selected if a Sampling Board is not connected to the rear panel jack.

Sampling can be performed with the DDD-1, by utilizing the optional Sampling Board (DSB-1).


2 types of sounds can be sampled in the 2-sound mode, 1 type in the 1-sound mode. These sampled sounds are used to create rhythms with the DDD-1, in the same ways as other sound sources. The entire memory (called BLOCK 0) is used when sampling in the 1-sound mode. In the 2-sound mode, the memory is split into 2 parts (BLOCK 1 and BLOCK 2). Different sounds can be sampled for each part of the memory in this case.

There are different Sampling Modes, Auto-Sampling and Manual Sampling. When using Auto-Sampling, sounds are sampled automatically as soon as they are input. This is useful for sampling sounds which have a strong attack. With Manual Sampling, sounds are only sampled when an Instrument Key is pressed. This is useful when sampling sounds with a weaker attack.


The Sampling Clock can be adjusted within a range of 0 ~ 127. Its relationship to Sampling Time is shown in the upper diagram.

Sampled sounds can be tuned within a 2 octave range. The relationship between tuning and the Sampling Clock setting is shown in the example to the right.

Relationship between Sampling Clock and Sampling Time

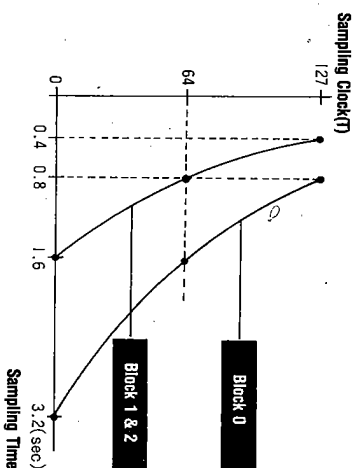


Tuning Range of Sampled Sounds (EX)

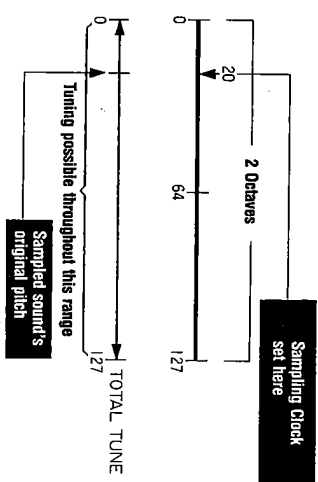

2. System Setting Actual Operation

NOTE:

Set the rear panel DIP Switch bit 4 ("PROTECT") to OFF before performing the following procedures.

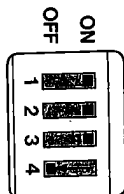

OPERATION

Specify SYSTEM SETTING, by pressing MODO SELECT KEY "4,5".

Press →




1 METRONOME SETTING

① Specify METRONOME, by pressing FUNCTION SELECT KEY "4,1".



METRONOME : OFF
BEAT : 1/2

② Specify the METRONOME BEAT via the ten key pad or -1/NO and +1/YES keys.

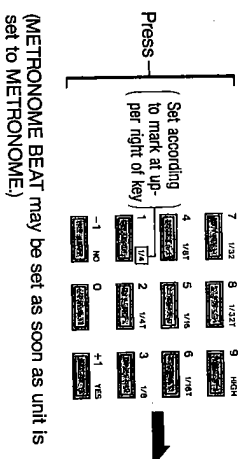

(Set according to mark at up-per right of key)

METRONOME : OFF
BEAT : 1/4

Metronome Beat Changes →

③ Move the CURSOR by pressing the CURSOR KEY.



METRONOME : OFF
BEAT : 1/4

Cursor Moves

④ Specify ON or OFF via the +1/YES or -1/NO key.



METRONOME : ON
BEAT : 1/4




METRONOME : OFF
BEAT : 1/4

● This operation turns the Metronome Sound ON and OFF during playback. It is always set to ON during recording.

2 SETTING TRIGGER ASSIGN

① Specify TRIGGER ASSIGN, by pressing FUNCTION SELECT KEY "f.2". Press  	TRIGGER ASSIGN IN+D: / OUT+E: Present value displayed.
② Specify the INST KEY to be controlled (triggered) by the signal input via the AUDIO IN jack on the rear panel. (INST KEY "D", in this case) Press  (INST KEY to be controlled by Trigger. In can be specified as soon as TRIGGER ASSIGN is selected)	TRIGGER ASSIGN IN+D: / OUT+E: INST KEY newly set.
③ Move the CURSOR by pressing the CURSOR KEY. Press 	TRIGGER ASSIGN IN+D: / OUT+E: CURSOR Moves.
④ Specify the key which will control trigger output via the rear panel TRIG OUT jack. (INST KEY "C", in this case).  C TOM 3	TRIGGER ASSIGN IN+D: / OUT+E: INST KEY newly set.

3 CLOCK SETTING

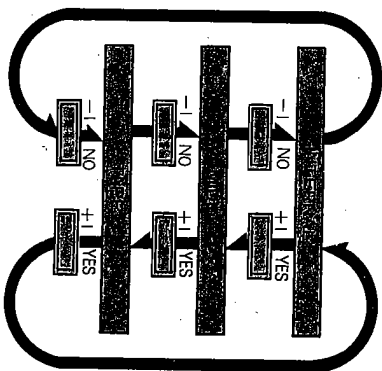
① Specify CLOCK, by pressing FUNCTION SELECT KEY "f.3". Press  	CLOCK "INTERNAL"
② Pressing the +1/YES and -1/NO keys changes the CLOCK MODES shown below. 	CLOCK "INTERNAL" CLOCK "MIDI" CLOCK "TAPE"

The display appears as shown at the right when the clock is set "MIDI" or "TAPE".


TEMPO
"EXTERNAL"

② SETTING MIDI RECEIVE

 ① Specify MIDI RECEIVE by pressing FUNCTION SELECT KEY "f.4".



② Subsequently pressing the f.4 key causes the display to change as shown below, enabling selection of MIDI RECEIVE parameters.

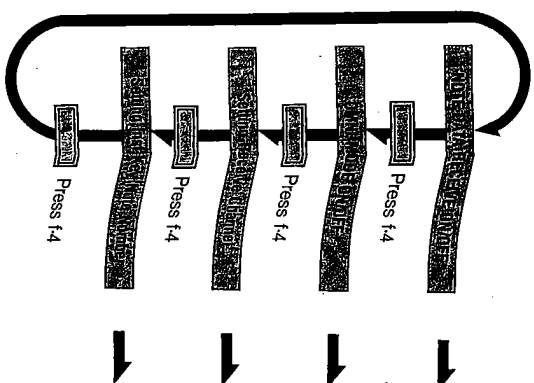

(NOTE DATA RECEIVE ON/OFF can be set as soon as unit is set to MIDI RECEIVE)

MIDI RECEIVE
NOTE: AVAILABLE

MIDI RECEIVE
NOTE: AVAILABLE

MIDI RECEIVE
OMNI MODE: ON

MIDI RECEIVE
CHANNEL: 01

NOTE DATA RECEIVE ON/OFF (available/unavailable) can be set by pressing the +1/YES for ON, or -1/NO key for OFF.

+1 YES
Press

-1 NO
Press

Select OMNI MODE ON/OFF by repeating step ②. Select ON or OFF via the +1/YES or -1/NO key.

+1 YES
Press


-1 NO
Press

MIDI RECEIVE
NOTE: AVAILABLE

MIDI RECEIVE
OMNI MODE: ON

MIDI RECEIVE
OMNI MODE: OFF

Select RECEIVE CHANNEL. SPECIFY by repeating step ②. Specify the desired channel via the ten key +1/YES and -1/NO keys.

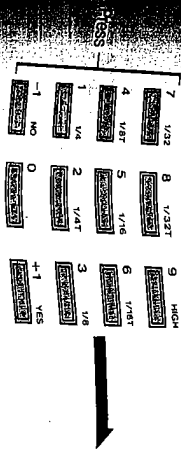

MIDI RECEIVE
CHANNEL: 02

MIDI RECEIVE CHANNEL Changes


- ⑥ Select RECEIVED NOTE NUMBER SETTING by repeating step ②. Specify by pressing the selected Inst Key (For Inst key "J").



MIDI RECEIVE
INST NOTE: J=37

Specified INST KEY
Present NOTE NUMBER

- ⑦ Set the NOTE NUMBER by pressing the ten key pad or +1/YES and -1/NO keys.

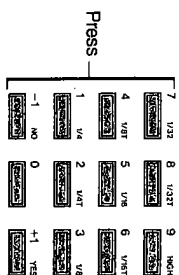


MIDI RECEIVE
INST NOTE: J=

Note Number Changes

5 SETTING MIDI TRANSMIT

 
- ① Specify MIDI TRANSMIT, by pressing FUNCTION SELECT KEY "f5".



MIDI TRANSMIT

MIDI TRANSMIT
NOTE: UNAVAILABLE


- ② Subsequently pressing the f5 key causes the display to change as shown below, enabling selection of MIDI TRANSMIT parameters.

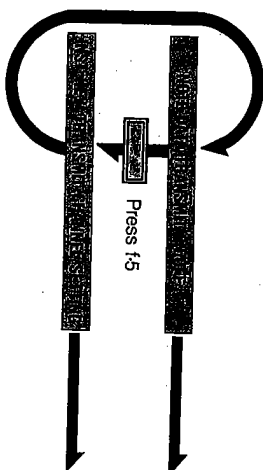

MIDI TRANSMIT
NOTE: AVAILABLE
MIDI TRANSMIT
INST CH: ■

NOTE DATA TRANSMIT ON/OFF can be set as soon as unit is set to MIDI TRANSMIT.

 - ③ Specify ON (available) or OFF (unavailable) by pressing the +1/YES or -1/NO keys.




MIDI TRANSMIT
NOTE: AVAILABLE



MIDI TRANSMIT
NOTE: UNAVAILABLE

- ④ Select INST KEY TRANSMIT CHANNEL SETTING by repeating step ②. Then press the selected INST KEY (INST KEY "K", in this case)

 K CLOSED HIHAT




Press



MIDI TRANSMIT
INST CH: K= 01

- ⑤ Set the TRANSMIT CHANNEL via the ten key pad or +1/YES and -1/NO keys.

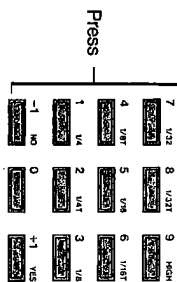


Press

MIDI TRANSMIT
INST CH: K=

MIDI Channel Changes


⑥ SAMPLING SET PROCEDURES

- ① Connect the rear panel AUDIO IN jack to the output jack of a selected instrument or audio unit.

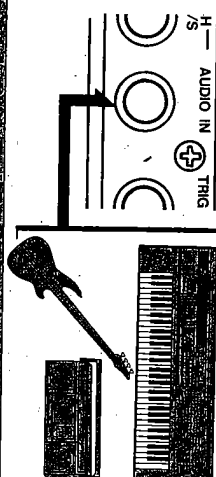


Sampling sound sources can now be assigned to STG 0's, 1's, 2's, 3's, 4's, 5's, 6's, 7's, 8's, and 9's.

 - ② Specify SAMPLING SELECT, by pressing FUNCTION SELECT KEY "f+6".



SAMPLING SET
BLOCK : (A)T=064

 - ③ Select either the 1-sound or 2-sound Sampling Mode. With the CURSOR in the BLOCK position, select BLOCK 0 for 1-sound sampling, or BLOCKS 1 or 2 for 2-sound sampling, via the +1/YES and -1/NO keys.



SAMPLING SET
BLOCK : (A)T=064
Set to BLOCK 1

- ④ Move the CURSOR to the SAMPLING START position on the display by pressing the CURSOR KEY.



CURSOR MOVES

SAMPLING SET
BLOCK1 : (M)T=064

- ⑤ Choose Auto Sampling Start or Manual Sampling Start by pressing the +1/YES or -1/NO keys. "A" represents Auto Start, while "M" stands for Manual.



SAMPLING
BLOCK1 : (M)T=064


- ⑥ Move the CURSOR to the Sampling Clock position by pressing the CURSOR KEY.



SAMPLING SET
BLOCK1 : (M)T=064

CURSOR MOVES

- ⑦ Set the Sampling Clock via the DATA SLIDER or the +1/YES and -1/NO keys.

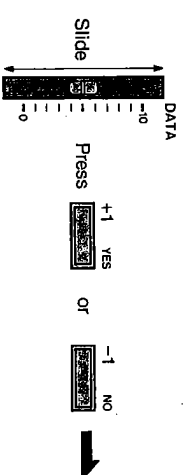

SAMPLING SET
BLOCK1 : (M)T=

Sampling Clock Changes

- ⑧ Pressing FUNCTION SELECT KEY "f+6" puts Sampling on STANDBY.



If power is turned OFF in the STANDBY state, Sampled Sounds are all erased, even if Sampling has been completed for a single BLOCK.

SAMPLING SET
BLOCK1 : Ready

Sampling on Standby

● Pressing FUNCTION SELECT KEY "f+6" once more cancels Standby and operation returns to step ③.
● Sampling starts automatically when a sound is input in sequence and Sampling Standby is cancelled. Sampling Start returns in effect even if another function is selected while in the Standby state.
● Proceed to step ⑨ when performing manual sampling start.
● In this state, FILE NAME (099) cannot be utilized.

- ⑨ When the INST KEY to which the Sampling Sound Source is assigned is pressed, sampling begins.

(S-1 or S-2 set to)
INST Key



SAMPLING SET
BLOCK1 : Ready

1

- Sampling begins when the INST KEY to which "S-1" is assigned is pressed, when BLOCK 1 has been selected in step ③.
- Sampling begins when the INST KEY to which "S-2" is assigned is pressed, when BLOCK 2 has been selected in step ③.
- Sampling begins when the INST KEY to which "S-1" and "S-2" assigned is pressed, when BLOCK 0 has been selected in step ③.


SAMPLING SET
BLOCK1 : (M)T=064

Operation returns to ⑦ when sampling is completed.

● After completing procedures for only BLOCK sampling can be performed for the second block by repeating procedures from step ③. When Sampling in the 2 sound Sampling Mode. For example, when you have completed sampling BLOCK1, turning return to step ③ to complete sampling of BLOCK2.
● Sound sampled in BLOCK0 is erased when sampling is performed in either BLOCK1 or BLOCK2.

SYSTEM SETTING

- Sampling sounds can now be produced by tapping INST KEYS to which S-1 or S-2 have been set.

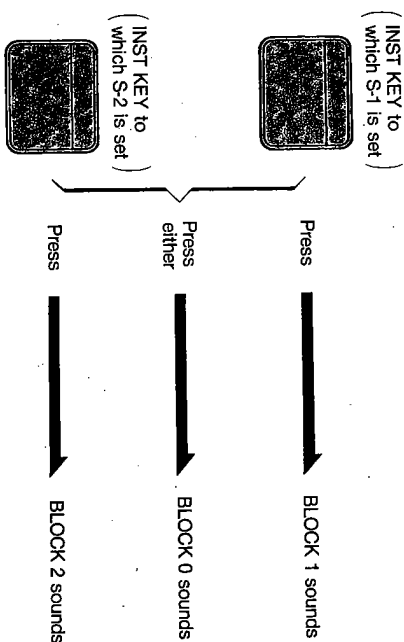

NOTE: BLOCKS 1 & 2 are divisions of BLOCK 0, so it is impossible to sound them all at the same time. It is also impossible to sound BLOCK 1 and BLOCK 2 simultaneously. The last key pressed has precedence.

DATA TRANSFER

1. Data Transfer

DDD-1 memory can be preserved on RAM cards or tape recorders. This mode controls the input and output of the DDD-1's memory data. This memory data can be treated as MIDI System Exclusive Messages, so transfer between another DDD-1, SQD-1 or other device is also possible. This entire process is known as DATA TRANSFER. The four keys illustrated below are used to carry out the 3 DATA TRANSFER OPERATION - SAVE, VERIFY, and LOAD.



SAVE:
SAVE operations are utilized to preserve memorized data on RAM card, tape or disk.

VERIFY:
VERIFY operations are carried out to confirm that data SAVE (or LOAD) operations were completed correctly.

LOAD:
LOAD operations are used to load data which is contained on RAM card, tape or disk into the DDD-1 memory.

CANCEL:
This cancels SAVE, VERIFY or LOAD operations.

RAM CARD

This function is used to perform DATA TRANSFER utilizing a RAM card. Names can be given to individual data, up to 8 letters long, for easy identification. Also, a Protect Switch is featured on RAM cards, to prevent accidentally erasure of information.

MIDI

Utilizing System Exclusive Messages, DATA TRANSFER between the DDD-1 and computers or other MIDI devices is carried out via this function. DDD-1 data can be preserved in the SQD-1's Quick Disk, when connected to an SQD-1.

TAPE


This function is used to perform DATA TRANSFER utilizing cassette tapes. Names can be given to data, up to 8 letters long.

ROM CARD CHECK

The number of sound sources can be increased when using the optional ROM Card with the DDD-1. When using the ROM Card, it is necessary to perform the ROM CARD CHECK procedures, to inform the DDD-1 that the card is in use, after inserting the card in the ROM CARD SLOT. (This procedure is carried out automatically when power is turned ON.)

2. Data Transfer Actual Operations

NOTE:
When performing a LOAD via DATA TRANSFER, set DIP Switch number 4 "PROTECT" to the OFF position.

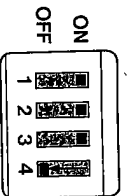

OPERATION

LED DISPLAY

Specify the DATA TRANSFER MODE by pressing MODE SELECT KEY "6".

Press


"Select Medium" is displayed, enabling selection of RAM Card, tape or MIDI.



DATA TRANSFER
Select Medium

① DATA TRANSFER Using a RAM CARD

① Insert a RAM Card in the RAM CARD SLOT.

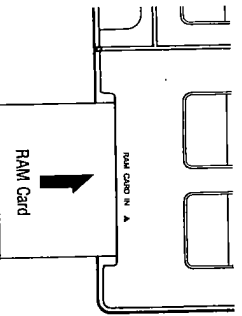

② Specify RAM CARD, by pressing FUNCTION SELECT KEY "f.1".



DATA TRANSFER
RAM: DATA-001

Name of Data on RAM Card.

DATA TRANSFER
RAM: No Card.

● Display before RAM Card is inserted (insert RAM Card).

DATA TRANSFER
RAM: OTHER CARD

● Display when a RAM Card other than the DDD-1 RAM Card is inserted.

DATA TRANSFER
RAM: *****

 
● Unused RAM Card is inserted.

● RAM Card other than KORG RAM Card is inserted.

SAVE OPERATIONS

- ① Press the SAVE Key (INST Key: K)

K CLOSED HHAT



RAM CARD SAVE
Sure ? :*****

 
- ② Next, assign a name to the data you intend to save. Move the CURSOR by pressing the CURSOR key.

Press →

RAM CARD SAVE
Sure ? :*****
CURSOR Moves.

- ③ Select desired characters via the DATA SLIDER or +1/YES and -1/NO keys.

DATA



+1 YES

-1 NO

RAM CARD SAVE
Sure ? :DATA-007

Name of data to be SAVED.

- Characters which may be selected are as listed on "Pattern Name" page 74.

Repeat steps ① and ② to complete the desired Name up to 10 characters per Name.

- ④ Return the CURSOR to its original position by pressing the CURSOR KEY.

Press →

RAM CARD SAVE
Sure ? :DATA-007

- ⑤ SAVE is carried out by pressing the +1/YES key, and cancelled by pressing the -1/NO key.

Press →

RAM CARD SAVE
Execute!

RAM CARD SAVE
Finish.

"Finish" displayed after approx. 1 second.

RAM CARD SAVE
Error End.

If RAM Card PROTECT is set to ON, or the wrong card is inserted, the display appears as above.

Press →

DATA TRANSFER

- Pressing the CANCEL KEY (INST KEY: N) cancels SAVE operation.

Press



RAM CARD SAVE
Cancel End.

VERIFY OPERATION

- ① Press the VERIFY KEY (INST KEY: L).
L OPEN RH/HAT



Name of data to be verified displayed.

RAM CARD VERIFY
Ready? DATA-007

- ② Respond to the "Ready ?" inquiry via the +1/YES key to carry out VERIFY.
Pressing the -1/NO key cancels the VERIFY procedure.



RAM CARD VERIFY
Execute!

RAM CARD VERIFY
Finish.

"Finish" displayed after approx. 1 second.


RAM CARD VERIFY
Error End.

If data was transferred incorrectly or a data error is found then the display appears as above.

DATA TRANSFER
RAM




- VERIFY can be cancelled by pressing the CANCEL KEY (INST KEY: N).

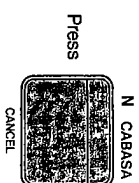

RAM CARD VERIFY
Cancel End.

LOAD OPERATION

- ① Press the LOAD KEY (INST KEY: M).
M COWBELL

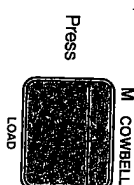

Name of data to be loaded is displayed.

RAM CARD LOAD
Sure ? DATA-007

RAM CARD LOAD
PROTECT ON!

The above display indicates the rear panel "PROTECT" DIP switch is ON. (Operation returns to ②. (Turn OFF DIP Switch repeat operation.))

- ② Respond to the "Sure ?" inquiry via the +1/YES key to carry out the LOAD operation.
LOAD is cancelled by pressing the -1/NO key.



RAM CARD LOAD
Execute!

RAM CARD LOAD
Finish.

"Finish" displayed after approx. 1 second.


RAM CARD LOAD
Error End.

The above display indicates a problem during LOAD.
Check the RAM Card and repeat from step ①.

Press  -1 NO

DATA TRANSFER
F04H


- LOAD can be cancelled by pressing the CANCEL KEY (INST KEY: N).

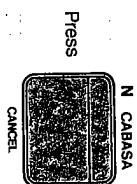

RPM CARD LOAD
Cancel End.

2 DATA TRANSFER UTILIZING CASSETTE TAPE

- ① Connect a tape recorder to the rear panel TAPE Jack.

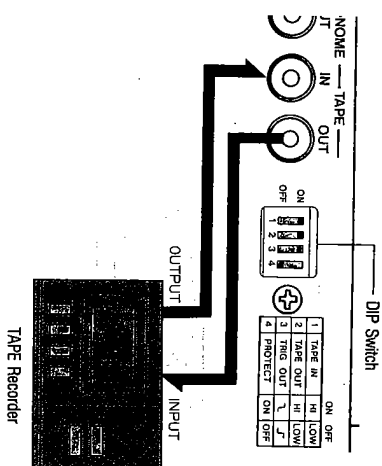

Set Dip Switches 1 & 2, according to the tape recorder used.






INPUT		OUTPUT	
MIC	LOW	LINE OUT	LOW
AUX LINE IN	HI	PHONE	HI
DIP Switch 2		DIP Switch 1	

- ② Specify TAPE, by pressing FUNCTION SELECT KEY "f2".



DATA TRANSFER
TAPE

     SAVE OPERATION

① Press the SAVE KEY (INST KEY: K). K CLOSED HMMAT Press 	
② Next, assign a name to the data you intend to save. Move the CURSOR by pressing the CURSOR KEY. Press 	
③ Select desired characters via the DATA SLIDER or +1/YES and -1/NO keys. Slide  Press  or  • Characters which may be selected are as listed on page.	 Name of data to be LOAD
④ Return the CURSOR to the Ready? position by pressing the CURSOR KEY. Press 	 Cursor Moves
⑤ Press the +1/YES key. Press 	

⑥ Set the tape recorder to RECORD, and press the pause button. At this time, a signal is output via the TAPE OUT Jack for recording level adjustment at the tape recorder. Adjust as necessary.

 
⑦ Release the tape recorder PAUSE button and press the +1/YES key. (Be sure the tape's leader section has passed the tape heads before starting the DDD-1 transmission.) Pressing the -1/NO Key cancels SAVE.

Press 

Press 

• Perform DATA TRANSFER onto tape at least two or three times to guarantee safe preservation of data. Then carry out VERIFY procedures, as described on page 120.

• SAVE can be cancelled by pressing the CANCEL KEY (INST KEY: N).

Press 

 
■ If you listen to a tape of recorded data, you will hear the following tones:

LEVEL SET TONE (lower pitched "cooh...")




LEADER TONE (high-pitched "see...")

DATA TONE (medium-pitched "noise")

END TONE (high-pitched "eee...")



Indicates SAVE is completed.

   
LEADER TONE : Indicates the start of VERIFY and LOAD operations.

DATA TONE : Actual digitalized data from the DDD-1, such as PATTERN data, SONG data, INST Settings, etc.

END TONE : Indicates the end of the operation.

VERIFY OPERATION

- ① Press the VERIFY KEY (INST KEY: L).

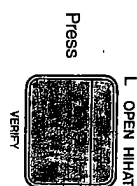

TAPE VERIFY
Ready? :


When more than one piece of DATA is stored on the same tape, you can specify which piece is to be verified, by name. When performing VERIFY without specifying the data name, proceed to step ③. The first data encountered is verified in this case.

- ② Specify the name of the data to be verified. Move the CURSOR by pressing the CURSOR KEY.



TAPE VERIFY
Ready? : CURSOR Moves

- ③ Input the name of the data to be verified via the DATA SLIDER or +1/YES and -1/NO keys.

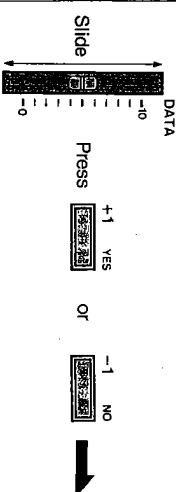

Name of data to be VERIFIED

TAPE VERIFY
Ready? : DATA-507

Repeat steps ② and ③ to specify the names of all data to be verified.

- ④ Return the CURSOR to the "Ready?" position by pressing the CURSOR KEY.



TAPE VERIFY
Ready? : DATA-507
 CURSOR Moves

- ⑤ Set the tape recorder to PLAY, and press the +1/YES key. Pressing the -1/NO key cancels VERIFY.



TAPE VERIFY
Search : DATA-507

When name is specified When name is not specified


TAPE VERIFY
Pass : DATA-325

Data encountered is not specified

TAPE VERIFY
Find : DATA-507

Specified data found, VERIFY executed.

TAPE VERIFY
Finish.

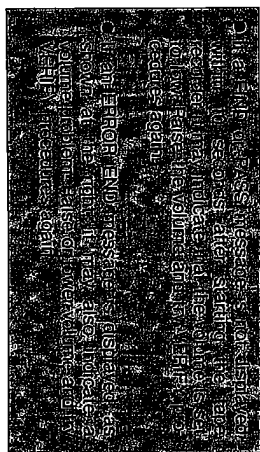

TAPE VERIFY
Error End.

 
Press NO

DATA TRANSFER
TAPE

VERIFY Cancelled.

- VERIFY can be cancelled by pressing the CANCEL KEY (INST KEY: N).

Press




TAPE VERIFY
Cancel End.

NOTE:
VERIFY is used to confirm that the data which is SAVED is the same as that in the DDD-1 memory. If DDD-1 memory contents are altered after SAVE then an ERROR END message will result when VERIFY is subsequently performed. Also, if VERIFY does not reach the FINISH stage even after being performed at number of times, it may indicate a problem with volume level. Raise or lower the volume and try VERIFY procedures until the FINISH message is achieved.

LOAD OPERATION

 - ① Press the LOAD KEY (INST KEY: M).



TAPE LOAD
Ready?

TAPE LOAD
PROTECT ON!

Indicates DIP SW 4 / PROTECT is set to ON. Turn it OFF.

When more than one piece of DATA is stored on the same tape, you can specify which piece is to be LOADED by giving a number when LOADING without specifying data filename or sector to load.


- ② Specify the name of the data to be loaded. Move the CURSOR by pressing the CURSOR KEY.



TAPE LOAD
Ready?

CURSOR Moves

- ③ Input the name of the data to be loaded via the DATA SLIDER or +1/YES and -1/NO keys.

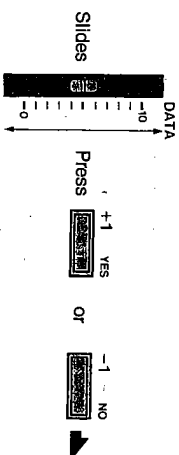

- Characters which may be selected are as listed on "Pattern Name" page 74.

Name of data to be LOAD

TAPE LOAD
Ready? DATA-502

Repeat steps 1 and 2 to specify the name of all data to be loaded.

CURSOR Moves

TYPE	LOAD
5443	2: DATA-507

THE LORD
Sawch:DATA-507

Page 1000
R035
GITH-325

[illegible]

1980年12月
 1981年1月
 1981年2月
 1981年3月
 1981年4月
 1981年5月
 1981年6月
 1981年7月
 1981年8月
 1981年9月
 1981年10月
 1981年11月
 1981年12月
 1982年1月
 1982年2月
 1982年3月
 1982年4月
 1982年5月
 1982年6月
 1982年7月
 1982年8月
 1982年9月
 1982年10月
 1982年11月
 1982年12月
 1983年1月
 1983年2月
 1983年3月
 1983年4月
 1983年5月
 1983年6月
 1983年7月
 1983年8月
 1983年9月
 1983年10月
 1983年11月
 1983年12月
 1984年1月
 1984年2月
 1984年3月
 1984年4月
 1984年5月
 1984年6月
 1984年7月
 1984年8月
 1984年9月
 1984年10月
 1984年11月
 1984年12月
 1985年1月
 1985年2月
 1985年3月
 1985年4月
 1985年5月
 1985年6月
 1985年7月
 1985年8月
 1985年9月
 1985年10月
 1985年11月
 1985年12月
 1986年1月
 1986年2月
 1986年3月
 1986年4月
 1986年5月
 1986年6月
 1986年7月
 1986年8月
 1986年9月
 1986年10月
 1986年11月
 1986年12月
 1987年1月
 1987年2月
 1987年3月
 1987年4月
 1987年5月
 1987年6月
 1987年7月
 1987年8月
 1987年9月
 1987年10月
 1987年11月
 1987年12月
 1988年1月
 1988年2月
 1988年3月
 1988年4月
 1988年5月
 1988年6月
 1988年7月
 1988年8月
 1988年9月
 1988年10月
 1988年11月
 1988年12月
 1989年1月
 1989年2月
 1989年3月
 1989年4月
 1989年5月
 1989年6月
 1989年7月
 1989年8月
 1989年9月
 1989年10月
 1989年11月
 1989年12月
 1990年1月
 1990年2月
 1990年3月
 1990年4月
 1990年5月
 1990年6月
 1990年7月
 1990年8月
 1990年9月
 1990年10月
 1990年11月
 1990年12月
 1991年1月
 1991年2月
 1991年3月
 1991年4月
 1991年5月
 1991年6月
 1991年7月
 1991年8月
 1991年9月
 1991年10月
 1991年11月
 1991年12月
 1992年1月
 1992年2月
 1992年3月
 1992年4月
 1992年5月
 1992年6月
 1992年7月
 1992年8月
 1992年9月
 1992年10月
 1992年11月
 1992年12月
 1993年1月
 1993年2月
 1993年3月
 1993年4月
 1993年5月
 1993年6月
 1993年7月
 1993年8月
 1993年9月
 1993年10月
 1993年11月
 1993年12月
 1994年1月
 1994年2月
 1994年3月
 1994年4月
 1994年5月
 1994年6月
 1994年7月
 1994年8月
 1994年9月
 1994年10月
 1994年11月
 1994年12月
 1995年1月
 1995年2月
 1995年3月
 1995年4月
 1995年5月
 1995年6月
 1995年7月
 1995年8月
 1995年9月
 1995年10月
 1995年11月
 1995年12月
 1996年1月
 1996年2月
 1996年3月
 1996年4月
 1996年5月
 1996年6月
 1996年7月
 1996年8月
 1996年9月
 1996年10月
 1996年11月
 1996年12月
 1997年1月
 1997年2月
 1997年3月
 1997年4月
 1997年5月
 1997年6月
 1997年7月
 1997年8月
 1997年9月
 1997年10月
 1997年11月
 1997年12月
 1998年1月
 1998年2月
 1998年3月
 1998年4月
 1998年5月
 1998年6月
 1998年7月
 1998年8月
 1998年9月
 1998年10月
 1998年11月
 1998年12月
 1999年1月
 1999年2月
 1999年3月
 1999年4月
 1999年5月
 1999年6月
 1999年7月
 1999年8月
 1999年9月
 1999年10月
 1999年11月
 1999年12月
 2000年1月
 2000年2月
 2000年3月
 2000年4月
 2000年5月
 2000年6月
 2000年7月
 2000年8月
 2000年9月
 2000年10月
 2000年11月
 2000年12月
 2001年1月
 2001年2月
 2001年3月
 2001年4月
 2001年5月
 2001年6月
 2001年7月
 2001年8月
 2001年9月
 2001年10月
 2001年11月
 2001年12月
 2002年1月
 2002年2月
 2002年3月
 2002年4月
 2002年5月
 2002年6月
 2002年7月
 2002年8月
 2002年9月
 2002年10月
 2002年11月
 2002年12月
 2003年1月
 2003年2月
 2003年3月
 2003年4月
 2003年5月
 2003年6月
 2003年7月
 2003年8月
 2003年9月
 2003年10月
 2003年11月
 2003年12月
 2004年1月
 2004年2月
 2004年3月
 2004年4月
 2004年5月
 2004年6月
 2004年7月
 2004年8月
 2004年9月
 2004年10月
 2004年11月
 2004年12月
 2005年1月
 2005年2月
 2005年3月
 2005年4月
 2005年5月
 2005年6月
 2005年7月
 2005年8月
 2005年9月
 2005年10月
 2005年11月
 2005年12月
 2006年1月
 2006年2月
 2006年3月
 2006年4月
 2006年5月
 2006年6月
 2006年7月
 2006年8月
 2006年9月
 2006年10月
 2006年11月
 2006年12月
 2007年1月
 2007年2月
 2007年3月
 2007年4月
 2007年5月
 2007年6月
 2007年7月
 2007年8月
 2007年9月
 2007年10月
 2007年11月
 2007年12月
 2008年1月
 2008年2月
 2008年3月
 2008年4月
 2008年5月
 2008年6月
 2008年7月
 2008年8月
 2008年9月
 2

THE LOGD
Error End:

LOAD Cancelled




N CABASA



Time Used: 00:00:00


■ Points to Remember About Tape Interface

- 1 When using a stereophonic tape recorder, use the left channel only for the SAVE operation. If the right is used, VERIFY and LOAD operations cannot be performed with headphones connected.
- 2 Set tape recorder level as high as possible without distortion. If the level is too high or too low during SAVE, VERIFY and LOAD may become impossible.
- 3 If the tape recorder head is dirty, wow and flutter are excessive, or there are fluctuations in output (due to weak batteries etc.) SAVE, LOAD and VERIFY operation may not be correctly completed.
- 4 Do not vibrate the tape recorder by moving it, or change the output level settings during SAVE, LOAD or VERIFY.
- 5 Some cords and plug adaptors on the market contain resistors. Use of these during SAVE, LOAD or VERIFY may result in less than satisfactory operation.
- 6 Be sure to record data on a new tape, free from scratches or warping. Also, avoid storing the tape where it may be effected by magnetism, as data may become scrambled.
- 7 The volume range wherein VERIFY and LOAD can be performed is shown in the diagram below:

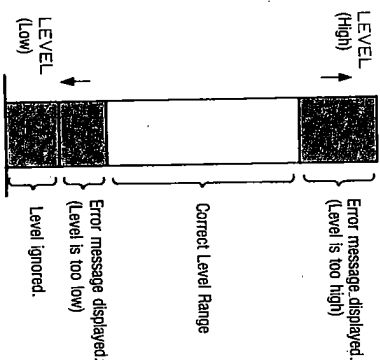

③ DATA TRANSFER VIA MIDI EXCLUSIVE MESSAGES

- ① Connect MIDI terminal (IN/OUT) with MIDI terminal of an SCD-1 or a computer MIDI interface.

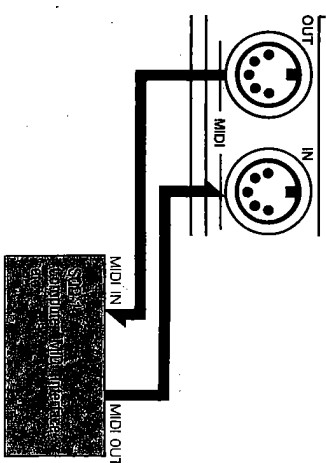

* Software which is capable of handling MIDI Exclusive Messages must be used when connecting with a computer.

(Set DIP Switch 5 "DATA TRANSFER", on the SCD-1 rear panel, to MIDI when connecting the DDD-1.)

 
 
 
 
- ② Specify MIDI, by pressing FUNCTION SELECT KEY #3.




DATA TRANSFER
MIDI

● Refer to the SCD-1 Owner's Manual for information of SCD-1 operation P.114 ~ 115.







SAVE OPERATION

① Set the receiving device to LOAD STANDBY. (When the SOD-1 is used as the receiving device, press the LOAD KEY while in the DATA TRANSFER mode.)	
② Press the SAVE KEY (INST KEY: K). Press 	
③ Respond to the "Ready?" inquiry via the YES or NO key. Press  YES 	    SOD-1 also shows "Finish"  


• SAVE can be cancelled by pressing the CANCEL KEY (INST KEY: N).

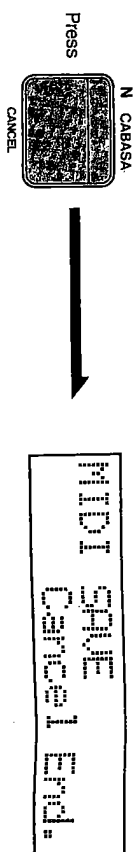

LOAD OPERATION

      
① Press the LOAD KEY (INST KEY: M). Press 	 
② Respond to the "Ready?" inquiry via the YES or NO key. Press  YES  Press  NO 	 LOAD Standby  LOAD Cancelled
③ SAVE data from the transmitting device. (Data transmission begins when the SAVE key is pressed in the DATA TRANSFER mode.)   SOD-1 display  "Finish" displayed on DDD-1 display when SAVE is completed.	

• LOAD can be cancelled by pressing the CANCEL KEY (INST KEY: N).

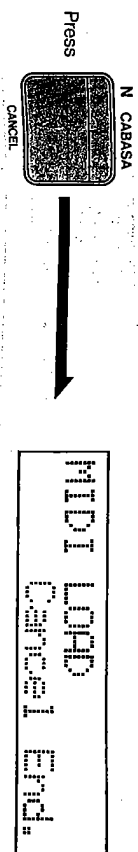

■ ROM CARD CHECK OPERATION

 - ① Specify ROM CARD CHECK by pressing FUNCTION SELECT KEY "f8".



ROM CARD CHECK
Ready?

- ② Respond to the "Ready?" inquiry. Press YES if the ROM CARD is in the ROM CARD SLOT, and NO if it is not.

Press +1 YES

ROM CARD CHECK
Card1: Check Now!

CARD Being Check.

ROM CARD CHECK
Card1: OK!

CARD is in SLOT.

ROM CARD CHECK
Card1: No Card

CARD is not in SLOT.

ROM CARD CHECK
Card1: Error.

An incorrect CARD has been inserted.

ROM CARD CHECK
Finish.

Returns to top display after CARDS 1-4 are checked.

CONNECTION WITH OTHER DEVICES

1. Synchronization with other Drum Machines, Synthesizers, etc.

□ Synchronization with MIDI Drum Machines and MIDI Synthesizers.

The DDD-1 can be synchronized with other MIDI devices via messages such as TIMING CLOCK, START, STOP, CONTINUE, etc.

■ Using the DDD-1 to control another MIDI device (DDD-1 as Master, other device as Slave)



When the DDD-1 is started, a START message is transmitted to the Slave device, starting it at the same time. If DDD-1 tempo is changed, Slave tempo is also changed.

When the DDD-1 is stopped, a STOP message is transmitted to the Slave device, stopping it at the same time. To restart playback, Continue Start is used, however there are some cases wherein the Slave unit will not start simultaneously in this case, due to mutual processing difficulties. In these cases, it's necessary to transmit a Song Position Pointer when playback is interrupted.

★ When certain measure is specified as the starting point for playback in the SONG PLAY/EDIT MODE, a Song Position Pointer is transmitted.

■ Using other MIDI Devices to control the DDD-1 (DDD-1 as Slave, other device as Master)

The DDD-1 will start simultaneously with the Master, when the Master start button is pressed.

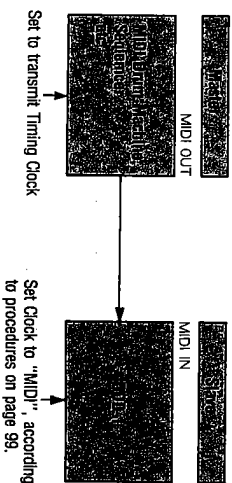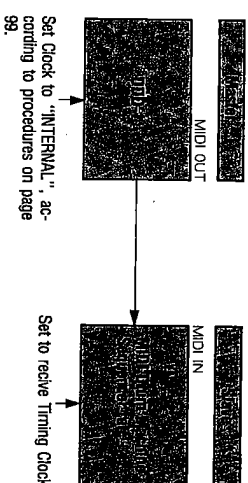


2 Synchronization with Drum Machines Featuring SYNC Jack.

(MIDI Synchronizer KMS-30 must be used when synchronizing with Drum machines such as the DDM-110 and DDM-220.)


■ Using the DDD-1 to Control another Drum Machine via SYNC Jack (DDD-1 as Master)

The Slave unit reacts in sync, when the DDD-1 is Started, Stopped, or changes are made in Tempo. (Slave is not capable of Continue Start function.)

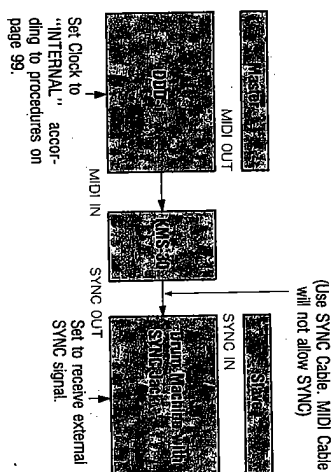

■ Using other Device with SYNC Jack to control the DDD-1 (DDD-1 as Slave)

When the DDD-1 START KEY is pressed, the unit is set to Start Standby. The DDD-1 will start simultaneously with the Master, when the master start button is pressed.

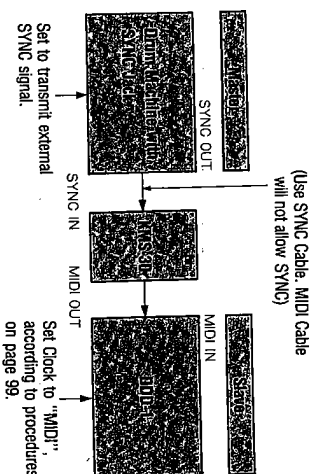


3 TAPE SYNC PROCEDURES

Tape Sync allows you to record a TAPE SYNC Signal from the DDD-1 on a tape recorder, and then use the taped signal to operate the DDD-1 in SYNC with the tape recorder. This function is extremely useful when recording tracks on a MTR. It allows efficient & effective use of a limited number of tracks.

■ TAPING A TAPE SYNC SIGNAL

- 1 Connect the DDD-1 TAPE OUT jack to the input jack of a tape recorder. Set the DDD-1 clock to "INTERNAL."

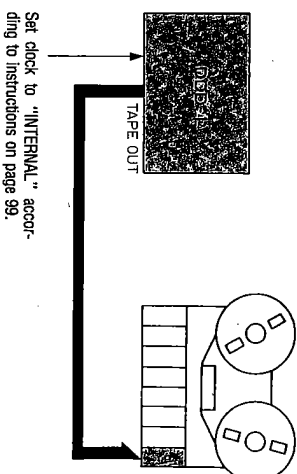


- 2 Set the tape recorder to RECORD, and press the pause button. The DDD-1 outputs a Lead Tone, so set tape recording volume according to this tone. DIP Switch 2 "TAPE OUT" can be set to HIGH or LOW to match the tape recorder you are using. Adjust the recording level so that is as high as possible without distorting (about 0dB on the level meter).

- 3 Start the DDD-1 and adjust tempo if necessary. (TEMPO will be set at the value as recorded, so take care to make sure that it is correct before recording.)

- 4 Start the tape recorder, wait two or three seconds, then start the DDD-1. When you start DDD-1, it will switch from leader tone to clock signal output (an "aaa" sound).


- 5 Stop DDD-1 after recording the clock signal for a sufficient length of time. (The DDD-1 will then switch back to leader tone output.) Continue recording for another two or three seconds, then stop the tape recorder.

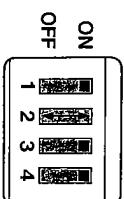

CONNECTION WITH OTHER DEVICES

- Using tape SYNC (recorded clock signal) to control the DDD-1.

- ① Connect the DDD-1 TAPE IN jack to the tape recorder's appropriate output jack. Set the DDD-1 clock switch to TAPE.

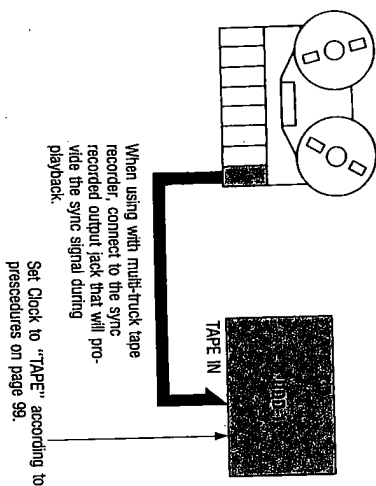


- ③ The DDD-1 will stop when the clock signal ends and the leader ton ("eee" sound) resumes.

- ★ if the DDD-1 fails to start at the sync signal or if the tempo is unsteady, then the recording level was probably too low or too high when the sync signal was recorded. Try recording again after changing DIP switch 1 - "TAPE IN" on the rear panel.

- ★ Continue Start is not possible when the Clock is set to "TAPE".

■ In this way, the DDD-1 and SDD-1, etc. can be utilized in making multi-track recordings, being recorded onto empty tracks simultaneously.

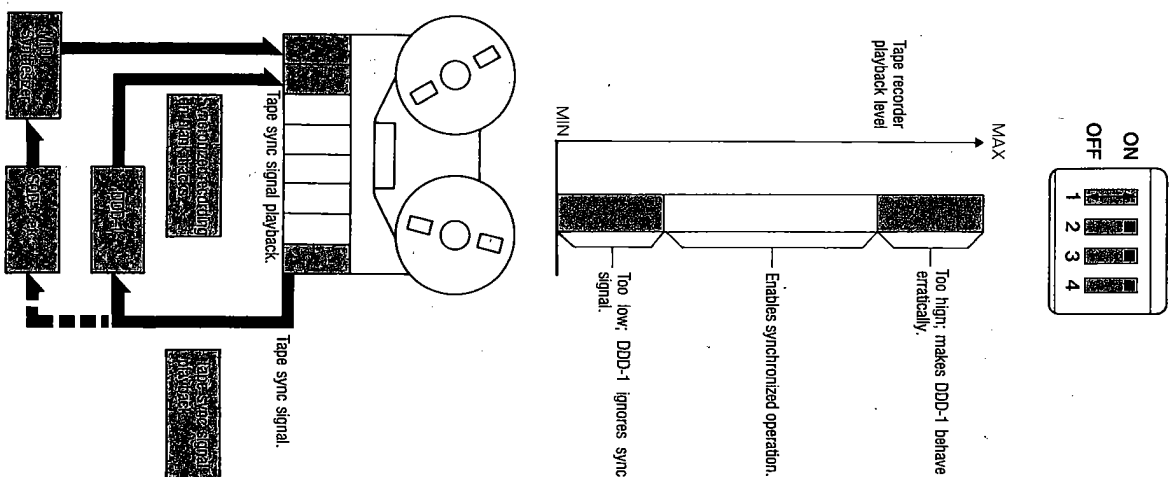


CONNECTION WITH OTHER DEVICES

2. About Connecting The DDD-1 to Drum Pads, Synthesizers, etc.

- Using the DDD-1 as a Sound Source for MIDI Synthesizers and MIDI Drum Pads. (See page 93.)


DDD-1 Instrument Sounds are produced when the DDD-1 receives Note Date from MIDI keyboards, sequencers, etc. If the controlling device feature TOUCH SENS, then DDD-1 volume is also controlled according to the strength of touch on either the keys or drum pads, etc. This is much like playing an actual instrument key on the DDD-1.

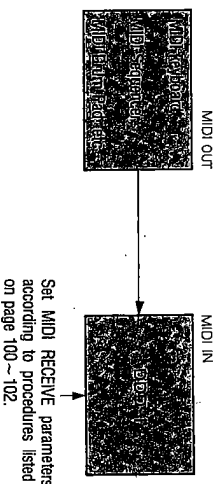

- Also, TUNE and DECAY can be controlled when connected to a MIDI keyboard.

NOTE:
Note Numbers and other data received via MIDI IN cannot be output via MIDI OUT. Recording into MIDI Sequencers or other devices after routing through the DDD-1 is also impossible.

DECAY, TUNE, INST KEY and NOTE NUMBER Control Ranges

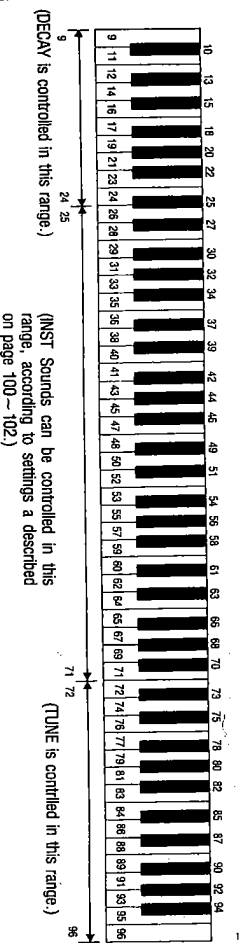


When an INST Control Key is tapped while holding down a DECAY Control Key or TUNE Control Key, Instrument Sounds set to the various INST Control keys are sounded according to the SEQ DECAY or SEQ TUNE setting.

* Patterns played via the MIDI keyboard or MIDI drum pad can be recorded via the PATTERN RECORDING Mode on the DDD-1. These can be recorded simultaneously when TUNE DECAY is controlled via MIDI Keyboards or other devices.

- Using Other MIDI Drum Machines or Synth Modules as Sound Sources. (See page 94.)


Percussion sounds can be created by using MIDI Drum machines, synth modules etc. as sound sources. Note numbers can be assigned to any of the MIDI Channel when transmitting data via the DDD-1, so a variety of sound sources can be sounded at the desired timing.

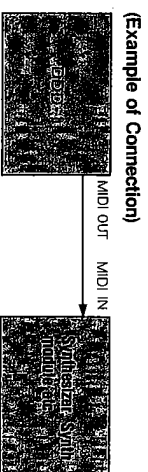

NOTE:
The DDD-1 transmits a NOTE OFF message immediately after transmitting a NOTE ON signal, so some synth modules may not respond.

- Connection of other Drum Pads, Synthesizers, etc. (See page 91.)

The DDD-1 can be triggered by external sources such as synthesizers or microphones featuring TRIG OUT jacks. Also, the DDD-1 can control other units, acting as trigger by utilizing the DDD-1 TRIG OUT signal.

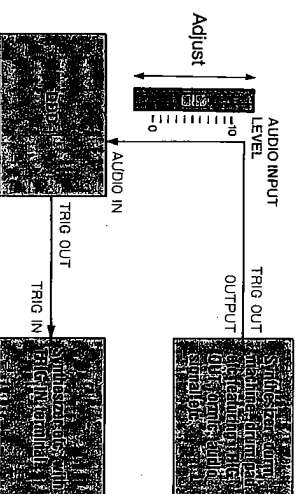

MIDI IMPLEMENTATION

3 SYSTEM EXCLUSIVE MESSAGES

NAME	AGE	RELATION
1 1 1 0 0 0 0	EXCLUSIVE STATUS	
0 1 0 0 0 0 1	KORG ID	42H
0 0 1 1 0 0 0 0	FORMAT ID	30H
0 0 0 1 0 0 1 0	DDO-1 ID	12H (NOTE 1)

07HJ

DATA 481

NOTE

DATE	DISPOSITION
1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 1 0	KORG ID 42 H
0 0 1 1 0 0 0 0	FORMAT ID 30 H
1 0 0 0 1 0 0 1 0	DDD-1 ID 12 H
1 0 0 0 0 0 1 0 0	SDD-1 ID 07 H (NOTE 1)

4FH
DOCK

- NOTE**
1. DDD-1 is transmitted when SDD-1 receives DATA_DUMP REQUEST during SAVE operation while set to the MIDI Function in the Data Transfer Mode.

JUSIVE STATUS	
ID	42H
AT ID	30H
ID	12H

2. RECOGNIZED RECEIVE DATA

1 CHANNEL MESSAGES

STATUS	SECOND	MIDB	DESCRIPTION
1 0 0 0 n n n n	0 k k k k k k k	0 x x x x x x x	Note Off (NOTE 1)
1 0 0 1 n n n n	0 k k k k k k k	0 0 0 0 0 0 0 0	Note Off (NOTE 1)
1 0 0 1 n n n n	0 k k k k k k k	0 v v v v v v v	Note On (NOTE 2)
			v v v v v v v = 1 ~ 127
1 1 0 0 n n n n	0 p p p p p p p	—	Program Change (NOTE 3)
1 0 1 1 n n n n	0 1 1 1 1 1 0 0	0 x x x x x x x	Omni Mode Off
1 0 1 1 n n n n	0 1 1 1 1 1 0 1	0 x x x x x x x	Omni Mode On

★ mmm = 0 ~ 15: Channel Numbers set via the MIDI Receive Function at OMNI MODE ON, all messages received regardless of setting. At OMNI MODE OFF, only set Channel Message is received. However, Channel Mode Messages receive set Channel Messages regardless of OMNI ON/OFF status.

NOTES

1. Recognized Note Off Note Numbers

k k k k k k k = 9 ~ 24 (SEQ DECAY)
k k k k k k k = 72 ~ 96 (SEQ TUNE)

★ kkk kkkk = 25 ~ 71 is ignored.

2. Recognized Note ON Note Numbers

k k k k k k k = 9 ~ 24 (SEQ DECAY)
k k k k k k k = 25 ~ 71 (INST KEY)
k k k k k k k = 72 ~ 96 (SEQ TUNE)

3. When a Program Change Message is received in the INST SETTING mode, instrument settings may be altered.
★ Program change Numbers outside of the range are ignored. Program change Numbers outside of the p p p p p p p = 0 ~ 5 range are ignored.

2 SYSTEM MESSAGES

STATUS	SECOND	MIDB	DESCRIPTION
1 1 1 1 0 0 0 0	0 1 0 0 0 0 1 0	0 x x x x x x x	Exclusive Messages (NOTE 1)
1 1 1 1 0 1 1 1	—	—	EOX (NOTE 1)
1 1 1 1 0 0 1 0	0 2 2 2 2 2 2 2	0 h h h h h h h	Song Position Pointer (NOTE 2)
1 1 1 1 0 0 1 1	0 s s s s s s s	—	Song Select (NOTE 2)
1 1 1 1 1 0 0 0	—	—	Timing Clock (NOTE 3)
1 1 1 1 1 0 1 0	—	—	Start
1 1 1 1 1 0 1 1	—	—	Continue
1 1 1 1 1 1 0 0	—	—	Stop

NOTES

1. Recognized when Data Transfer Mode is set to MIDI.

2. Recognized only when Song Select Function is set to STOP. Song Numbers outside the sss ssss = 0 ~ 9 range are ignored.

3. Recognized when Clock is set to MIDI.

3 SYSTEM EXCLUSIVE MESSAGES

1 DATA DUMP REQUEST

STATUS	DESCRIPTION
1 1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 0 1 0	KORG ID 42H
0 0 1 1 0 0 0 0	FORMAT ID 30H
0 0 0 1 0 0 1 0	DDO-I ID 12H
0 0 0 1 0 0 0 0	DATA DUMP REQUEST 10H
1 1 1 1 0 1 1 1	EOX

2SEQUENCE DATA

DATA	DESCRIPTION
1 1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 0 1 0	KORG ID 42H
0 0 1 1 0 0 0 0	FORMAT ID 30H
0 0 0 1 0 0 1 0	DDD-1 ID 12H (NOTE 1)
0 0 0 0 0 1 0 0	SOD-1 ID 07H
0 1 0 0 1 0 0 0	SEQUENCE DATA 48H
0 d d d d d d d d	DATA
0 d d d d d d d d	DATA
1 1 1 1 0 1 1 1	EOX

NOTE

1. SOD-1 ID transmitted when SAVE operation of "MIDI" function in the data transfer mode and DDD-1 ID transmitted when receives DATA DUMP REQUEST.

3DATA END BLOCK

DATA	DESCRIPTION
1 1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 0 1 0	KORG ID 42H
0 0 1 1 0 0 0 0	FORMAT ID 30H
0 0 0 1 0 0 1 0	DDD-1 ID 12H (NOTE 1)
0 0 0 0 0 1 0 0	SOD-1 ID 07H
0 1 0 0 1 1 1 1	DATA END BLOCK 4FH
1 1 1 1 0 1 1 1	EOX

NOTES

1. SOD-1 ID transmitted when SAVE operation of "MIDI" function in the data transfer mode and DDD-1 ID transmitted when receives DATA DUMP REQUEST.

4DATA DUMP ERROR

DATA	DESCRIPTION
1 1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 0 1 0	KORG ID 42H
0 0 1 1 0 0 0 0	FORMAT ID 30H
0 0 0 1 0 0 1 0	DDD-1 ID 12H
0 0 1 0 0 0 0 0	DATA DUMP ERROR 20H
1 1 1 1 0 1 1 1	EOX

5DEVICE ID REQUEST

DATA	DESCRIPTION
1 1 1 1 0 0 0 0	EXCLUSIVE STATUS
0 1 0 0 0 0 1 0	KORG ID 42H
0 1 0 0 0 0 0 0	FORMAT ID 40H
1 1 1 1 0 1 1 1	EOX

3. Using System Exclusive Messages

- The DDD-1 can transmit and receive the following types of information via System Exclusive Messages.

Transmitting

SEQUENCE DATA

: Refers to the Pattern, Song and Instrument Setting data stored in internal memory. This is sent as a series of 64-byte blocks, the number of which depends on the amount of data recorded in internal memory. When a SAVE is performed in the MIDI function of the DATA TRANSFER MODE, data including SQD-1 is sent. And, when a DATA DUMP REQUEST is received, data including DDD-1 ID is sent.

DATA END BLOCK

: Marks the end of SEQUENCE DATA transmission. This is sent after the last SEQUENCE DATA block is sent, or when the CANCEL key is pressed.

DEVICE ID

: Identifies equipment. Sent when a DEVICE ID REQUEST is received in the MIDI Function of the DATA TRANSFER MODE.

Receiving

DATA DUMP REQUEST

: A request to send SEQUENCE DATA. SEQUENCE DATA including DDD-1 ID is sent when a DATA DUMP REQUEST is received.

SEQUENCE DATA

: Pattern, Song and Instrument Setting data.

DATA END BLOCK

: Marks the end of SEQUENCE DATA transmission. Reception is terminated when this is received.

DATA DUMP ERROR

: Indicates that something has gone wrong on the receiving side during transmission of sequence DATA. If a DATA DUMP ERROR is received, then a "Error End" message will be displayed upon completion of data transmission.


DEVICE ID REQUEST

: A request to send the DEVICE ID. The DEVICE ID is sent when a DEVICE ID REQUEST is received.


- These messages can be used for data transmission between the SQD-1 and a computer equipped with a MIDI interface and software that handles these system exclusive messages. Setup examples are shown below.




1 Transmitting data to a SQD-1 (SAVE)

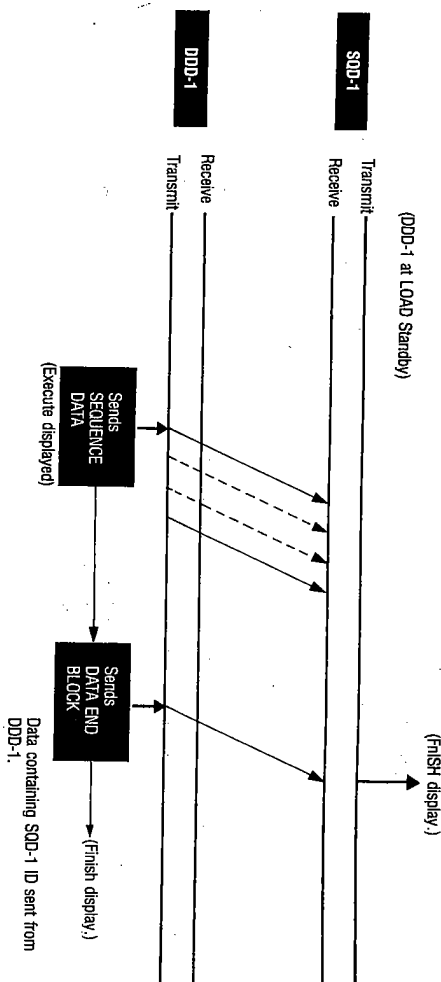


2 Receiving data from a SQD-1 (LOAD)

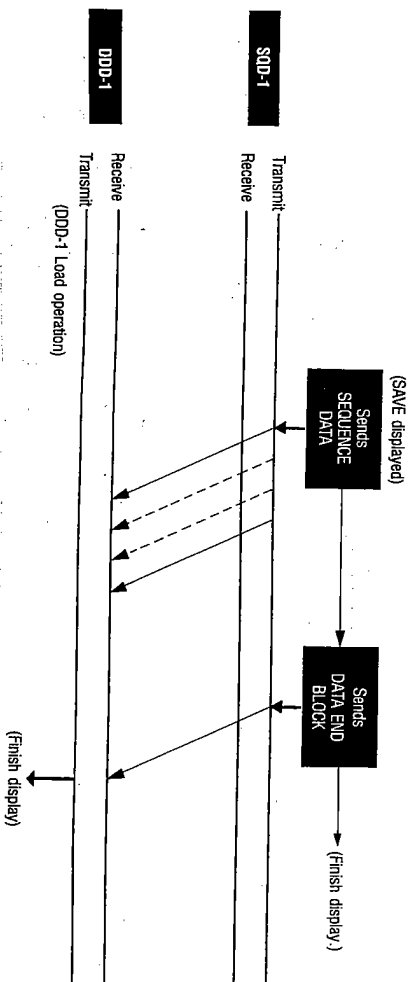


③ Transmitting data to a Computer (SAVE)

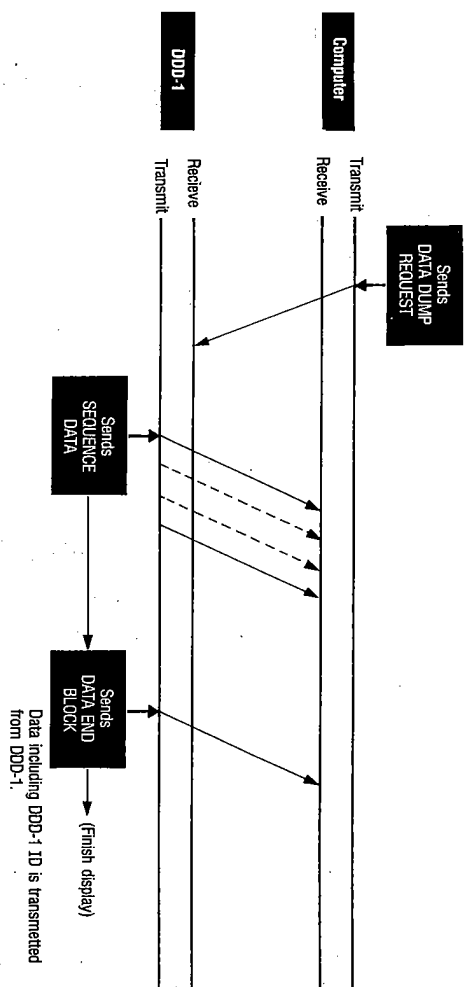


④ Receiving data from a Computer (LOAD)

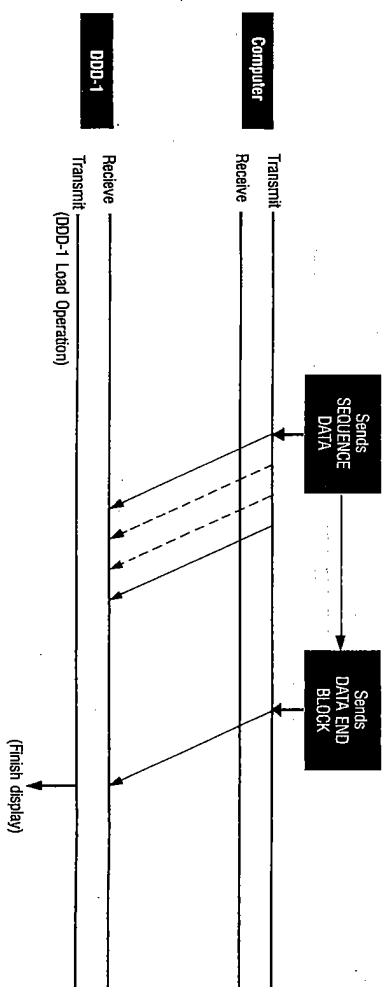

⑤ To find out what equipment is connected to a computer.

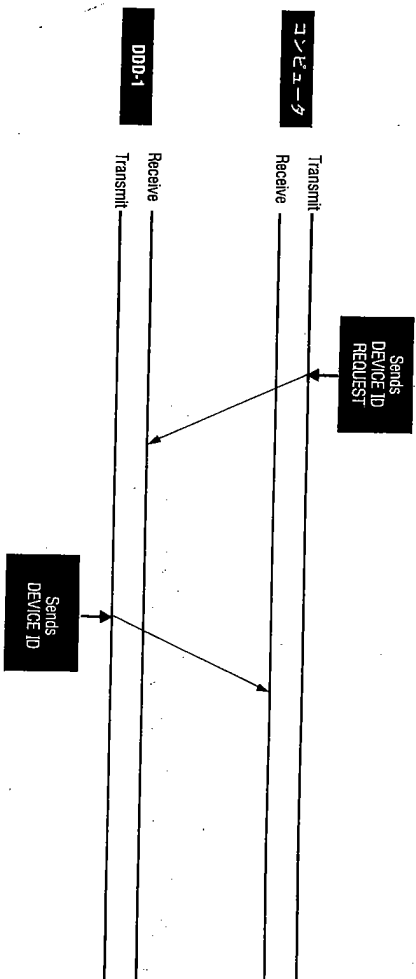

⑥ If a DATA DUMP ERROR is received during data transmission.

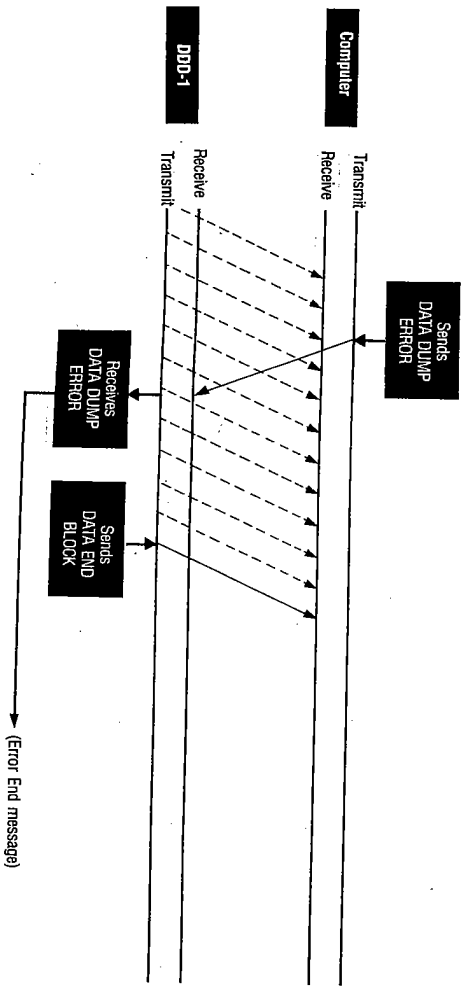

SYSTEM RESET

The system reset function is used to erase all PATTERN, SONG and INST SETTING data from the DDD-1 memory.
All parameters are reset to DEFAULT (initialized) values.

+1 YES and -1 NO
Hold down  and  power switch  ON

KORG DDD-1
System Reset !!

MAIN ERROR MESSAGES

MEMORY FULL !!
P01-01 : *PTN-01*

Pattern Memory becomes FULL during Real Time Recording (See pg. 52)

BAR MEMORY FULL!
P01-01 : *PTN-01*

249 notes are already in one Bar in Real Time recording (See pg. 52)

MEMORY FULL !!
P01-01 : 5008/008

Pattern Memory becomes FULL during Step Recording (See pg. 56)

BAR MEMORY FULL!
P01-01 : 5008/008

249 notes already in one Bar in Step Recording (See pg. 56)

Parameter Error!
PTN01+PTN02

Conditions not met to perform APPEND (See pg. 66)

MEMORY SHORTAGE!

COPY or APPEND impossible due to memory shortage (See pg. 70)

CREATE! *SONG-1*
PART01111 Error

Position set for REPEAT is incorrect (See pg. 76)

RAM CARD SAVE
Error End.

SAVE not performed correctly with RAM Card (See pg. 113)

RAM CARD VERIFY
Error End.

VERIFY not performed correctly with RAM Card (See pg. 114)

RAM CARD LOAD
Error End.

LOAD not performed correctly with RAM Card (See pg. 115)

TAPE VERIFY
Error End.

VERIFY not performed correctly with Cassette Tape (See pg. 122)

TAPE LOAD
Error End.

LOAD not performed correctly with Cassette Tape (See pg. 125)

ROM CARD DECK
Card1: Error.

An inappropriate ROM Card is set in unit (See pg. 130)

SPECIFICATION & OPTIONS

- Sound Sources
 - : 18 Internal sound sources including:
 - BASS DRUM x 2/SNARE DRUM x 2/TOM 1/TOM 2/TOM 3/FIRESHOT/CLOSED HIHAT x 2/OPEN HIHAT x 2/RIDE/CRASH/CLAPS/COW/BELL/TAMBOURINE/CABASA
 - Up to 4 ROM Cards, Sampling Board (options)
- Memory
 - : 100 PATTERNS (00 ~ 99) Max. Note Number 4400. 10 SONGS (0 ~ 9) Max. Part Number 255.
- Inst Settings
 - : Setting Select (0 ~ 5)/TOUCH SENS (0 ~ 9)/TOTAL TUNE (0 ~ 127)/TOTAL DECAY (0 ~ 15)/OUTPUT LEVEL (0 ~ 15)/OUTPUT ASSIGN/INST ASSIGN
- Pattern Modes
 - : PATTERN NUMBER OF BARS (1 ~ 99)/RESOLUTION (1/4, 1/8, 1/16, 1/32, 1/64, 1/128, 1/256, 1/512, 1/1024, 1/2048, 1/4096, 1/8192, 1/16384, 1/32768, 1/65536, 1/131072, 1/262144, 1/524288, 1/1048576, 1/2097152, 1/4194304, 1/8388608, 1/16777216, 1/33554432, 1/67108864, 1/134217728, 1/268435456, 1/536870912, 1/1073741824, 1/2147483648, 1/4294967296, 1/8589934592, 1/17179869184, 1/34359738368, 1/68719476736, 1/137438953472, 1/274877906944, 1/549755813888, 1/1099511627776, 1/2199023255552, 1/4398046511104, 1/8796093022208, 1/17592186044416, 1/35184372088832, 1/70368744177664, 1/140737488355328, 1/281474976710656, 1/562949953421312, 1/1125899906842624, 1/2251799813685248, 1/4503599627370496, 1/9007199254740992, 1/18014398509481984, 1/36028797018963968, 1/72057594037927936, 1/144115188075855872, 1/288230376151711744, 1/576460752303423488, 1/1152921504606846976, 1/2305843009213693952, 1/4611686018427387904, 1/9223372036854775808, 1/18446744073709551616, 1/36893488147419103232, 1/73786976294838206464, 1/147573952589676412928, 1/295147905179352825856, 1/590295810358705651712, 1/1180591620717411303424, 1/2361183241434822606848, 1/4722366482869645213696, 1/9444732965739290427392, 1/18889465931478580854784, 1/37778931862957161709568, 1/75557863725914323419136, 1/151115727451828646838272, 1/302231454903657293676544, 1/604462909807314587353088, 1/1208925819614629174706176, 1/2417851639229258349412352, 1/4835703278458516698824704, 1/9671406556917033397649408, 1/19342813113834066795298816, 1/38685626227668133590597632, 1/77371252455336267181195264, 1/154742504910672534362390528, 1/309485009821345068724781056, 1/618970019642690137449562112, 1/1237940039285380274899124224, 1/2475880078570760549798248448, 1/4951760157141521099596496896, 1/9903520314283042199192993792, 1/19807040628566084398385987584, 1/39614081257132168796771975168, 1/79228162514264337593543950336, 1/158456325028528675187087900672, 1/316912650057057350374175801344, 1/633825300114114700748351602688, 1/1267650600228229401496703205376, 1/2535301200456458802993406410752, 1/5070602400912917605986812821504, 1/10141204801825835211973625643008, 1/20282409603651670423947251286016, 1/40564819207303340847894502572032, 1/81129638414606681695789005144064, 1/162259276829213363391578010288128, 1/324518553658426726783156020576256, 1/649037107316853453566312041152512, 1/1298074214633706907132624082305024, 1/2596148429267413814265248164610048, 1/5192296858534827628530496329220096, 1/10384593717069655257060992658440192, 1/20769187434139310514121985316880384, 1/41538374868278621028243970633760768, 1/83076749736557242056487941267521536, 1/166153499473114484112975882535043072, 1/332306998946228968225951765070086144, 1/664613997892457936451903530140172288, 1/13292279957849158729038070602803456, 1/26584559915698317458076141205606912, 1/53169119831396634916152282411213824, 1/106338239662793269832304564822427648, 1/212676479325586539664609129644855296, 1/425352958651173079329218259289710592, 1/850705917302346158658436518579421184, 1/1701411834604692317316873037158842368, 1/3402823669209384634633746074317684736, 1/6805647338418769269267492148635369472, 1/13611294676837538538534984297270738944, 1/27222589353675077077069968594541477888, 1/54445178707350154154139937189082955776, 1/108890357414700308308279874378165911552, 1/217780714829400616616559748756331823104, 1/435561429658801233233119497512663646208, 1/871122859317602466466238995025327292416, 1/1742245718635204932932477990050654584832, 1/3484491437270409865864955980101309169664, 1/6968982874540819731729911960202618339328, 1/1393796574908163946345982392040523667856, 1/2787593149816327892691964784081047335712, 1/5575186299632655785383929568162094671424, 1/11150372599265311570767859136324189342848, 1/22300745198530623141535718272648378685696, 1/44601490397061246283071436545296757371392, 1/89202980794122492566142873090593514742784, 1/178405961588244985132285746181187029485568, 1/356811923176489970264571492362374058971136, 1/713623846352979940529142984724748117942272, 1/1427247692705959881058285969449496235884544, 1/2854495385411919762116571938898992471769088, 1/5708990770823839524233143877797984943538176, 1/11417981541647679048466287755595969887076352, 1/22835963083295358096932575511191939774152704, 1/45671926166590716193865151022383879548305408, 1/91343852333181432387730302044767759096610816, 1/182687704666362864775460604089535518193221632, 1/365375409332725729550921208179071036386443264, 1/730750818665451459101842416358142072772886528, 1/1461501637330902918203684832716284145545773056, 1/2923003274661805836407369665432568291091546112, 1/5846006549323611672814739330865136582183092224, 1/11692013098647223345629478661730273164366184448, 1/23384026197294446691258957323460546328732368896, 1/46768052394588893382517914646921092657464737792, 1/93536104789177786765035829293842185314929475584, 1/187072209578355573530071658587684370629858951168, 1/374144419156711147060143317175368741259717902336, 1/748288838313422294120286634350737482519435804672, 1/1496577676626844588240573268701474965038871609344, 1/2993155353253689176481146537402949930077743218688, 1/5986310706507378352962293074805899860155486437376, 1/11972621413014756705924586149611799720310972874752, 1/23945242826029513411849172299223599440621945749504, 1/47890485652059026823698344598447198881243891499008, 1/95780971304118053647396689196894397762487782998016, 1/191561942608236107294793378393788795524975565996032, 1/383123885216472214589586756787577591049951131992064, 1/766247770432944429179173513575155182099902263984128, 1/1532495540865888858358347027150310364199804527968256, 1/3064991081731777716716694054300620728399609055936512, 1/6129982163463555433433388108601241456799218111873024, 1/12259964326927110866866776217202482913598436223746048, 1/24519928653854221733733552434404965827196872447492096, 1/49039857307708443467467104868809931654393744894984192, 1/98079714615416886934934209737619863308787489789968384, 1/196159429228833773869868419475239726617574979579936768, 1/392318858457667547739736838950479453235149959159873536, 1/784637716915335095479473677900958906470299918319747072, 1/1569275433830670190958947355801917812940599836639494144, 1/3138550867661340381917894711603835625881199673278988288, 1/6277101735322680763835789423207671251762399346557976576, 1/12554203470645361527671578846415342503524798693115953152, 1/25108406941290723055343157692830685007049597386231906304, 1/50216813882581446110686315385661370014099194772463812608, 1/100433627765162892221372630771322740028198389544927625216, 1/200867255530325784442745261542645480056396779089855250432, 1/401734511060651568885490523085290960112793558179710500864, 1/803469022121303137770981046170581920225587116359421001728, 1/1606938044242606275541962092341163840451174232718842003456, 1/3213876088485212551083924184682327680902348465437684006912, 1/6427752176970425102167848369364655361804696930875368013824, 1/12855504353940850204335696738729310723609393861750736027648, 1/25711008707881700408671393477458621447218787723501472055296, 1/51422017415763400817342786954917242894437575447002944110592, 1/102844034831526801634685573909834485788875150894005888221184, 1/205688069663053603269371147819668971577750301788011776442368, 1/411376139326107206538742295639337943155500603576023552884736, 1/822752278652214413077484591278675886311001207152047105769472, 1/1645504573304428826154969182557351772622002414304094211538944, 1/3291009146608857652309938365114703545244004828608188423077888, 1/6582018293217715304619876730229407090488009657216376846155776, 1/13164036586435430609239753460458814180976019314432753692311552, 1/26328073172870861218479506920917628361952038628865507384623104, 1/52656146345741722436959013841835256723904077257731014769246208, 1/105312292691483444873918027683670513447808155155462029538492416, 1/210624585382966889747836055367341026895616310310924059076984832, 1/421249170765933779495672110734682053791232620621848118153969664, 1/842498341531867558991344221469364107582465241243696236307939328, 1/1684996683063735117982688442938728215164930482487392472615878656, 1/3369993366127470235965376885877456430329860964974784945231757312, 1/6739986732254940471930753771754912860659721929949569890463514624, 1/13479973464509880943861507543509825721319443859899139780927029248, 1/26959946929019761887723015087019651442638887719798279561854058496, 1/53919893858039523775446030174039302885277775439596559123708116992, 1/107839787716079047550892060348078605770555550879193118247416233984, 1/215679575432158095101784120696157211541111101758386236494832467968, 1/431359150864316190203568241392314423082222203516772472989664935936, 1/862718301728632380407136482784628846164444407033544945979329871872, 1/1725436603457264760814272965569257692328888814067089891958659743744, 1/3450873206914529521628545931138515384657777628134179783917319487488, 1/6901746413829059043257091862277030769315555256268359567834638974976, 1/13803492827658118086514183724554061538631110512536719135669277949952, 1/27606985655316236173028367449108122773262221025073438271338555899904, 1/55213971310632472346056734898216245546524442050146876542677111799808, 1/110427942621264944692113469796432491093048884100293753085354223599616, 1/220855885242529889384226939592864982186097768200587506170708447199232, 1/441711770485059778768453879185729964372195536401175012341416894398464, 1/883423540970119557536907758371459928744391072802350024682833788796928, 1/1766847081940239115073815516742919857488782145604700049365667577593856, 1/3533694163880478230147631033485839714977564291209400098731335155187712, 1/7067388327760956460295262066971679429955128582418800197462670310375424, 1/14134776655521912920590524133943358859910257164837600394925340620750848, 1/28269553311043825841181048267886717719820514329675200789850681241501696, 1/56539106622087651682362096535773435439641028659350401579701362483003392, 1/113078213244175303364724193071546870879282057318700803159402724966006784, 1/226156426488350606729448386143093741758564114637401606318805449932013568, 1/452312852976701213458896772286187483517128229274803212637610899864027136, 1/904625705953402426917793544572374967034256458549606425275221799728054272, 1/1809251411906804853835587089144749934068512917099212850550443599456108544, 1/3618502823813609707671174178289499868137025834198425701100887198912217088, 1/72370056476272194153423483565789997362740516683968514022017743978244

KORG[®] **KORG INC.**

15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo, Japan.

©KORG INC. 1986 6107 ATH Printed in Japan