

**SETTING CHARTS
EINSTELLDIAGRAMME
TABLEAUX DE PROGRAMMATION
セッティングチャート**

1 Brass

Adjust the AMPLITUDE and OSCILLATE controls to suit the sound. For an increased attack, set the attack rate to a higher value.

Adjust the OSCILLATE control to suit the sound. For an increased attack, set the attack rate to a higher value.

2 Electric piano

For more tone color variations, use the JOYSTICK control.

For the electric piano, adjust the JOYSTICK control to suit the sound.

3 Jazz & rock organ

For a more electric organ sound, use the JOYSTICK control.

For electric organ, use the JOYSTICK control to suit the sound.

4 Metallic synthesizer sound

For rich and expressive, use the JOYSTICK control.

For rich and expressive, use the JOYSTICK control.

5 Funky wah synthesizer

For a more electric organ sound, use the JOYSTICK control.

For a more electric organ sound, use the JOYSTICK control.

KORG DELTA

FM DEPTH (0-10) **SG** (ON/OFF) **JOYSTICK**

AM DEPTH (0-10) **VCF** (ON/OFF)

VIBRATO DEPTH (0-10) **SPEED** (0-10) **MG**

TUNE (0-10) **OCTAVE** (UP/DOWN)

SIGNAL GENERATORS (5 sliders) **SHIFT MODE** (ON/OFF)

ATTACK (0-10) **DECAY** (0-10) **RELEASE** (0-10) **ENVELOPE GENERATOR**

CUTOFF FREQUENCY (0-10) **VOLTAGE CONTROLLED FILTER**

RESONANCE (0-10) **EG DEPTH** (0-10) **BANDPASS** (ON/OFF) **FILTER MODE** (ON/OFF) **KID FOLLOWER** (ON/OFF)

STRINGS (3 knobs) **EQUALIZER** (LOW/MID/HIGH) **TRIGGER MODE** (SINGLE/MULTIPLE)

SYNTHESIZER (5 sliders) **TRIGGER MODE** (SINGLE/MULTIPLE) **VCA EG MODE** (ON/OFF)

STRINGS (3 knobs) **OCT BALANCE** (0-10) **ATTACK** (0-10) **RELEASE** (0-10)

POWER OFF (0-10) **VOLUME**

WESTB. PRINTED IN JAPAN