


On the following two pictures you see 3 extra pots for filter, resonace and gain.



Remove trimmer pots P6, 7 and 3. Solder wires to the empty solder points and connect the other side to the external potmeters.

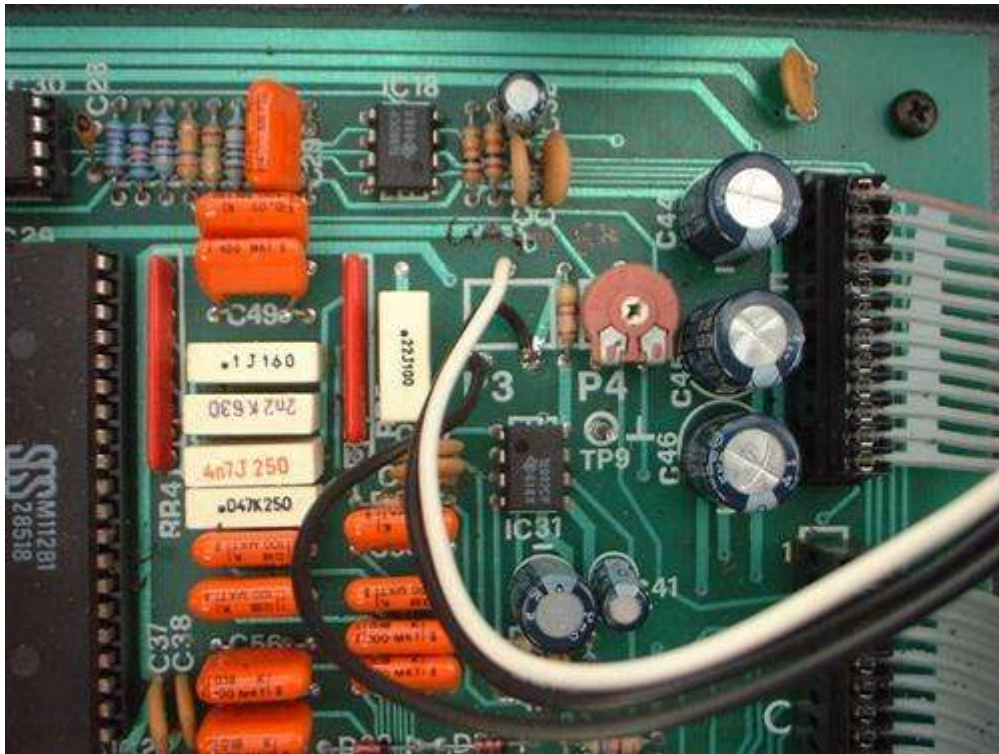

Replace the trimmers as follow:

P7 - Resonance - 50k lin pot

P6 - Filter - 100k lin pot

P3 - gain - 5k log pot